

STIGA

 
PARK RESIDENCE 4WD (2009)

13-6199-15

Spare parts list Reservdelar Repuestos Ersatzteile Pièces détachées Reserve onderdelen Catalogo ricambi


- Use ST. S.p.A. Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative And might Not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair And/Or replacement, make sure that the illustrated parts list Is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

All rights reserved. No part Of this material may be reproduced Or transmitted, in any form Or by any means, electronic Or mechanical, including photocopying, recording Or by any information storage And retrieval system, without permission in writing from ST. S.p.A.

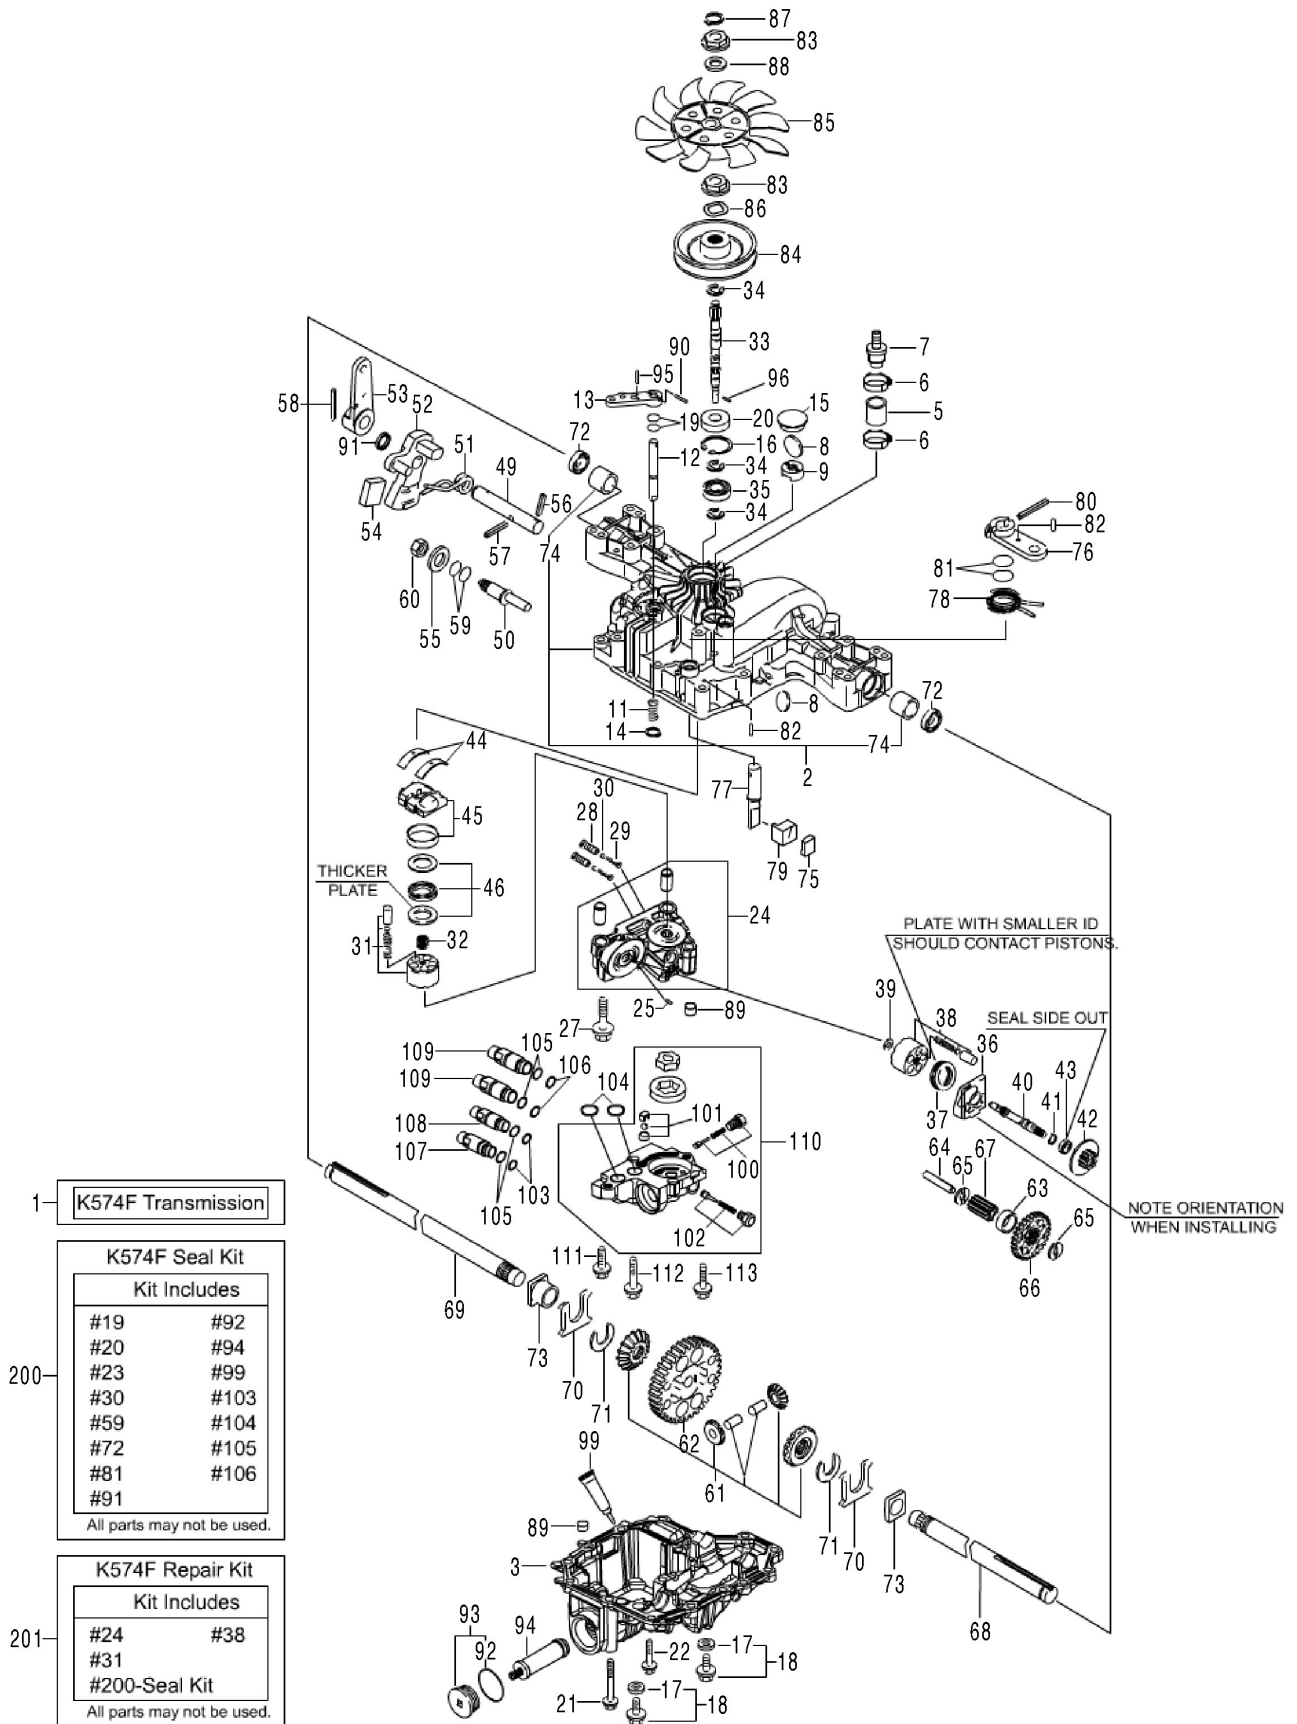


Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-6129-01	Transaxle (K574F, 4-Port)	Kanzaki K574F/574F		
2	1	1139-1470-01	Housing-Upper	Pos 74 incl.		
3	1	1139-1456-01	Housing-Lower	/574F		
5	1	1139-1301-01	Tube	/574F		
6	2	1139-1336-01	Cobra Clip	/574F		
7	1	1139-1306-01	Adaptor	/574F		
8	2	1139-1150-01	Magnet	/574F		
9	1	1139-1341-01	Magnet Holder	/574F		
11	1	1139-1347-01	Spring	/574F		
12	1	1139-1251-01	By-Pass Shaft	/574F		
13	1	1139-1189-01	By-Pass Lever	/574F		
14	1	1139-1161-01	Ring	/574F		
15	1	1139-1735-01	Bore Plug	/574F		
16	1	1139-1104-01	Snap Ring	/574F		
17	2	1139-1103-01	Washer	/574F		
18	2	1139-1123-01	Bolt	Inkl. pos 17/574F		
18	2	1139-1500-01	Drain Bolt Kit	Pos 17 incl.		
20	1	1139-1119-01	Seal 15*35*7	/574F		
21	4	1139-1473-01	Bolt	/574F		
22	12	1139-0244-01	Screw	/574F		
24	1	1139-1465-01	Center Case	/574F		
25	1	1139-1158-01	Pin	/574F		
27	2	1139-1294-01	Bolt	/574F		
28	2	1139-1468-01	Ids Valve	/574F		
29	2	1139-1243-01	Spring	/574F		
30	2	1139-1307-01	Filter	/574F		
31	1	1139-1356-01	Cylinder Block Kit	/574F		
32	1	1139-1245-01	Pump Spring	/574F		
33	1	1139-1466-01	Pump Shaft	/574F		
33	1	1139-1528-01	Pump Shaft Kit	/574F		
34	3	1139-1146-01	Ring	/574F		
35	1	1139-1110-01	Ball Bearing	/574F		
36	1	1139-1458-01	Housing	/574F		
37	1	1139-1438-01	Bearing	/574F		
38	1	1139-1454-01	Cylinder Block	/574F		
39	1	1139-1160-01	Washer	/574F		
40	1	1139-1353-01	Motor Shaft	/574F		
41	1	1139-1021-01	Snap Ring	/574F		
42	1	1139-1272-01	Motor Gear	/574F		
43	1	1139-1453-01	Bearing	/574F		
44	2	1139-1066-01	Use 1139-1141-01	/574F		
45	1	1139-1067-01	Swash Plate Assy	/574F		
45	1	1139-1597-01	Swash Plate	/574F		
46	1	1139-1068-01	Bearing	/574F		
46	1	1139-1508-01	Thrust Bearing Kit	/574F		
49	1	1139-1354-01	Control Shaft	/574F		
50	1	1139-1410-01	Fulcrum	/574F		
51	1	1139-1312-01	Torsion Spring	/574F		

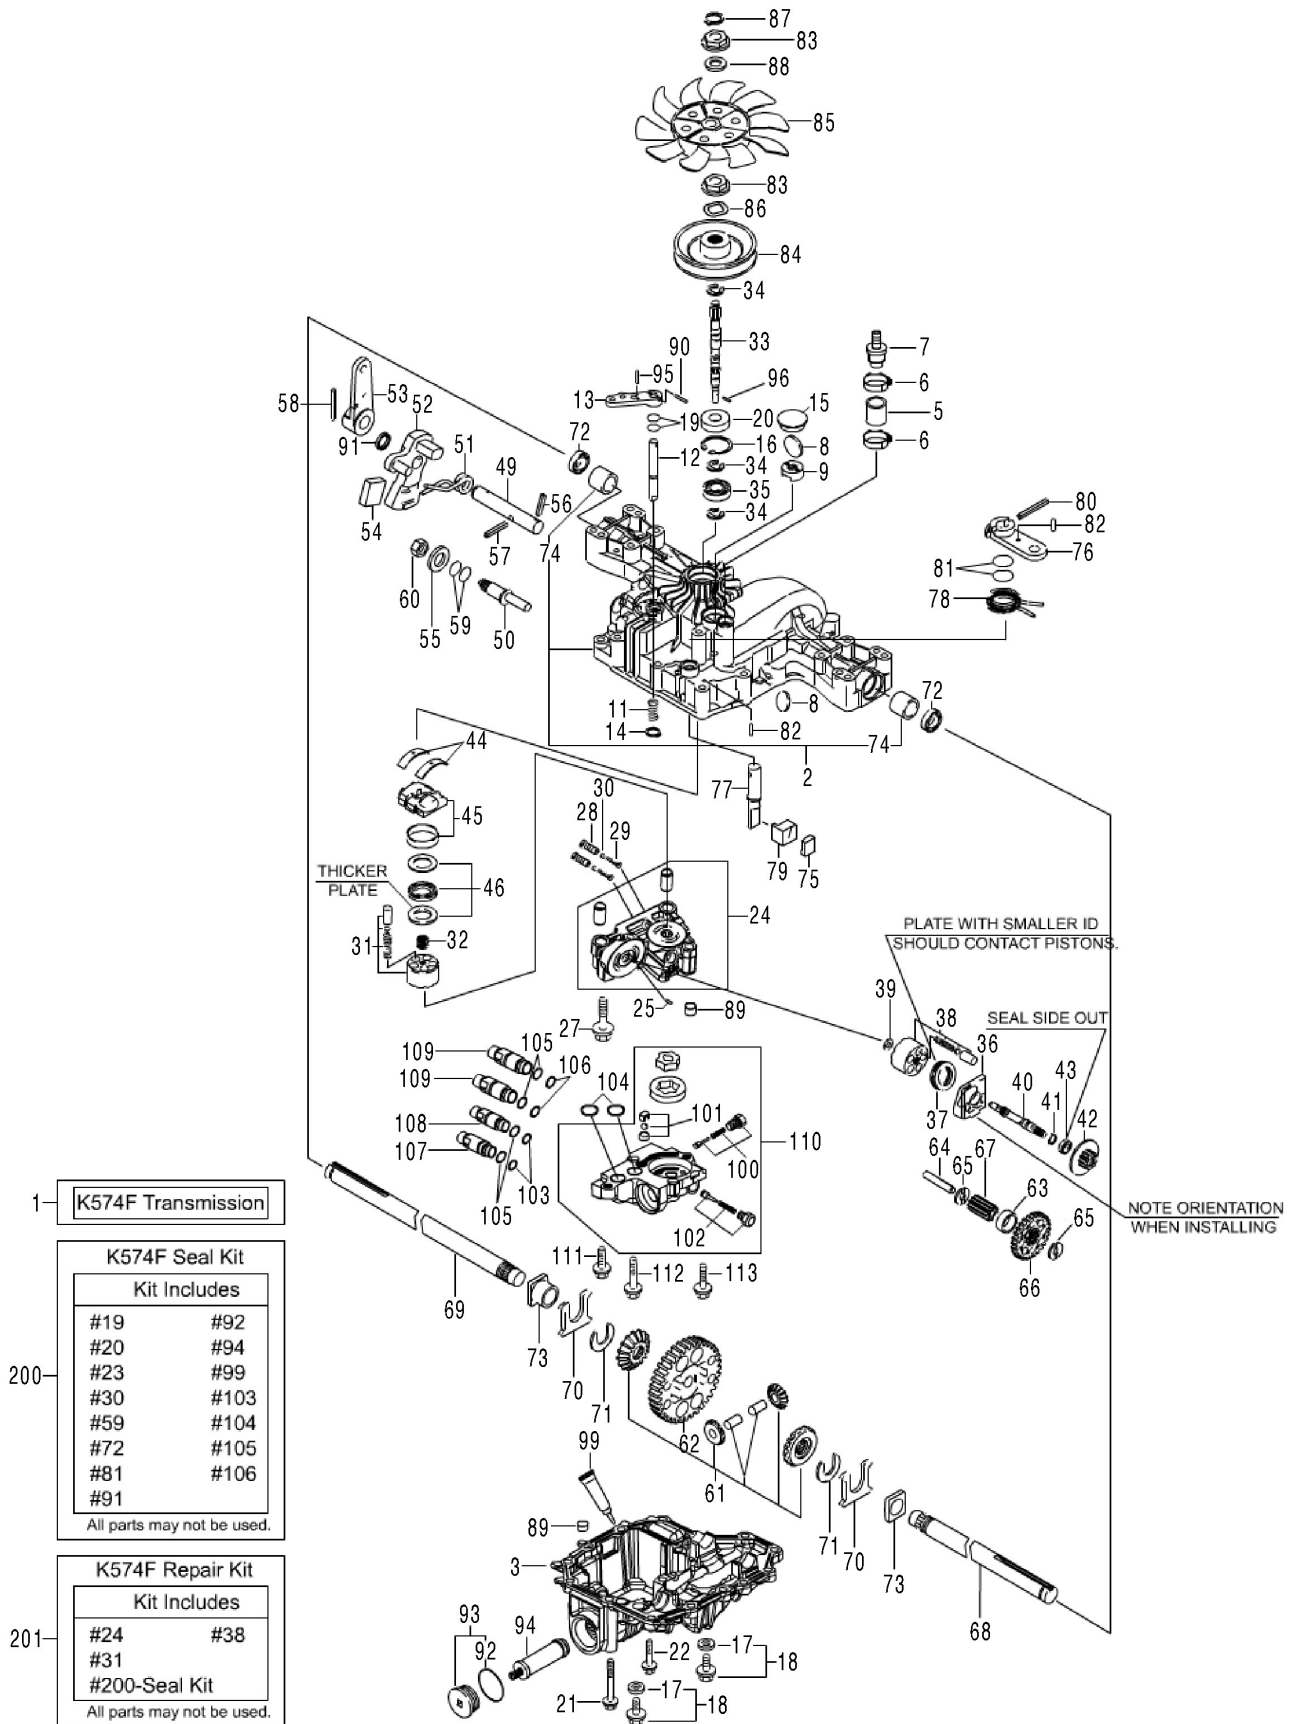 


Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
52	1	1139-1409-01	Lever	/574F		
53	1	1139-1325-01	Control Lever	/574F		
54	1	1139-1408-01	Jerky Plate	/574F		
54	1	1139-1596-01	Jerky Plate	/574F		
55	1	1139-1102-01	Washer	/574F		
56	1	1139-1355-01	Cotter Pin	/574F		
57	1	1139-1329-01	Pin	/574F		
58	1	1139-1285-01	Pin	/574F		
60	1	1139-1127-01	Nut	/574F		
61	1	1139-1404-01	Diff.Gear Kit	/574F		
62	1	1139-1258-01	Final Gear	/574F		
63	1	1139-1255-01	Collar	/574F		
64	1	1139-1256-01	Reduction Shaft	/574F		
65	2	1139-1398-01	Washer	/574F		
66	1	1139-1267-01	Reduction Gear	/574F		
67	1	1139-1361-01	Final Pinion Gear	/574F		
68	1	1139-1344-01	Axle Shaft-L	/574F		
69	1	1139-1345-01	Axle Shaft-R	/574F		
70	2	1139-1078-01	Thrust Washer	/574F		
71	2	1139-1163-01	Ring	/574F		
72	2	1139-1080-01	Seal 19*32*8	/574F		
73	2	1139-1164-01	Bushing	/574F		
74	2	1139-1414-01	Bushing	/574F		
75	1	1139-1260-01	Brake Shoe	/574F		
76	1	1139-1261-01	Brake Arm	/574F		
77	1	1139-1320-01	Brake Shaft	/574F		
78	1	1139-1411-01	Return Spring	/574F		
79	1	1139-1264-01	Brake Actuator	/574F		
80	1	1139-1282-01	Pin	/574F		
82	2	1139-1281-01	Pin	/574F		
83	2	1139-1248-01	Spline Collar	/574F		
84	1	1139-1469-01	Pulley	/574F		
85	1	1134-4190-01	Fan	/574F		
86	1	1139-1266-01	Washer	/574F		
87	1	1139-1149-01	Snap Ring	/574F		
88	1	1139-1276-01	Collar	/574F		
89	4	1139-1166-01	Pin	/574F		
90	1	1139-1280-01	Pin	/574F		
91	1	1139-1303-01	Seal Ring	/574F		
92	1	1139-1290-01	Packing	/574F		
92	1	1139-1534-01	O-Ring	/574F		
93	1	1139-1230-01	Cap	Inkl. pos 92/574F		
93	1	1139-1510-01	Cap Kit	Pos 92 incl.		
94	1	1139-1186-01	Filter	/574F		
95	1	1139-1279-01	Pin	/574F		
96	1	1139-1148-01	Pin	/574F		
96	1	1139-1452-01	Pin	/574F		
99	1	1139-1443-01	Sealant (Tube)	/574F		

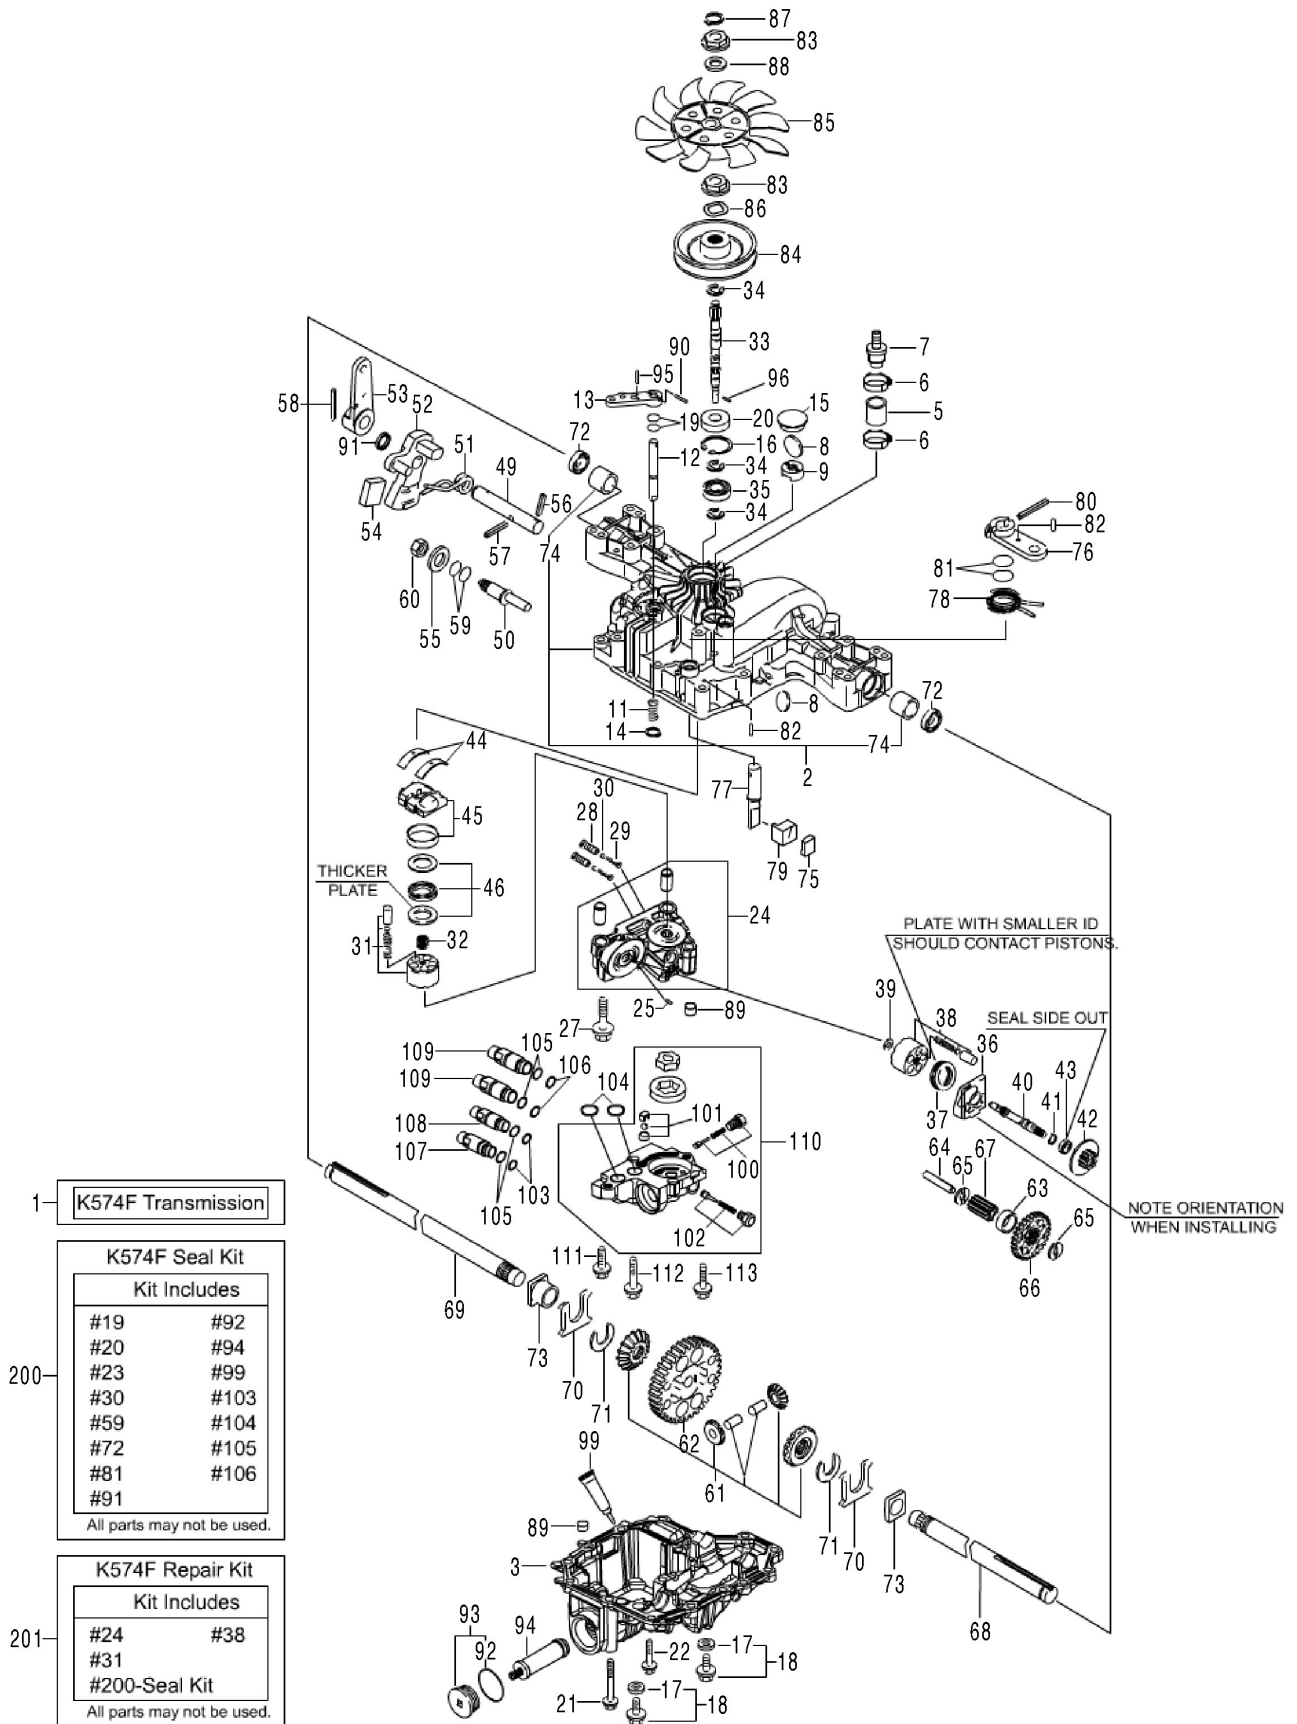 

Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
100	1	1139-1462-01	Valve	/574F		
101	1	1139-1234-01	Check Cmp	/574F		
102	1	1139-1463-01	Valve	/574F		
105	1	1139-0239-01	Packing	/574F		
106	2	1139-1168-01	Packing	/574F		
107	1	1139-1459-01	Piping	/574F		
108	1	1139-1460-01	Piping	/574F		
109	2	1139-1464-01	Connector	/574F		
110	1	1139-1482-01	Pump Case	Inkl. pos 101 - 102/574F		
110	1	1139-1526-01	Pump Case Kit	Inkl. pos 101 - 102/574F		
111	1	1139-1472-01	Bolt	/574F		
112	1	1139-1455-01	Screw	/574F		
113	1	1139-1471-01	Bolt	/574F		
200	1	1139-1481-01	Seal Kit	/574F		
201	1	1139-1527-01	Repair Kit	/574F		

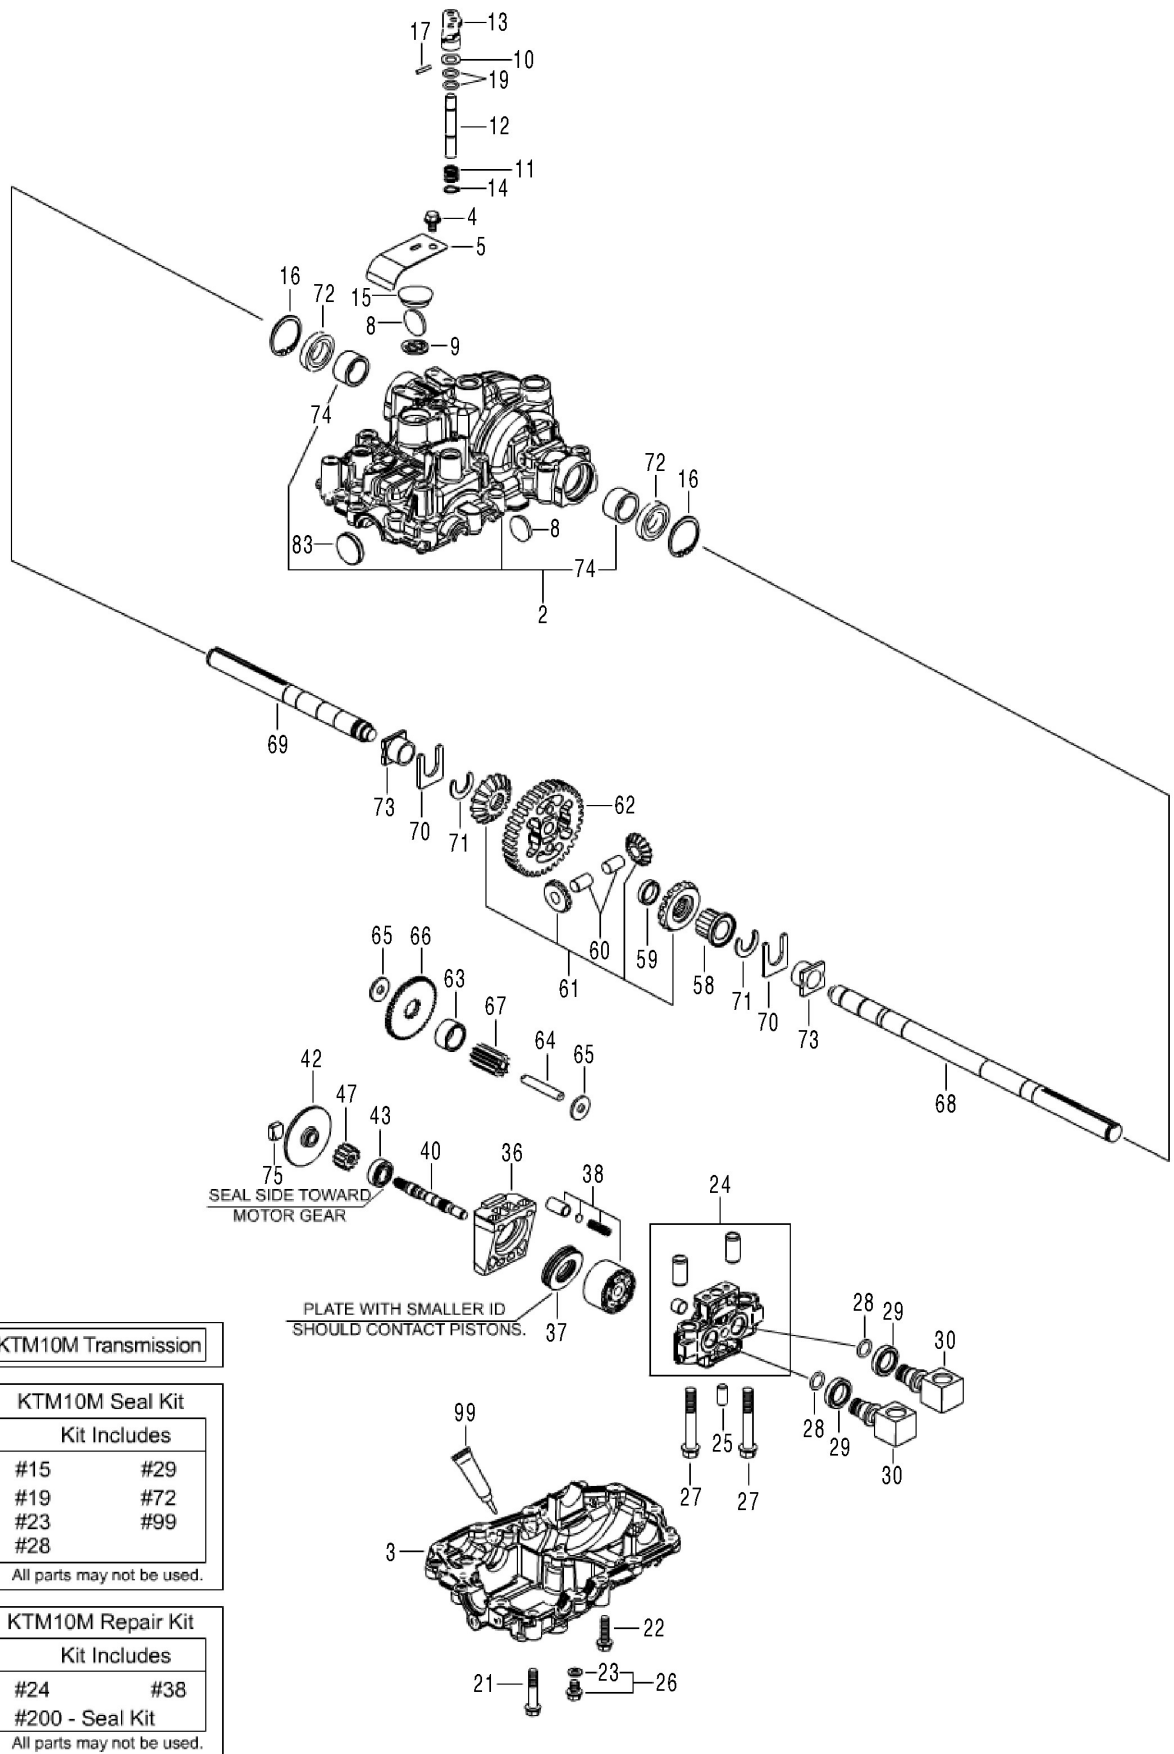 

1- **KTM10M Transmission**

KTM10M Seal Kit

Kit Includes

- | | |
|-----|-----|
| #15 | #29 |
| #19 | #72 |
| #23 | #99 |
| #28 | |

All parts may not be used.

KTM10M Repair Kit


Kit Includes

- | | |
|-----------------|-----|
| #24 | #38 |
| #200 - Seal Kit | |

All parts may not be used.


Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-6029-01	Front Motor Unit (Ktm10M)	Kanzaki KTM 10M/KTM10M/		
2	1	1139-1417-01	Housing-Upper	Pos 74 incl./KTM10M/		
2	1	1139-1604-01	Housing Assy-Upper	Pos 74 incl.		
3	1	1139-1418-01	Housing-Lower	/KTM10M/		
4	1	1139-1123-01	Bolt	/KTM10M/		
5	1	1139-1384-01	Skid Plate	/KTM10M/		
5	1	1139-1603-01	Skid Plate			
8	2	1139-1150-01	Magnet			
9	1	1139-1341-01	Magnet Holder	/KTM10M/		
10	1	1139-1388-01	Washer	/KTM10M/		
11	1	1139-1421-01	Spring	/KTM10M/		
12	1	1139-1420-01	By-Pass Shaft	/KTM10M/		
13	1	1139-1189-01	By-Pass Lever	/KTM10M/		
14	1	1139-1391-01	Ring	/KTM10M/		
15	1	1139-1397-01	Sealing Cap	/KTM10M/		
15	1	1139-1735-01	Bore Plug			
16	2	1139-1444-01	Ring			
17	1	1139-1280-01	Pin	/KTM10M/		
19	2	1139-1114-01	O-Ring			
21	3	1139-1291-01	Bolt			
22	11	1139-1448-01	Bolt			
23	1	1139-1103-01	Washer	/KTM10M/		
24	1	1139-1419-01	Center Case	/KTM10M/		
24	1	1139-1503-01	Center Case	/KTM10M/		
24	1	1139-1723-01	Center Case Assy			
25	1	1139-1445-01	Pin	/KTM10M/		
26	1	1139-1500-01	Drain Bolt Kit	/KTM10M/		
27	2	1139-1449-01	Bolt			
28	2	1139-1446-01	Packing			
29	2	1139-1447-01	Seal			
30	2	1139-1424-01	Connector			
36	1	1139-1422-01	Housing	/KTM10M/		
36	1	1139-1504-01	Motor Housing	/KTM10M/		
37	1	1139-1438-01	Bearing	/KTM10M/		
38	1	1139-1139-01	Cylinder Block Assy	/KTM10M/		
38	1	1139-1509-01	Cylinder Block Kit	/KTM10M/		
40	1	1139-1425-01	Motor Shaft	/KTM10M/		
42	1	1139-1451-01	Brake Disc	/KTM10M/		
43	1	1139-1453-01	Bearing	/KTM10M/		
47	1	1139-1426-01	Motor Gear	/KTM10M/		
58	1	1139-1330-01	Collar	/KTM10M/		
59	1	1139-1435-01	Collar, Axle	/KTM10M/		
60	1	1139-1440-01	Pin	/KTM10M/		
61	1	1139-1439-01	Differential Gear Kit	/KTM10M/		
62	1	1139-1429-01	Final Gear	/KTM10M/		
63	1	1139-1427-01	Collar	/KTM10M/		
64	1	1139-1256-01	Reduction Shaft	/KTM10M/		
65	2	1139-1398-01	Washer			

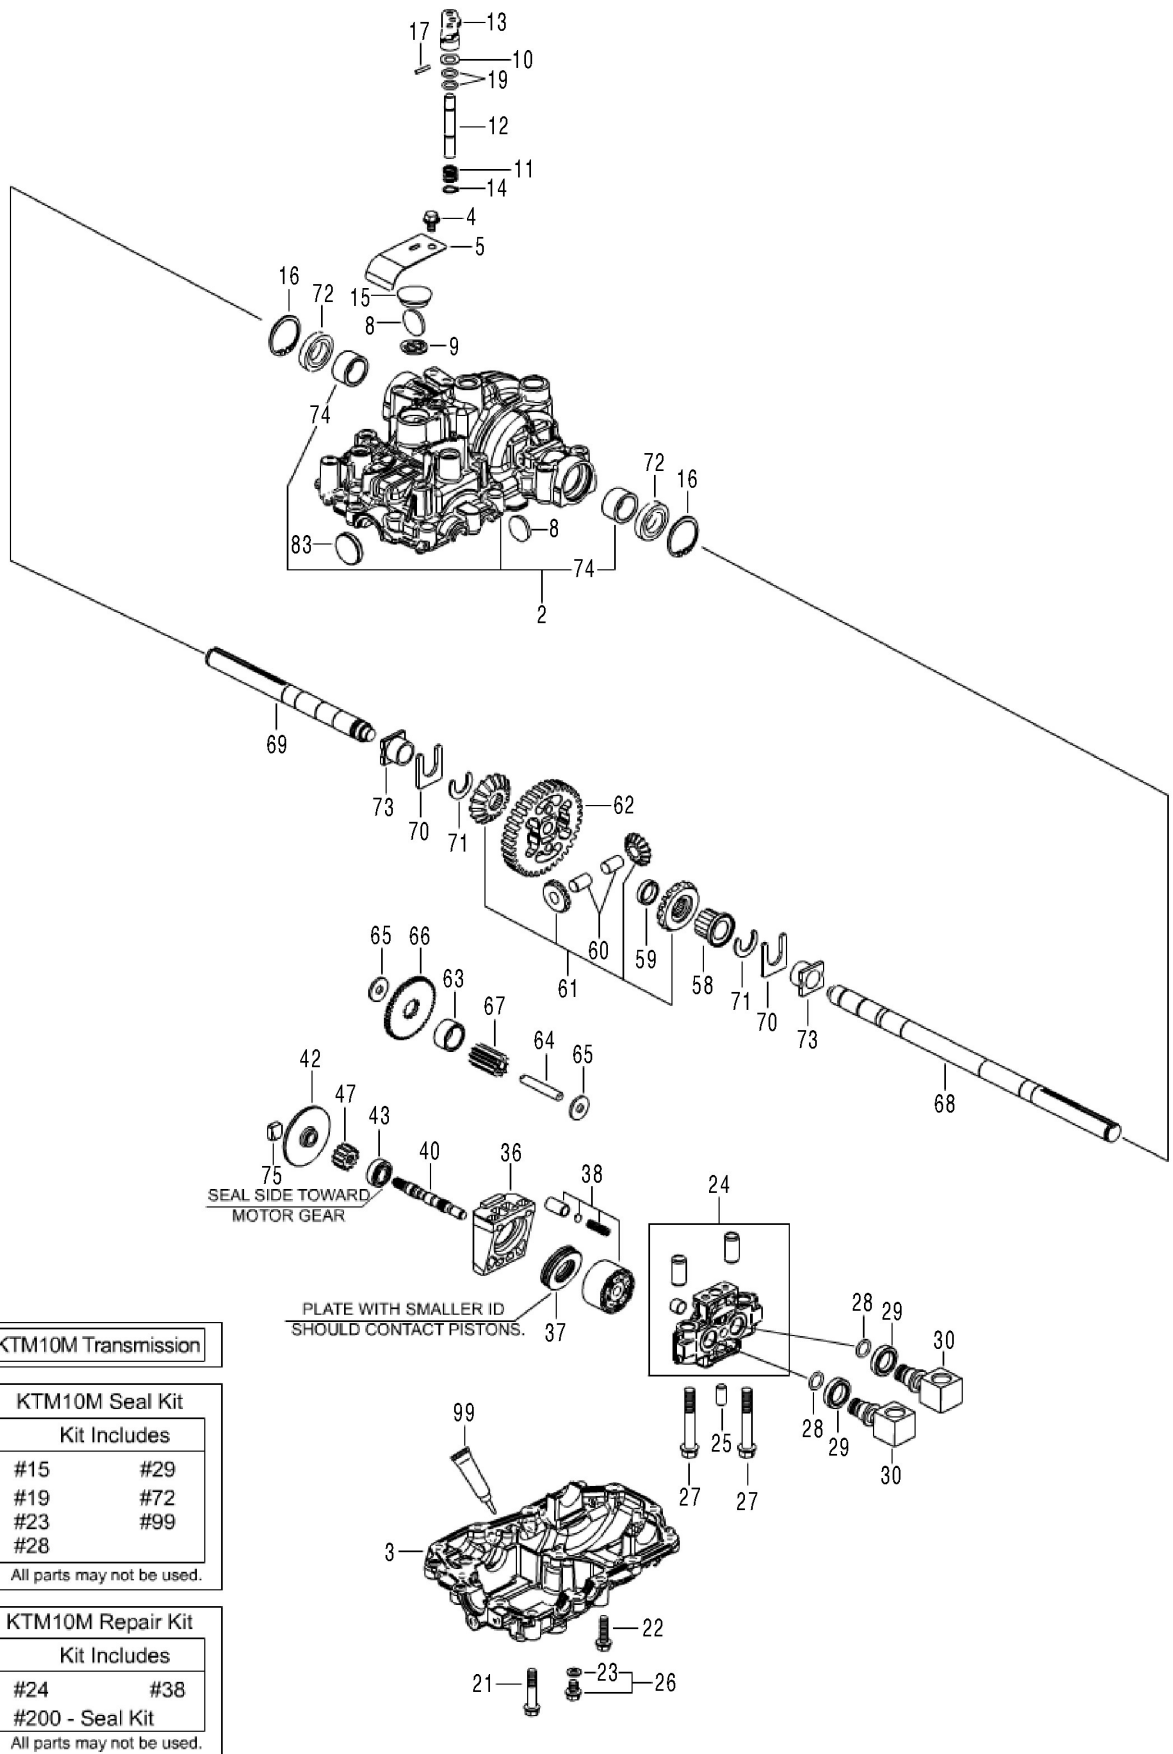 





Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
66	1	1139-1430-01	Reduction Gear	/KTM10M/		
67	1	1139-1361-01	Final Pinion Gear	/KTM10M/		
68	1	1139-1432-01	Axle	/KTM10M/		
69	1	1139-1431-01	Axle	/KTM10M/		
70	2	1139-1194-01	Thrust Washer			
71	2	1139-1155-01	Ring			
72	2	1139-1044-01	Seal 25.4*42*8			
73	2	1139-1156-01	Bushing			
74	2	1139-1415-01	Bushing			
75	1	1139-1260-01	Brake Shoe	/KTM10M/		
83	1	1139-1450-01	Sealing Cap	/KTM10M/		
99	1	1139-1443-01	Sealant (Tube)	/KTM10M/		
200	1	1139-1436-01	Seal Kit	/KTM10M/		

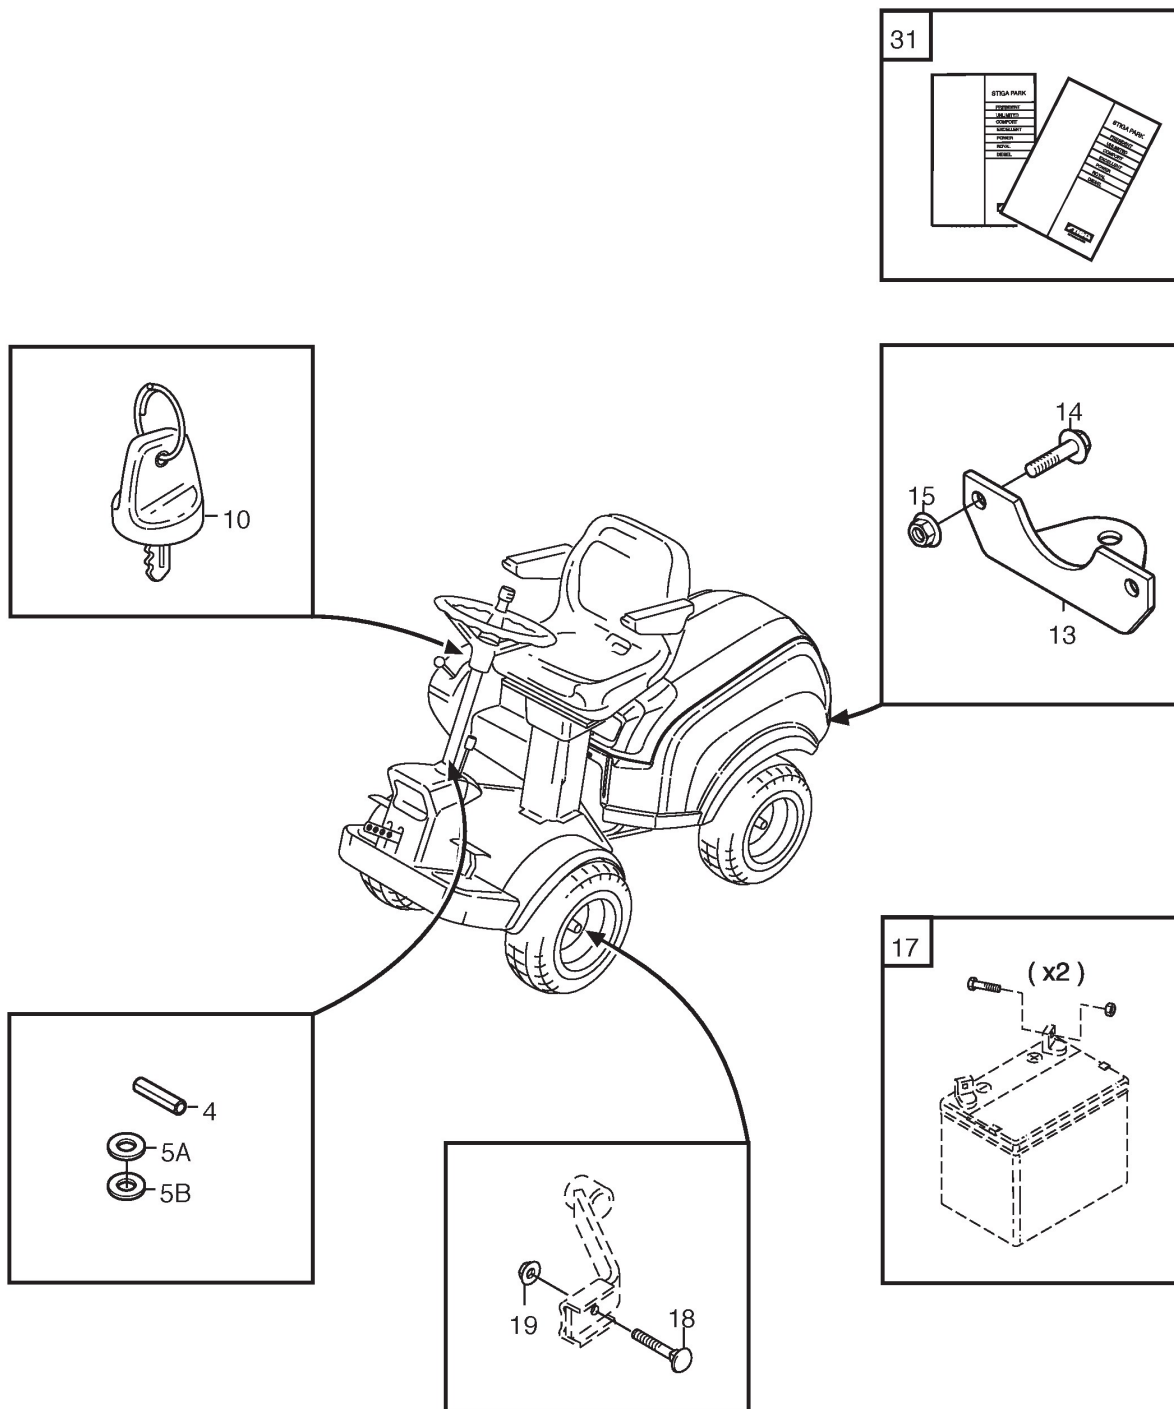 


Assembly parts

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
4	1	9595-0262-00	Locating Pin			
5	1	9699-0103-02	Washer	0.5 mm		
5	1	9699-0114-02	Washer	1.0 mm		
10	2	1134-4734-01	Ignition Key			
13	1	1134-5512-01	Towing Plate			
14	2	9959-0820-16	Screw			
15	2	9739-0831-22	Nut			
17	1	1134-6113-02	Screw			
18	2	9898-1035-16	Screw			
19	2	9739-1031-22	Nut			
31	1	8211-0043-90	Owner's Manual			

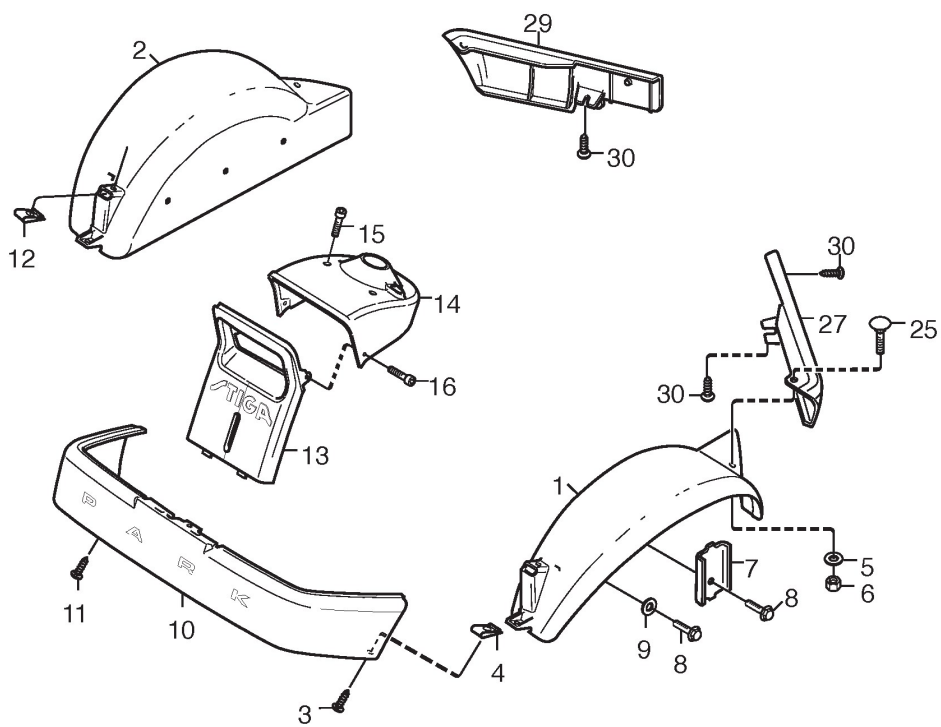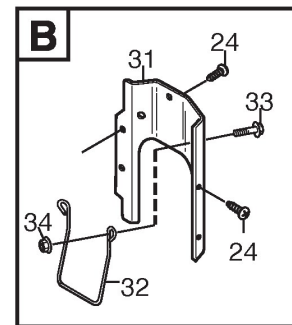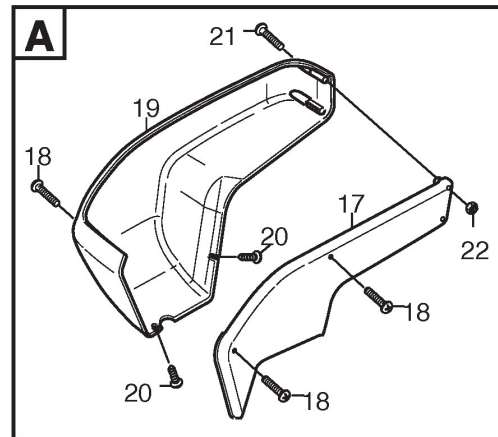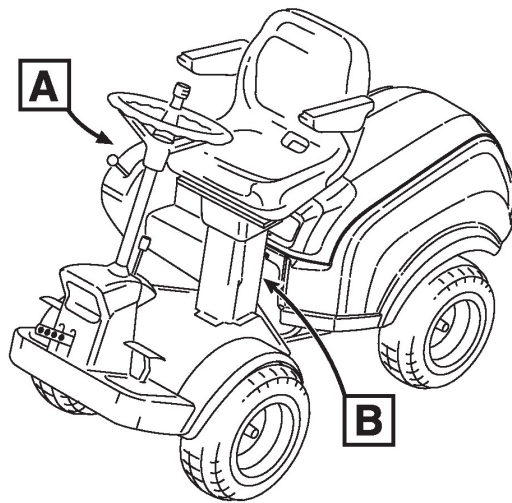    


Body work

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-3943-01	Mud Guard-Left			
2	1	1134-3943-02	Mud Guard-Right			
3	2	9893-0616-16	Screw			
4	4	1134-4176-01	Clips			
5	2	9699-0060-02	Washer			
6	2	9747-0631-02	Lock Nut			
7	2	1134-0225-00	Support Plate			
8	6	9945-0816-16	Screw			
9	4	9699-0056-02	Washer			
10	1	1134-4220-02	Front Bumper			
11	6	9893-0616-16	Screw			
12	2	1134-4176-01	Clips			
13	1	1134-4216-05	Front Plate-Yellow (W/O Hole)			
14	1	1134-3984-03	Upper Front Plate-Yellow			
15	2	9946-0525-16	Screw			
16	2	9840-8013-16	Screw			
17	1	1134-4360-01	Cover-Inner			
18	3	9946-0525-16	Screw			
19	1	1134-3979-01	Cover-Outer			
20	2	9840-8013-16	Screw			
21	2	9950-0570-12	Screw			
22	2	9747-0531-02	Nut			
24	4	9893-0616-16	Screw			
25	2	9897-0616-16	Screw			
27	1	1134-3970-05	Moulding-Left (Grey)			
29	1	1134-3970-02	Moulding Right-Grey			
30	4	9893-0616-16	Screw			
31	1	1134-6461-01	Rear Plate			
32	1	1134-6460-01	Protective Loop			
33	2	9959-0820-16	Screw			
34	2	9739-0831-22	Nut			

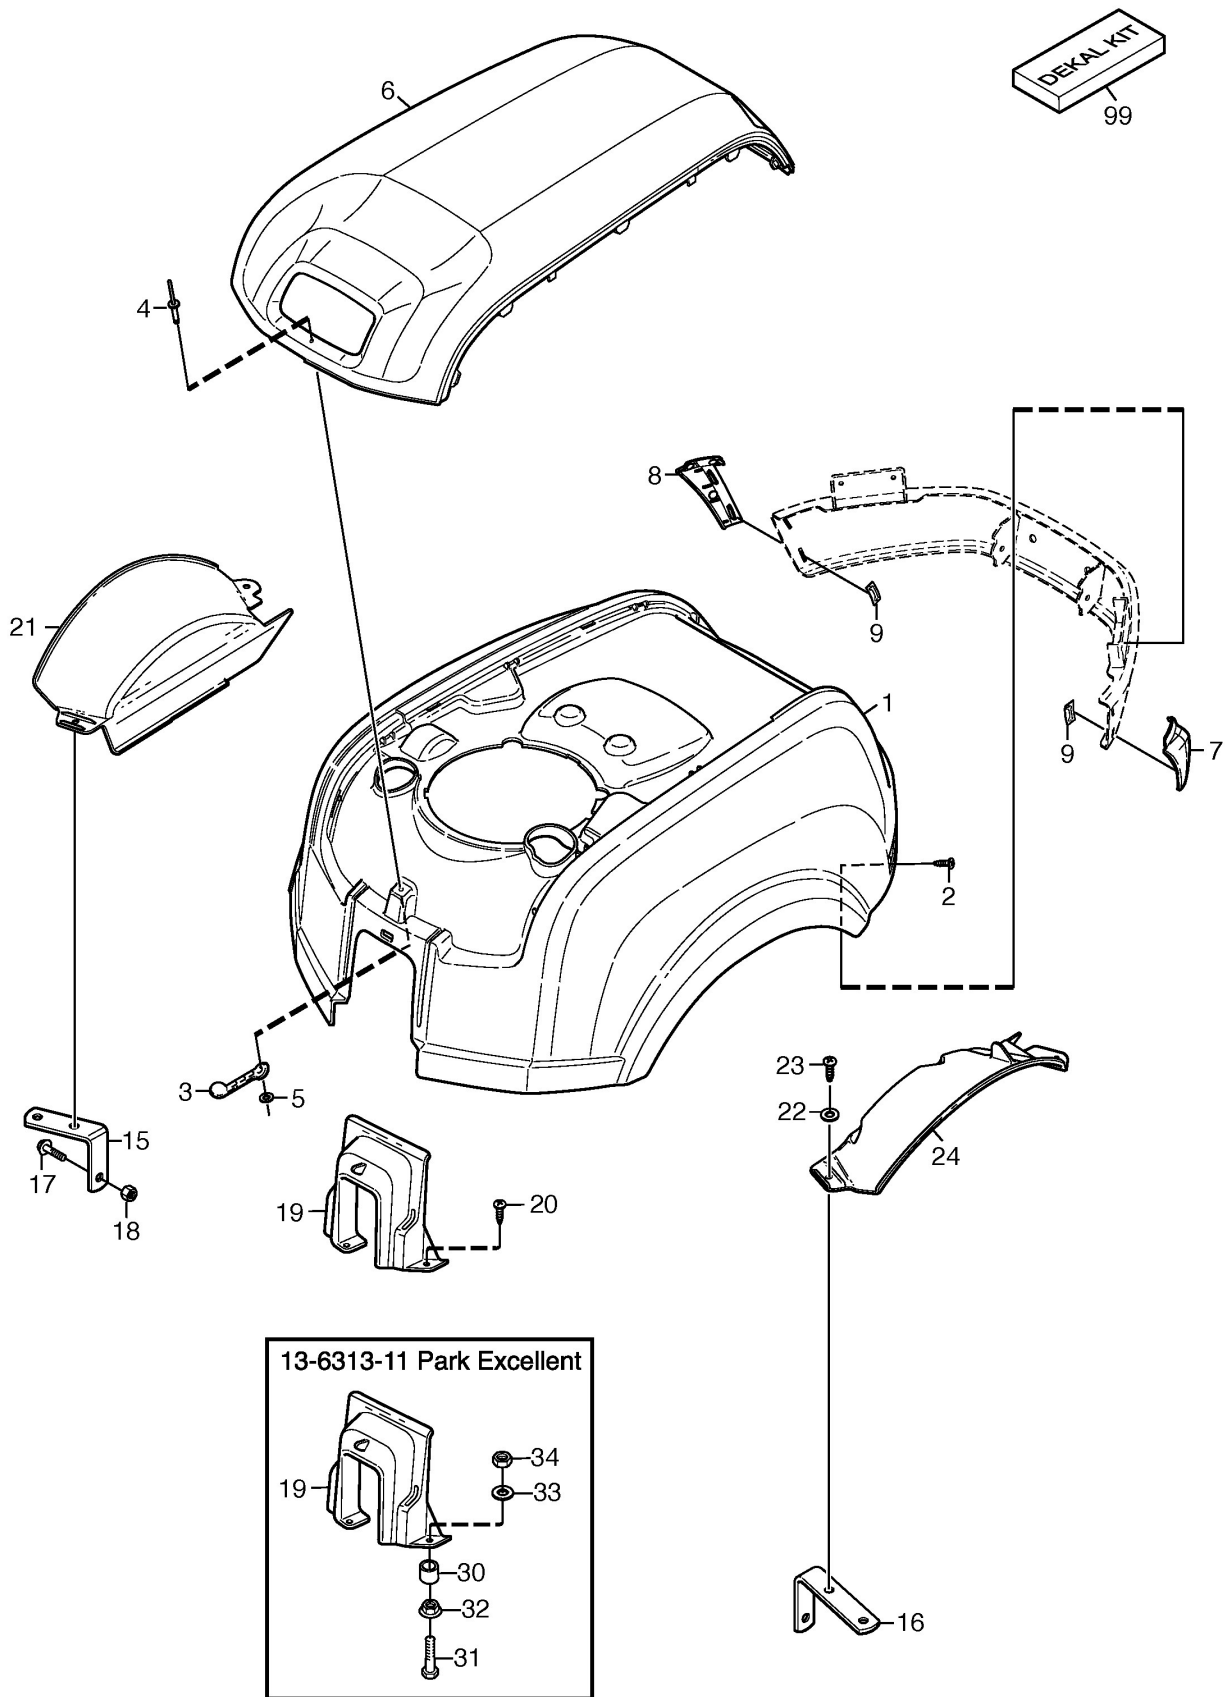 



Body work

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-6025-01	Engine Hood	Royal-Power-Prestige-Residence		
1	1	1137-0024-01	Engine Hood	13-6142-65		
2	4	9893-0616-16	Screw			
3	1	1134-9028-01	Rubber Strap (3 Pcs)	Sats 3 st/kit of 3		
4	1	9632-0513-00	Pop Rivet			
5	1	9699-0120-02	Washer			
6	1	1134-6026-01	Engine Cover			
7	1	1134-6027-01	Bumper End-Lh			
8	1	1134-6027-02	Bumper End-Rh			
9	4	1134-6310-01	Clip			
15	1	1134-4012-03	Support, Right			
16	1	1134-4012-04	Support, Left			
17	1	9959-0820-16	Screw			
18	1	9739-0831-22	Nut			
19	1	1134-6241-01	Hood Support			
20	3	9893-0616-16	Screw			
21	1	1134-4800-01	Inner Mud Guard-Rh (Park)			
22	4	9699-0060-02	Washer			
23	4	9893-0616-16	Screw			
24	1	1134-4801-01	Inner Mud Guard-Lh (Park)			
30	3	1137-0020-01	Spacer	13-6142-65		
31	3	9997-0535-16	Screw	13-6142-65		
32	3	9739-0531-22	Nut	13-6142-65		
33	3	9699-0099-02	Washer	13-6142-65		
34	3	9747-0531-02	Nut	13-6142-65		
99	1	1134-4593-08	Label Kit	Diesel		
99	1	1134-6443-01	Label	Comfort		
99	1	1134-6443-03	Label	President		
99	1	1134-6443-04	Label	Excellent		
99	1	1134-6443-05	Label	Unlimited		
99	1	1134-6443-07	Label	Prestige		
99	1	1134-6443-08	Label	Residence		
99	1	1134-6443-09	Label	Ranger		

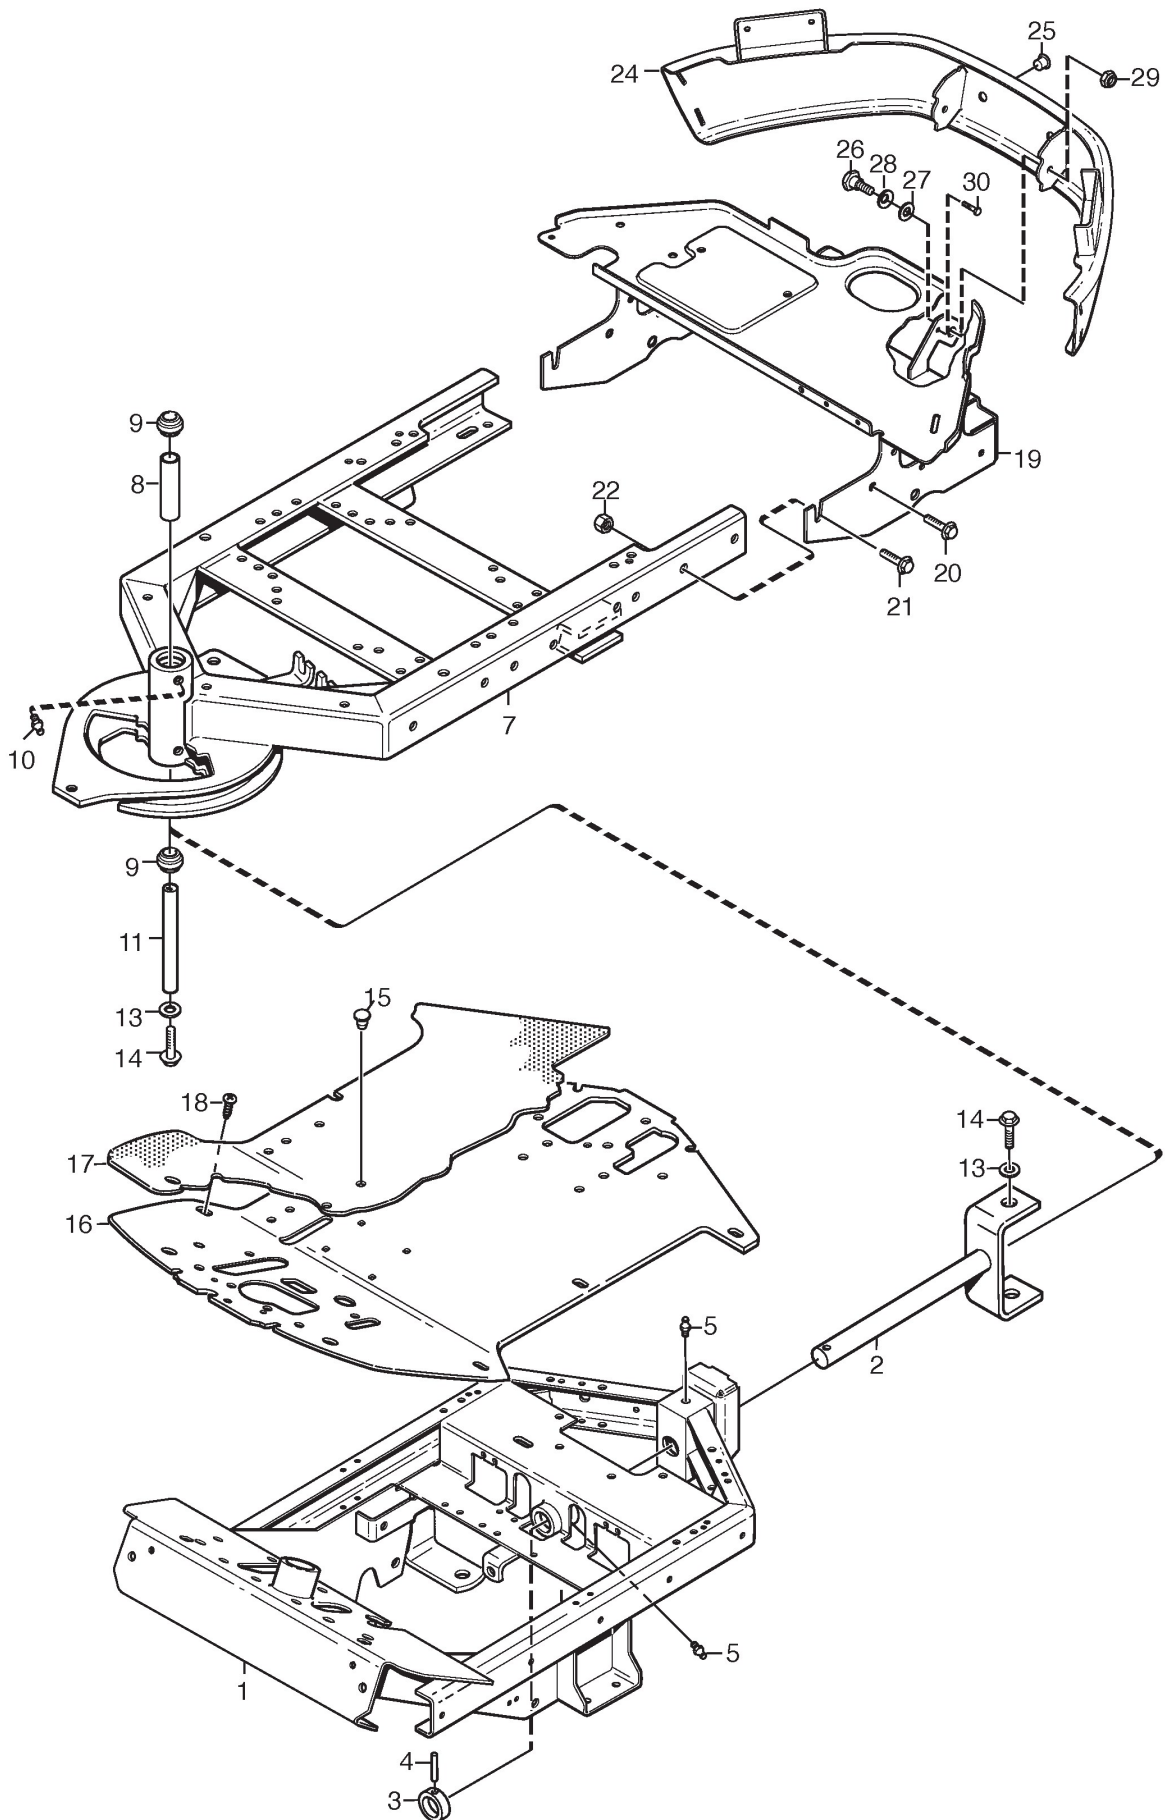 


Frame

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-5656-02	Frame-Front			
2	1	1134-3963-02	Fork			
3	1	1134-0031-00	Pivot Shaft Stop			
4	1	9595-0262-00	Locating Pin			
5	2	9501-0500-00	Grease Dispenser			
7	1	1134-6466-01	Frame-Rear Assy			
8	1	1134-5705-01	Spacer			
9	2	9547-0001-00	Bearing			
10	2	9501-0500-00	Grease Dispenser			
11	1	1134-5988-01	Centre Shaft			
13	2	9699-0035-02	Washer			
14	2	9959-1025-16	Screw			
15	2	9403-0048-70	Cover Plug			
16	1	1134-6586-01	Floor Plate			
17	1	1134-6372-04	Floor Mat Hst			
18	2	9893-0616-16	Screw			
19	1	1134-5944-01	Tank Shelf Assy			
20	2	9945-0816-16	Screw			
21	2	9959-0820-16	Screw			
22	2	9739-0831-22	Nut			
24	1	1134-5676-01	Rear Bumper			
25	2	1134-4100-01	Plug			
26	2	1134-0240-00	Screw			
27	2	1134-4242-01	Washer			
28	2	9665-0002-00	Washer			
29	2	9747-0831-02	Lock Nut			
30	2	9943-0516-16	Screw			

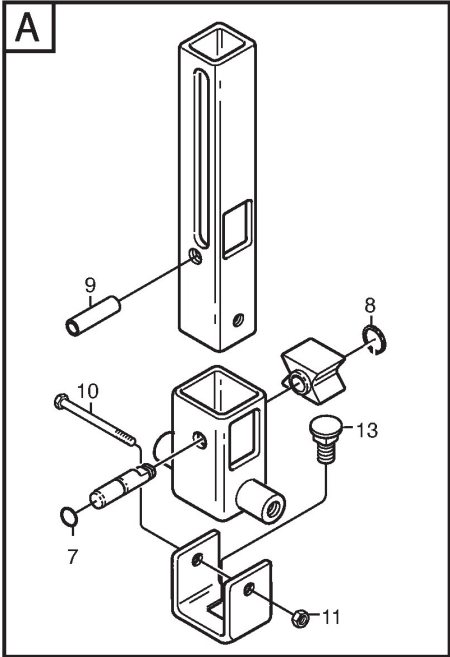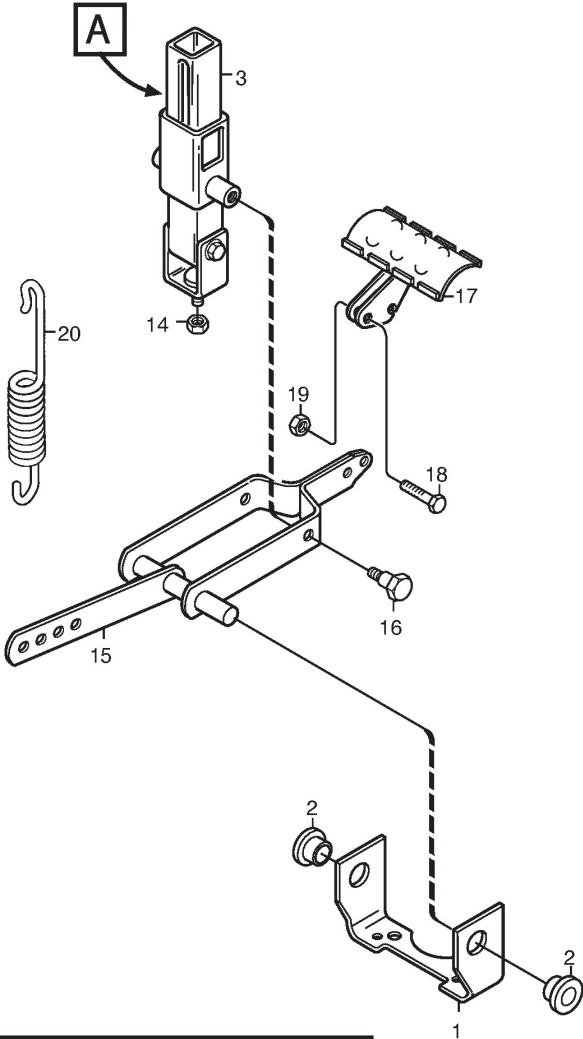  


Pedal lift

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-4117-01	Bracket			
2	2	1134-2684-01	Bearing			
3	1	1134-4945-01	Lift Catch Assy			
7	1	9404-0027-01	O-ring			
8	1	9650-0039-04	Lock Ring			
9	1	9595-0276-01	Locating Pin			
10	1	9997-0640-12	Screw			
11	1	9747-0631-02	Lock Nut			
13	1	9897-0820-16	Screw			
14	1	9747-0831-02	Lock Nut			
15	1	1134-4860-01	Lift Fork			
16	2	1134-0240-00	Screw			
17	1	1134-4938-01	Lift Pedal			
18	2	9997-0625-16	Screw			
19	2	9739-0631-22	Nut			
20	1	4231-0013-00	Spring			

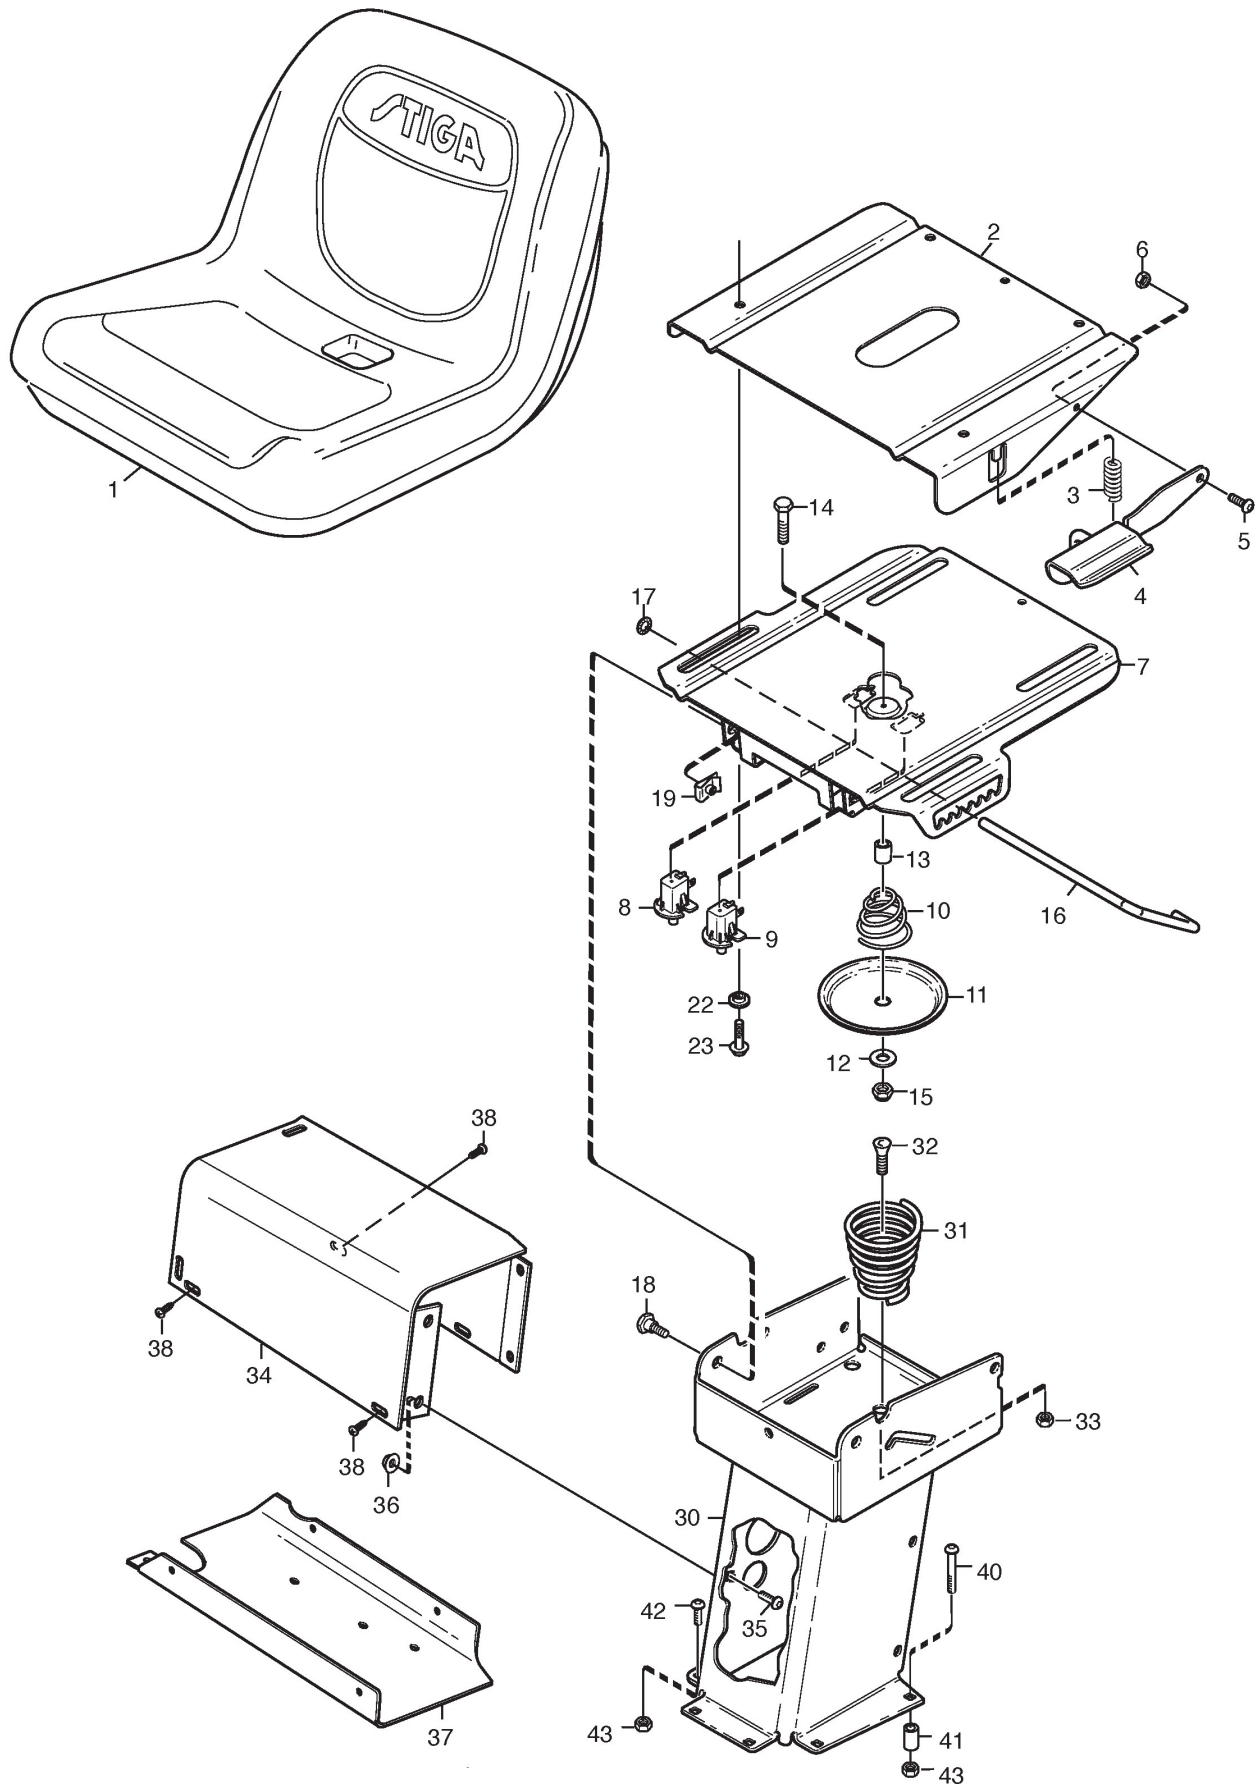 


Seat

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-6444-01	Seat			
2	1	1134-6090-01	Slide Plate-Upper			
3	1	1134-3262-01	Spring			
4	1	1134-6073-01	Handle Assy			
5	1	9893-0616-16	Screw			
6	1	9747-0631-02	Lock Nut			
7	1	1134-6068-01	Slide Plate-Lower			
8	1	1134-3156-01	Switch			
9	1	1134-3156-02	Switch			
10	1	1134-5302-01	Spring			
11	1	1134-5299-01	Push Plate			
12	1	9699-0090-02	Washer			
13	1	1134-1565-06	Spacer			
14	1	9997-0840-16	Screw			
15	1	9747-0831-02	Lock Nut			
16	1	1134-5179-01	Catch			
17	1	9675-0012-02	Locking washer			
18	2	1134-0240-00	Screw			
19	2	1134-4620-02	Nut			
22	4	1134-6078-01	Flange Washer			
23	4	9959-0820-16	Screw			
30	1	1134-5698-01	Seat Bracket Assy			
31	1	1134-4256-01	Spring			
32	1	9924-1235-19	Screw			
33	1	9747-1231-02	Nut			
34	1	1134-3990-01	Attachment-Side Panel			
35	2	9897-0820-16	Screw			
36	2	9739-0831-22	Nut			
37	1	1134-4130-01	Cover Lower			
38	4	9840-8013-16	Screw			
40	2	9897-0880-12	Screw			
41	2	1134-1565-08	Spacer			
42	4	9897-0820-16	Screw			
43	6	9747-0831-02	Lock Nut			

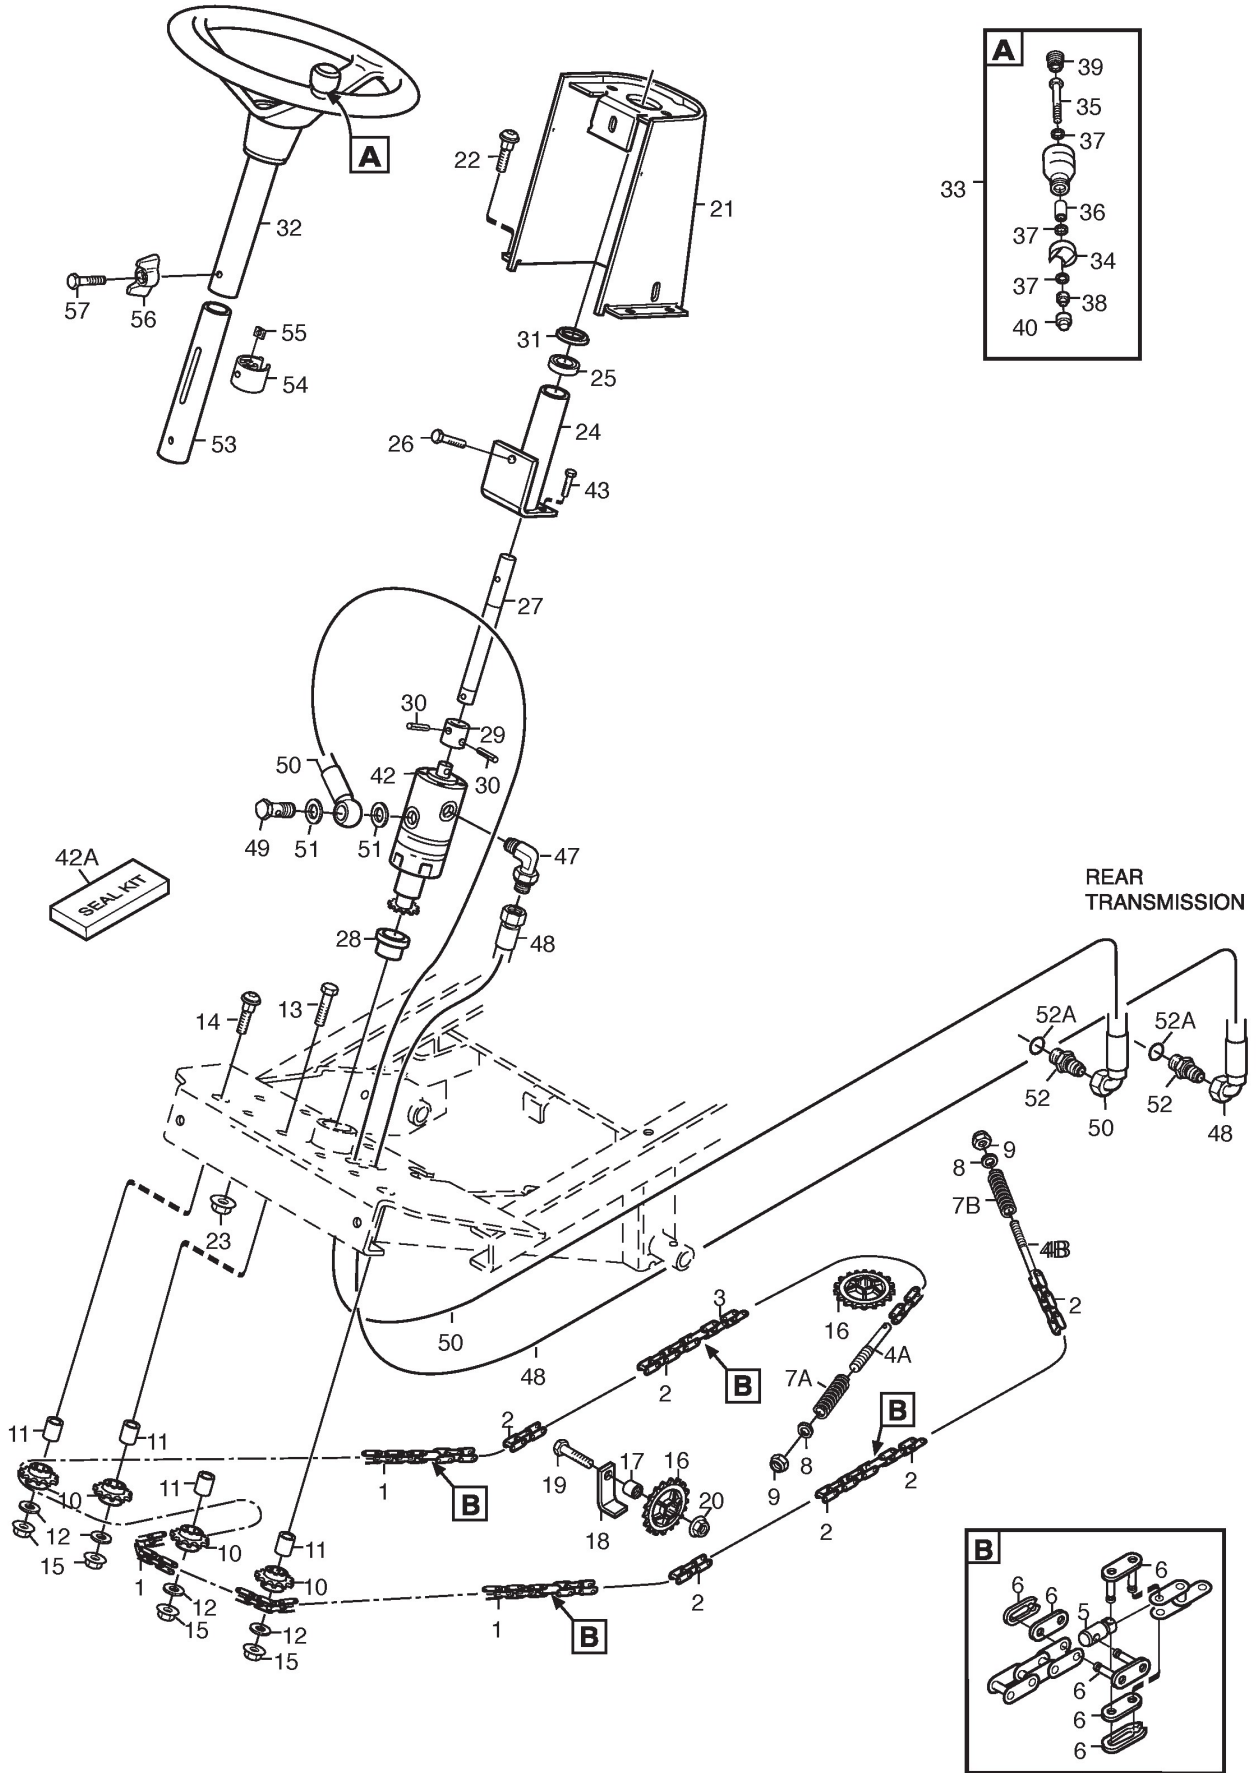 


Steering

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-6374-06	Chain	83 länk		
2	3	1134-6374-02	Chain	41 länk		
3	1	1134-6374-04	Chain	45 länk		
4	1	1134-3550-01	End Nipple	L = 110 mm		
4	1	1134-3550-02	End Nipple	L = 90 mm		
5	4	1134-3565-01	Connection Nipple			
6	10	1134-2824-02	Chain Lock			
7	1	1134-3817-01	Spring	L = 58 mm		
7	1	1134-3817-02	Spring	L = 33 mm		
8	2	9699-0090-02	Washer			
9	2	9747-0831-02	Lock Nut			
10	4	1134-2816-01	Sprocket			
11	4	1134-0041-02	Bushing			
12	4	9699-0035-02	Washer			
13	2	9997-1050-16	Screw			
14	2	9897-1040-12	Screw			
15	4	9739-1031-22	Nut			
16	3	1134-3547-01	Sprocket			
17	2	1134-0041-01	Bushing			
18	2	1134-0046-00	Wire Clamp			
19	2	9997-1030-16	Screw			
20	2	9739-1031-22	Nut			
21	1	1134-4120-04	Steering Console			
22	4	9897-0820-16	Screw			
23	4	9739-0831-22	Nut			
24	1	1134-4113-02	Steering Tube-Lower			
25	1	9549-0017-00	Ball Bearing			
26	1	9945-0816-16	Screw			
27	1	1134-4087-01	Steering Rod			
28	1	1134-4114-01	Bushing			
29	1	1134-4118-01	Coupling			
30	2	9595-0256-01	Locating Pin			
31	1	9695-0011-00	Washer			
32	1	1134-5173-02	Steering Wheel			
33	1	1134-3769-01	Steering Wheel Button Kit			
34	1	1134-3752-01	Knob Holder			
35	1	9997-0870-16	Screw			
36	1	1134-1565-06	Spacer			
37	3	9699-0090-02	Washer			
38	1	9747-0831-02	Lock Nut			
39	1	9403-0043-70	Plug			
40	1	9403-0113-00	Ring Nut			
42	1	1134-6420-01	Steering Booster			
42	1	1139-2074-01	Seal Kit-Steering Booster			
43	3	9939-0612-16	Screw			
47	1	1134-7073-01	Hydraulic Coupling 90			
48	1	1134-6822-01	Hydraulic Tube	L = 1740 mm		
49	1	1134-6323-01	Banjo Bolt 3/8			

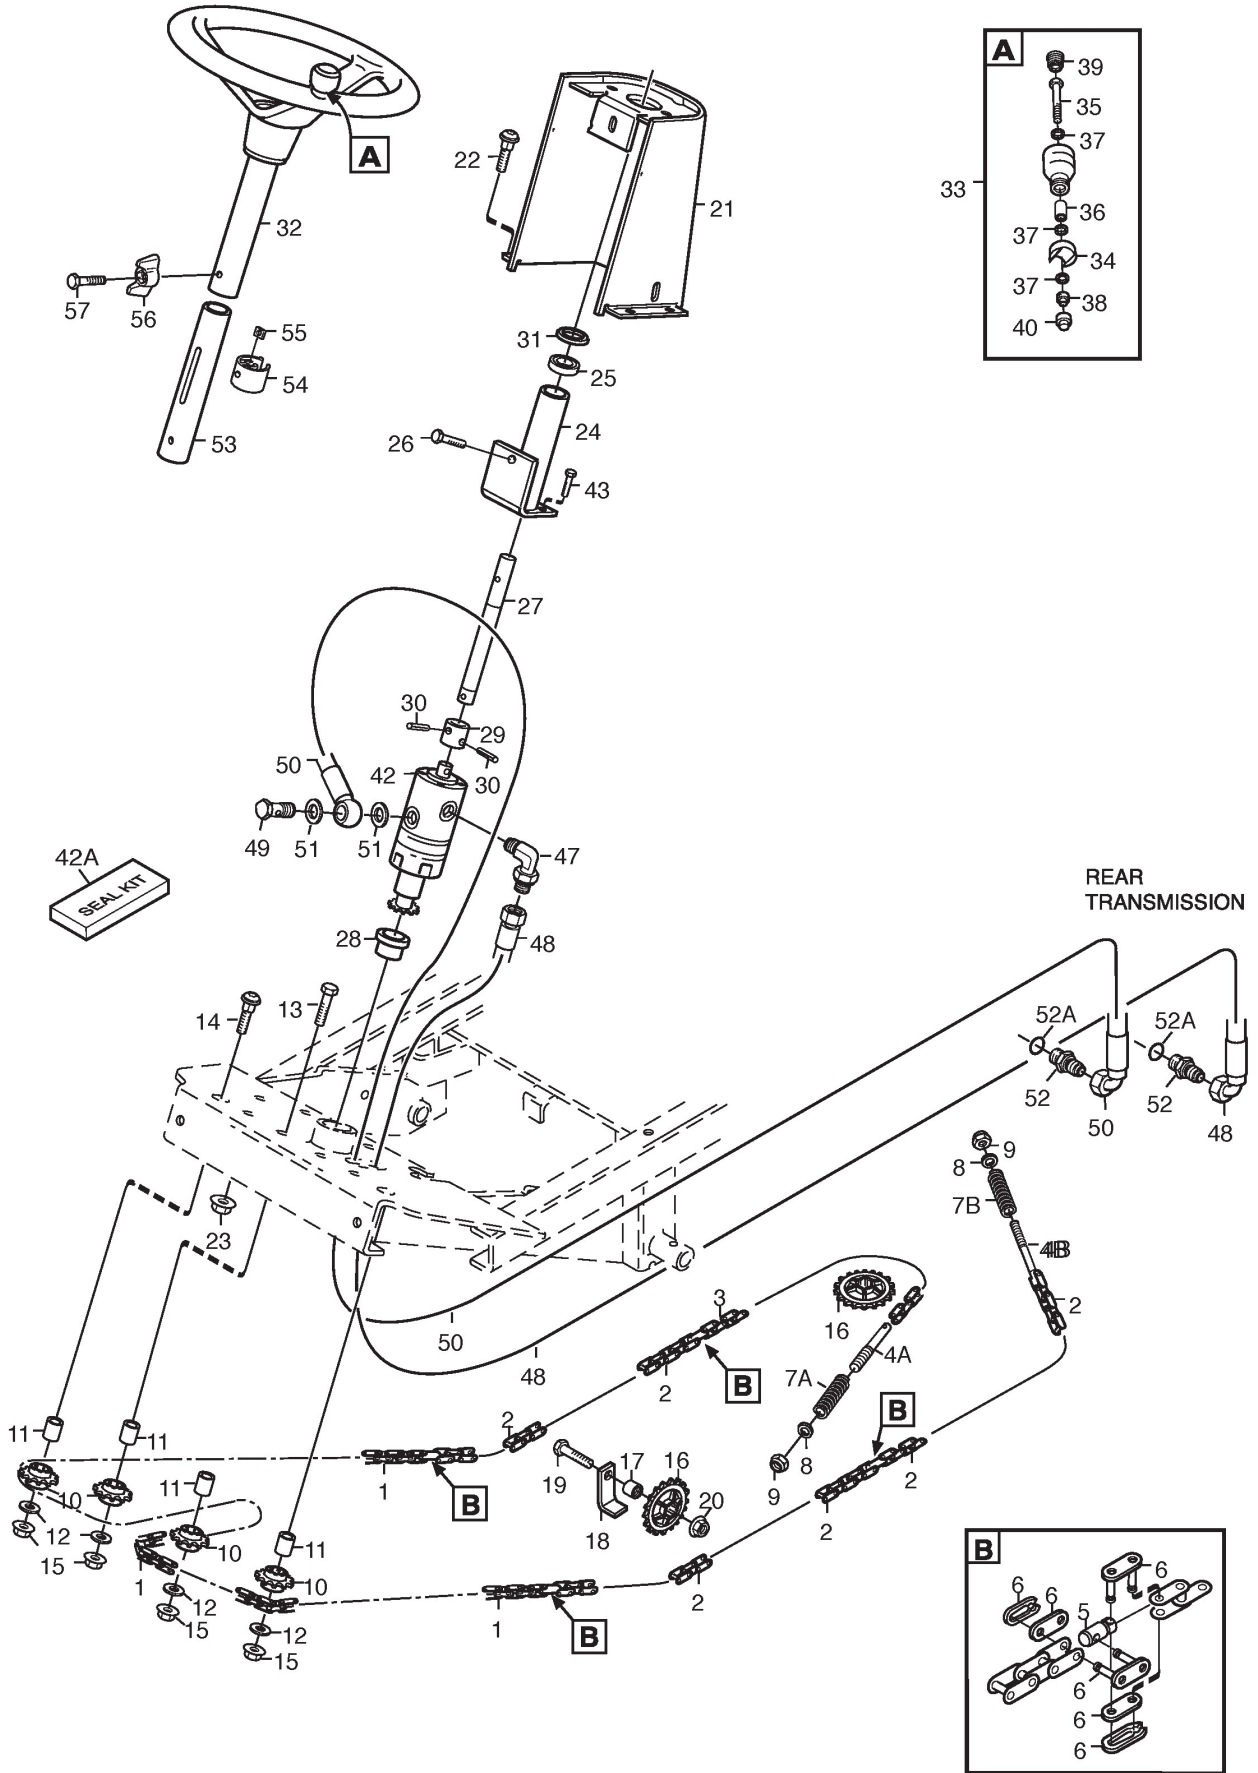 


Steering

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
50	1	1134-6821-01	Hydraulic Tube	L = 2050 mm		
51	2	1134-4948-02	Washer			
52	2	1134-4282-01	Hydraulic Nipple			
52	1	9404-0028-01	O-ring			
53	1	1134-5216-01	Steering Tube-Inner Assy			
54	1	1134-5177-01	Slide			
55	1	9710-0631-12	Nut			
56	1	1134-4481-02	Wing Nut			
57	1	9997-0630-12	Screw			

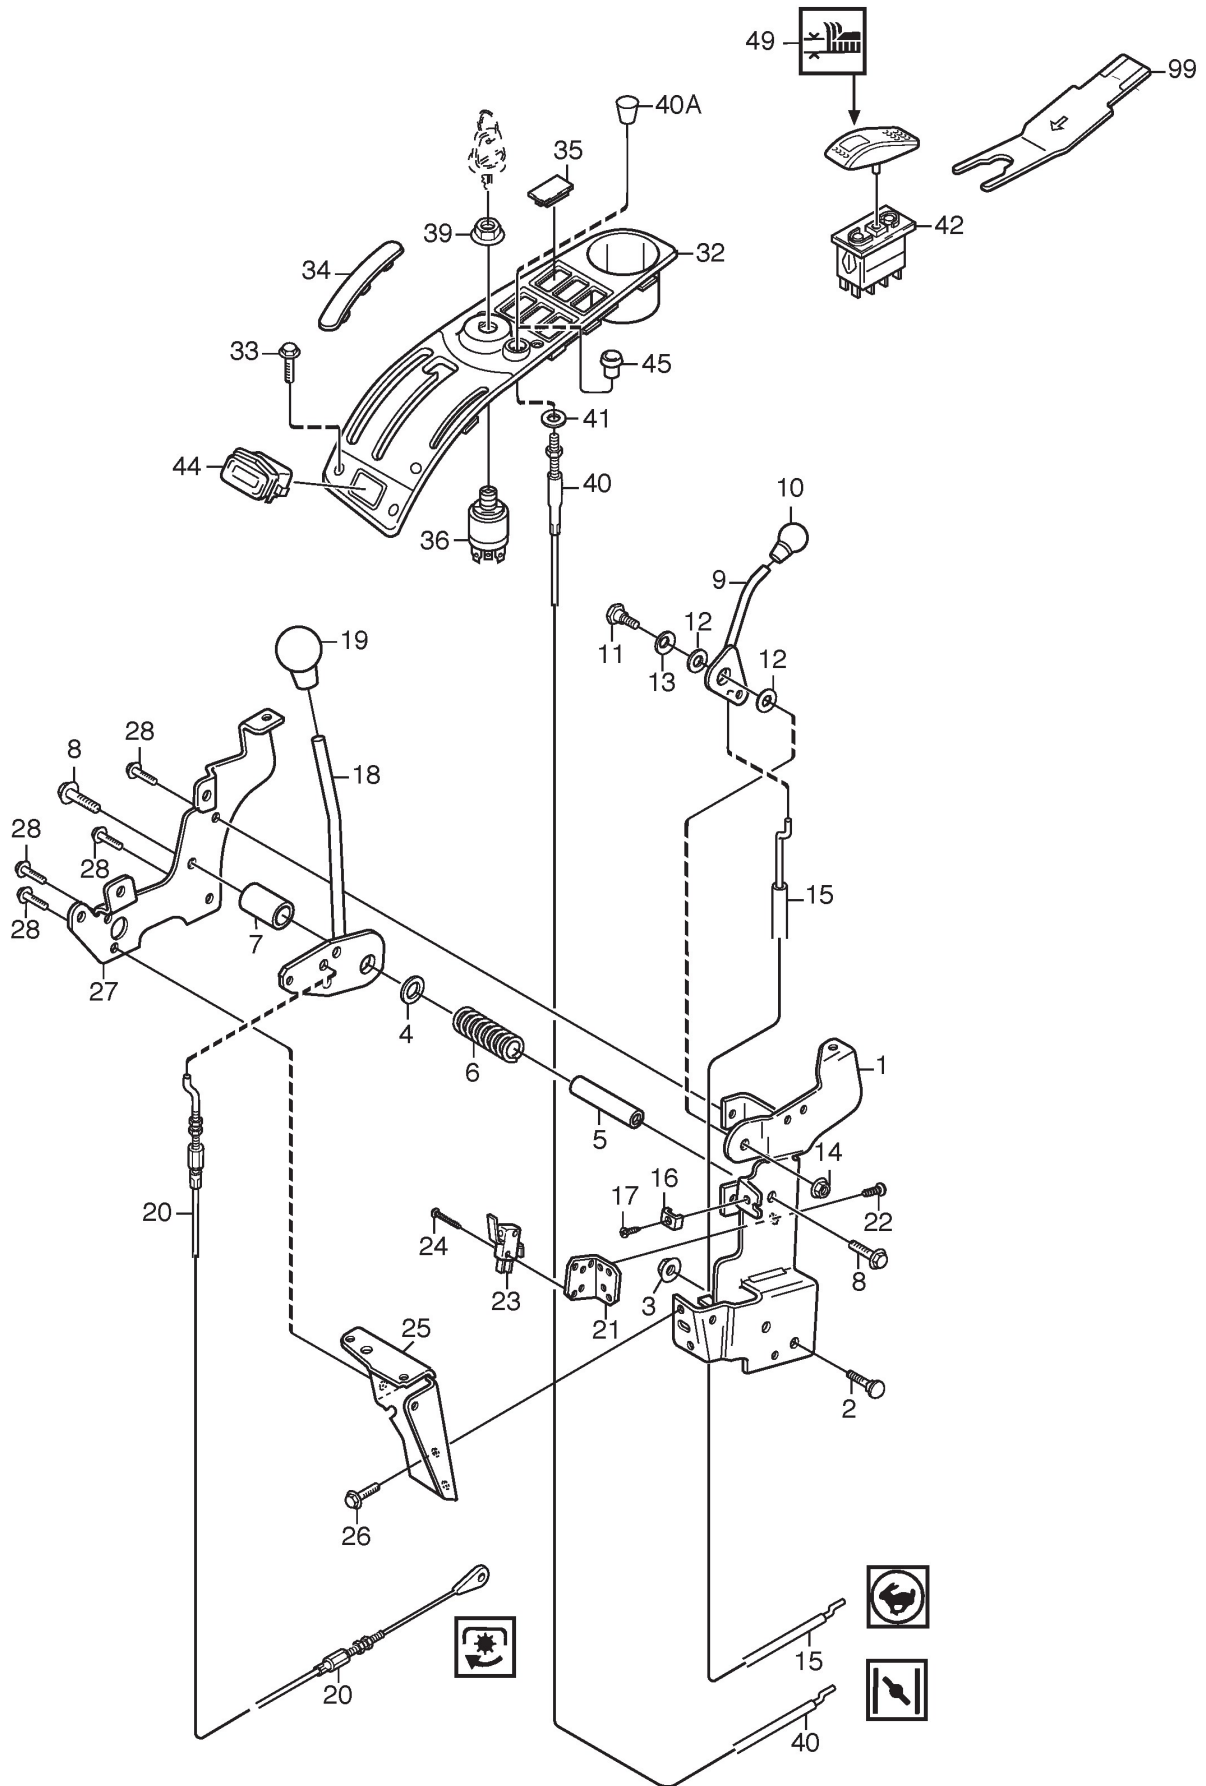 





Hand controls

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-4156-01	Panel Bracket-Inner			
2	2	9897-0820-16	Screw			
3	2	9739-0831-22	Nut			
4	1	9695-0011-00	Washer			
5	1	1134-4065-01	Control Shaft			
6	1	1134-4079-01	Spring			
7	1	1134-4080-03	Control Sleeve			
8	2	9959-0820-16	Screw			
9	1	1134-4077-01	Throttle Cable			
10	1	1134-4078-01	Knob			
11	1	1134-0240-00	Screw			
12	2	1134-4242-01	Washer			
13	1	9694-0001-00	Washer			
14	1	9747-0831-02	Lock Nut			
15	1	1134-4195-01	Throttle Cable	L1 = 1413 mm		
16	1	9500-9991-00	Wire Clamp			
17	1	9943-0516-16	Screw			
18	1	1134-4072-01	Control Lever			
19	1	1134-2551-01	Knob			
20	1	1134-3573-03	Pto Cable			
21	1	1134-5358-01	Switch Bracket			
22	2	9852-8013-16	Screw			
23	1	9400-0285-01	Switch			
24	2	9840-7716-16	Screw	L = 16 mm		
25	1	1134-6328-01	Panel Bracket-Front			
26	2	9893-0616-16	Screw			
27	1	1134-6327-01	Front Plate			
28	4	9893-0616-16	Screw			
32	1	1134-6096-02	Dashboard			
33	4	9946-0525-16	Screw			
34	1	1134-4154-01	Cover			
36	1	1134-4093-01	Ignition Switch			
39	1	1134-4749-01	Nut			
40	1	1134-2872-03	Choke Control			
40	1	1134-4338-01	Control Button-Choke			
41	1	9699-0090-02	Washer			
44	1	1134-6097-01	Hour Meter			

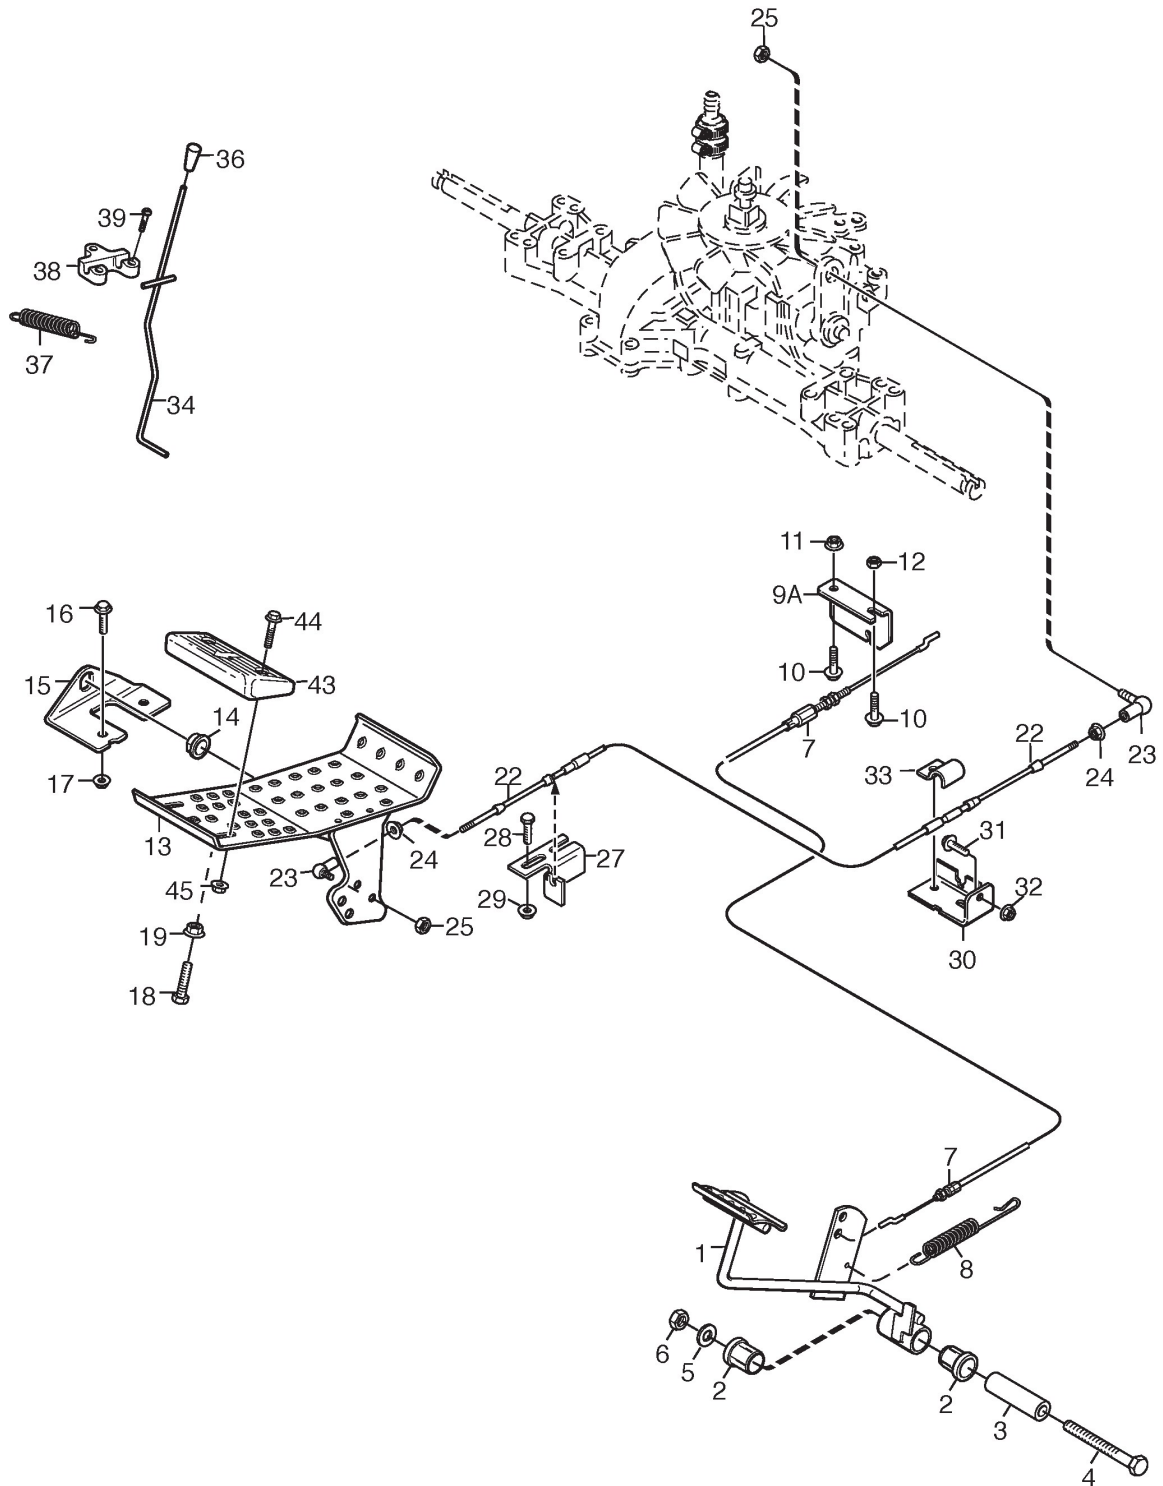 


Foot controls

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-5655-01	Clutch Pedal			
2	1	1134-9024-01	Bearing	Sats 4 st/kit of 4		
3	1	1134-5677-02	Spacer			
4	1	9997-1070-12	Screw			
5	1	9699-0030-02	Washer			
6	1	9739-1031-22	Nut			
7	1	1134-6005-01	Control Cable			
8	1	4231-0013-00	Spring			
9	1	1134-6467-01	Cable Holder			
10	2	9959-0820-16	Screw			
11	1	9739-0831-22	Nut			
12	1	9747-0831-02	Lock Nut			
13	1	1134-6353-01	Drive Pedal			
14	2	1134-6313-01	Bearing			
15	2	1134-2700-01	Bracket			
16	2	9959-0820-16	Screw			
17	2	9739-0831-22	Nut			
18	1	9997-0835-16	Screw			
19	1	9739-0831-22	Nut			
22	1	1134-2766-05	Speed Control Cable			
23	2	9570-0001-00	Elbow Link			
24	2	9739-0531-22	Nut			
25	2	9747-0531-02	Nut			
27	1	1134-6317-01	Wire Bracket			
28	2	9959-0620-16	Screw			
29	2	9739-0631-22	Nut			
30	1	1134-3395-01	Attachment			
31	2	9959-0820-16	Screw			
32	2	9739-0831-22	Nut			
33	1	1134-2021-01	Clamp			
34	1	1134-5101-01	Brake Rod			
36	1	1134-3808-01	Knob			
37	1	1131-1497-01	Brake Spring			
38	1	1134-4002-01	Brake Rod Attachment			
39	3	9838-9516-12	Screw			
43	2	1134-6340-02	Foot Rest			
44	4	9959-0620-16	Screw			
45	4	9739-0631-22	Nut			

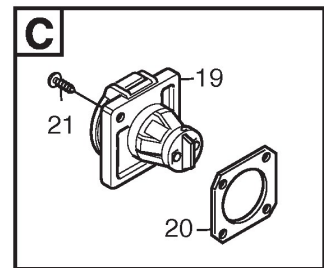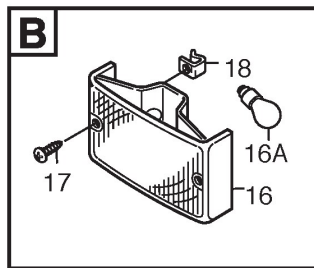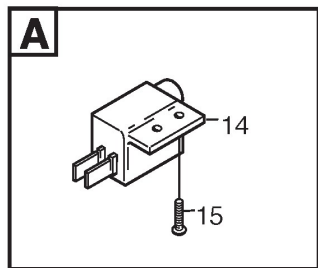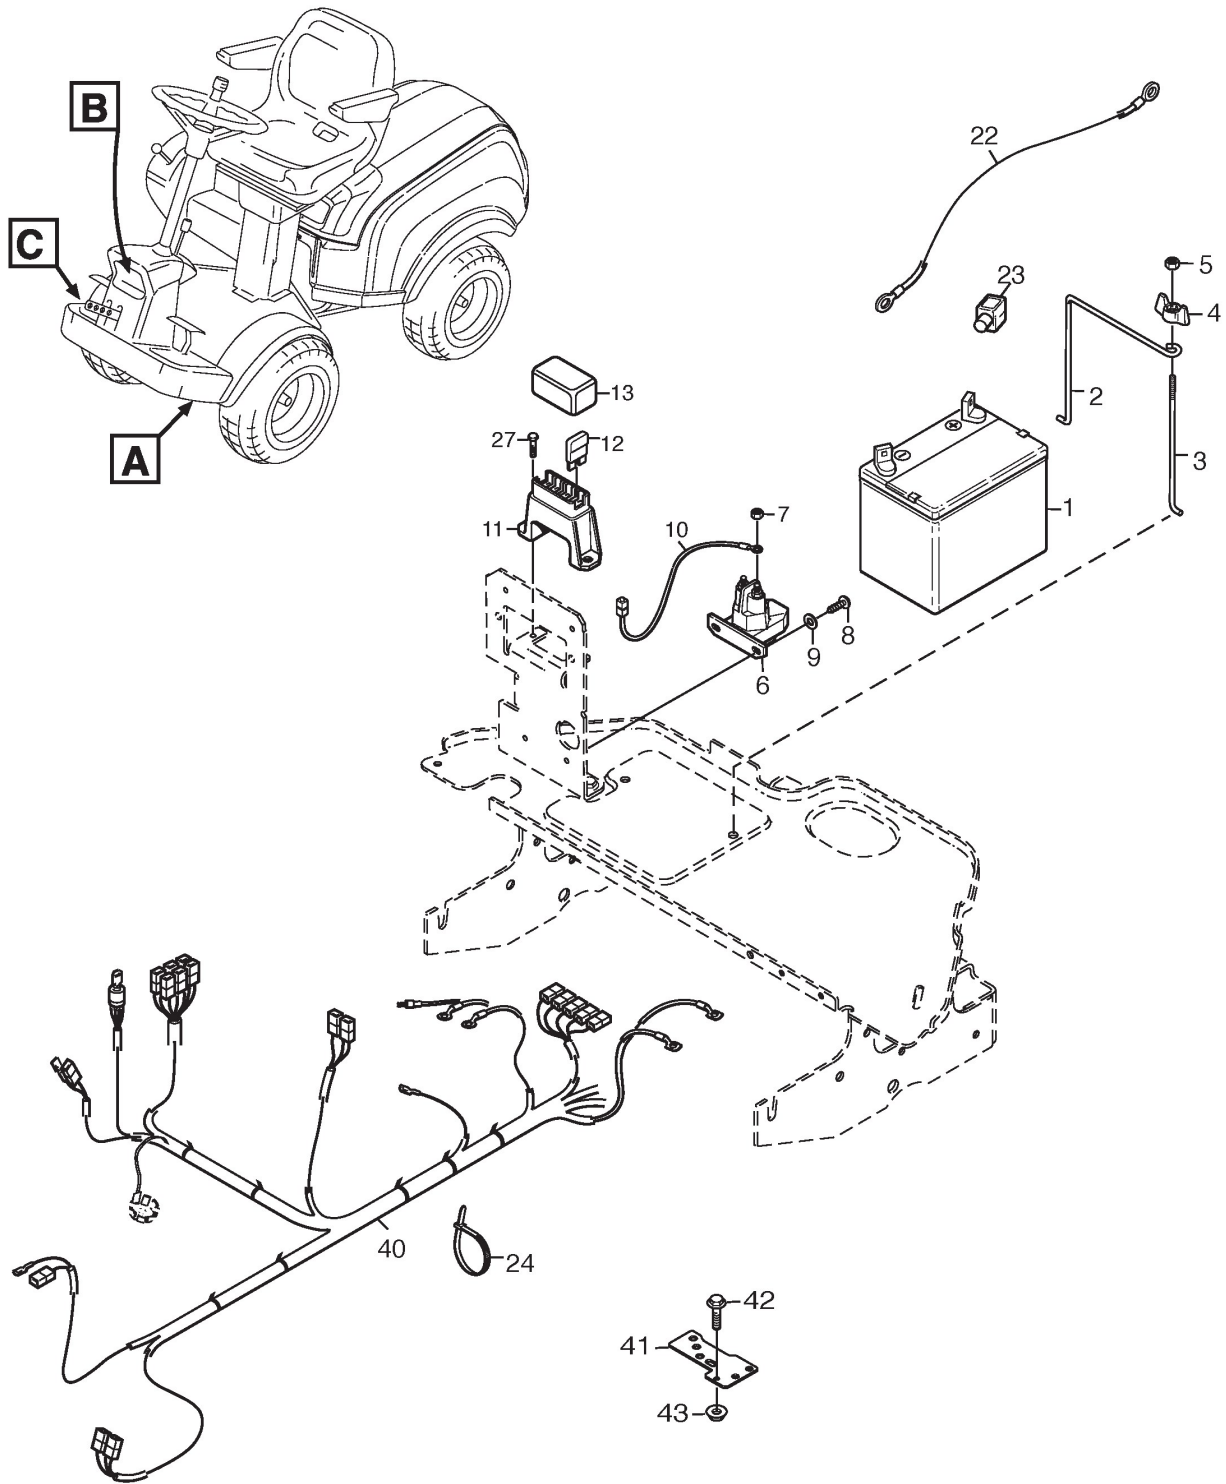    


Electric system

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-5751-01	Battery			
2	1	1134-5994-01	Battery Loop			
3	1	1134-5995-01	Battery Loop			
4	1	1134-4481-02	Wing Nut			
5	1	9747-0631-02	Lock Nut			
6	1	1134-2962-01	Solenoid			
7	2	9794-5131-02	Nut			
8	2	9852-8013-16	Screw			
9	2	9699-0060-02	Washer			
10	1	1134-4970-02	Cable			
11	1	1134-3491-01	Fuse Holder			
12	1	1134-3496-01	Fuse (10A) Red	10A		
12	1	1134-3496-06	Fuse (20A) Yellow	20A		
12	1	1134-3496-07	Fuse (30A)	30A		
13	1	1134-3631-01	Cover-Fuse Holder			
14	1	1134-3399-02	Switch			
15	2	9943-0516-16	Screw			
16	1	1134-4172-01	Headlamp			
16	1	9400-0293-01	Bulb	12V - 21W		
17	2	9849-7819-16	Screw			
18	2	1134-4177-01	Clips			
19	1	1134-7535-01	Female Connector			
20	1	1134-4052-01	Washer			
21	2	9840-7716-16	Screw			
22	1	1134-0234-02	Battery Cable (+)			
23	1	1134-2310-01	Guard Cap (+)			
24	7	9579-0003-00	Cable Holder			
27	2	9849-8006-16	Screw			
40	1	1137-0027-01	Harness	Honda		
41	1	1134-6454-01	Ground Plate			

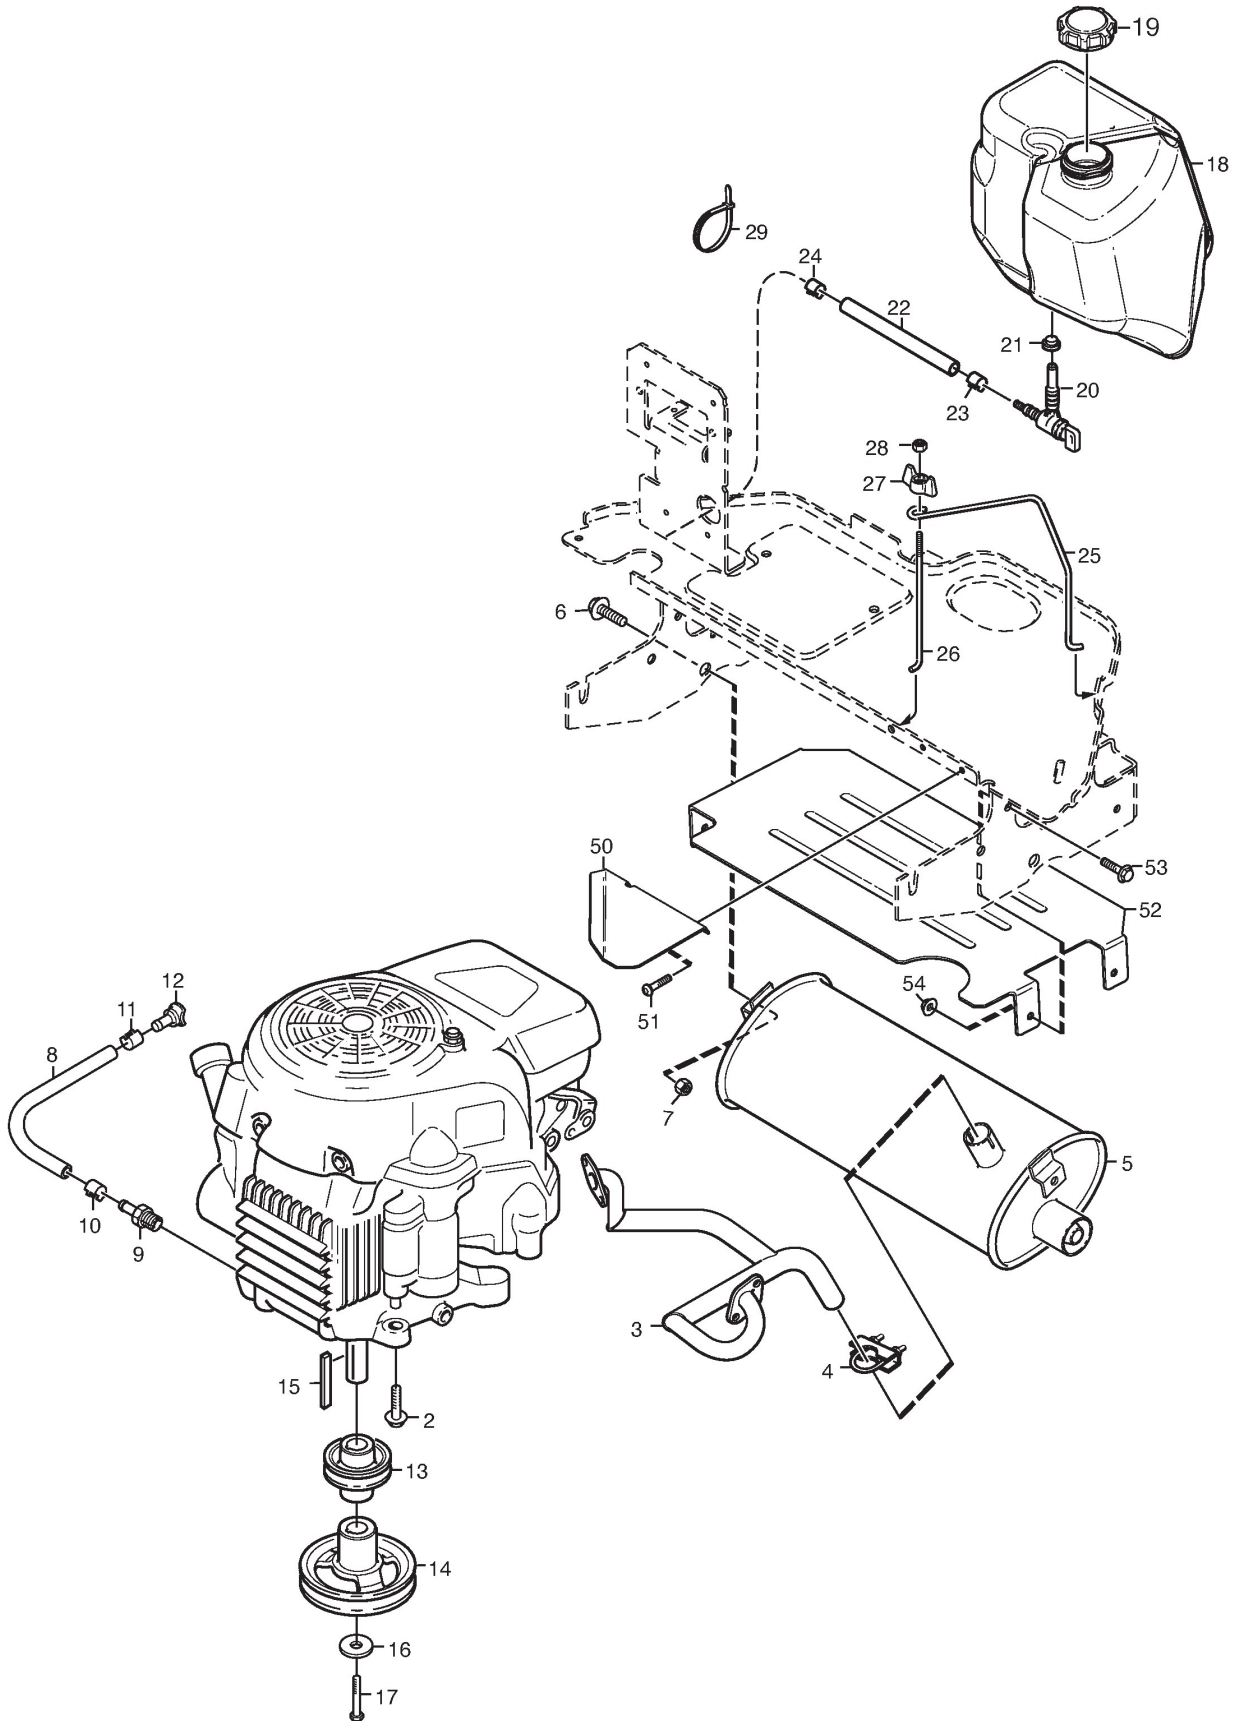 


Engine

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
2	4	9955-3725-16	Screw	Honda		
3	1	1134-5947-01	Exhaust Pipe Assy	Honda		
4	1	9578-0011-01	Tube Clamp			
5	1	1134-6024-01	Muffler Assy			
6	1	9959-0816-16	Screw			
6	1	9959-0820-16	Screw			
6	1	9959-0820-16	Screw			
7	1	9739-0831-22	Nut			
8	1	1134-5827-01	Oil Drain Assy	Inkl. pos 9 - 12		
9	1	1134-5825-01	Nipple			
10	1	9578-0023-04	Hose Clamp			
11	1	1134-3499-02	Hose Clamp	Honda		
12	1	1134-5826-01	Plug			
13	1	1134-5000-01	Engine Belt Pulley			
13	1	1134-6137-01	Engine Belt Pulley			
13	1	1134-6137-01	Engine Belt Pulley			
13	1	1137-0007-01	Engine Pulley	Honda		
14	1	1134-4999-01	Engine Belt Pulley			
14	1	1134-6419-01	Engine Pulley			
14	1	1134-6419-01	Engine Pulley			
14	1	1137-0082-01	Engine Pulley			
15	1	9600-0251-01	Key			
16	1	1134-5017-01	Washer			
17	1	9987-5332-16	Screw			
18	1	1134-5938-01	Fuel Tank	Honda		
19	1	1134-5532-01	Fuel Tank Cap			
20	1	1134-3224-01	Fuel Shut-Off Valve	Honda		
21	1	1134-3225-01	Grommet	Honda		
22	1	1134-2975-13	Fuel Tube	L = 1100		
23	1	9578-0023-02	Hose Clamp	Honda		
24	1	9578-0023-02	Hose Clamp	Honda		
25	1	1134-5942-01	Tank Loop	Honda		
26	1	1134-5996-01	Tank Loop			
27	1	1134-4481-02	Wing Nut			
28	1	9747-0631-02	Lock Nut	Honda		
29	1	9579-0003-00	Cable Holder			
30	1	9893-0616-16	Screw	Honda		
50	1	1134-6234-01	Heat Deflector			
51	2	9943-0516-16	Screw			
52	1	1134-6251-01	Heat Deflector			
53	4	9959-0612-16	Screw			
54	4	9739-0631-22	Nut	Honda		

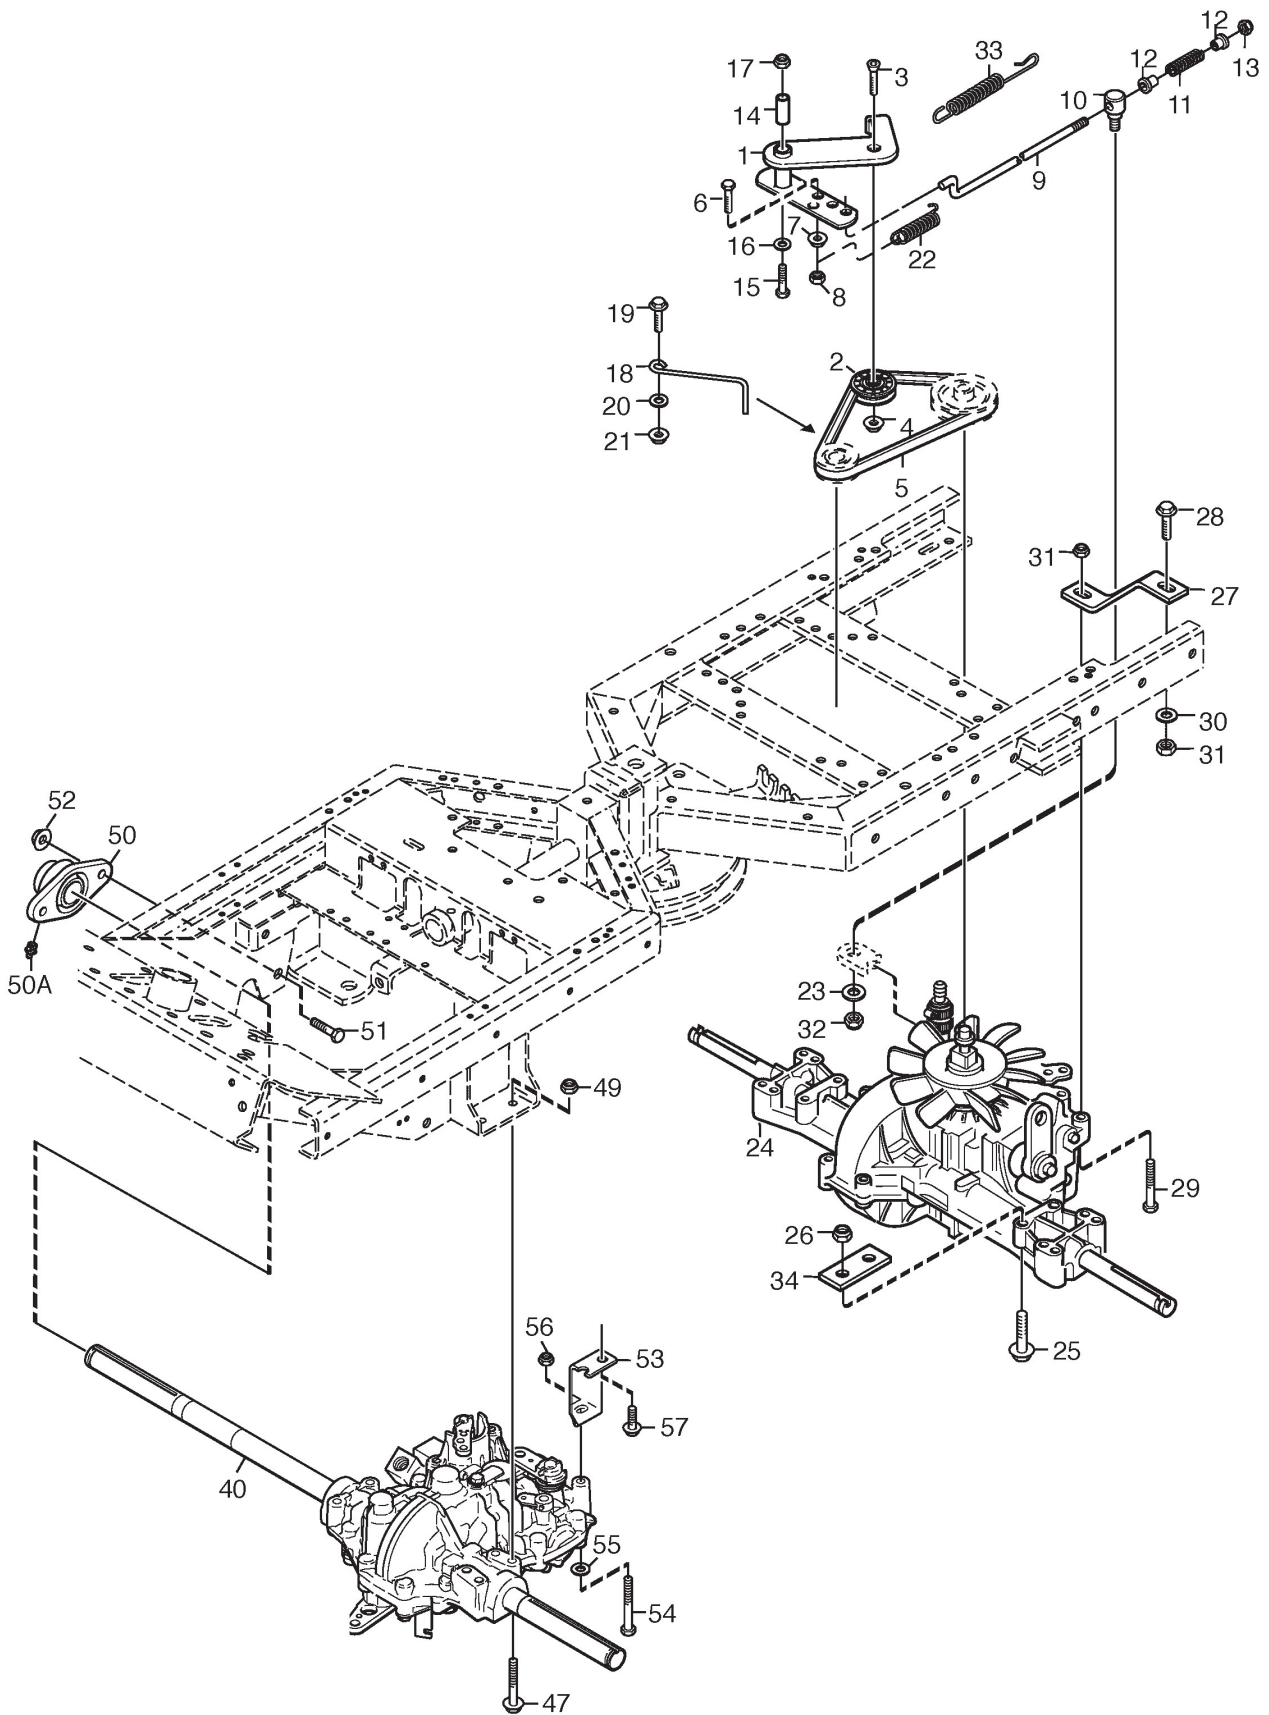 




Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-4000-02	Tension Arm			
2	1	1134-3459-01	Tension Roller			
3	1	9924-1035-16	Screw			
4	1	9799-1031-02	Nut			
5	1	1134-9058-01	V-Belt	= 9585-0091-01		
6	1	9997-0625-16	Screw			
7	1	9739-0631-22	Nut			
8	1	9747-0631-02	Lock Nut			
9	1	1134-3377-02	Control Rod			
10	1	1134-4171-01	Pivot Pin			
11	1	1134-4183-01	Spring			
12	2	1134-3456-01	Bushing			
13	1	9747-0631-02	Lock Nut			
14	1	1134-1565-08	Spacer			
15	1	9997-0870-16	Screw			
16	1	9699-0056-02	Washer			
17	1	9747-0831-02	Lock Nut			
18	1	1134-3289-02	Belt Guide			
19	1	9959-0820-16	Screw			
20	1	9699-0056-02	Washer			
21	1	9739-0831-22	Nut			
22	1	1134-6414-01	Spring			
23	1	9699-0060-02	Washer			
24	1	1134-6129-01	Transaxle (K574F, 4-Port)	Kanzaki K574F 4-port;To 31-august-2010		
24	1	1137-0125-01	Transaxle K574F	Kanzaki K574F 4-port;From 01-september-2010		
25	4	9960-0860-12	Screw			
26	4	9747-0831-02	Lock Nut			
27	1	1134-3913-01	Strut			
28	1	9959-0825-16	Screw			
29	1	9997-0845-12	Screw			
30	1	9699-0090-02	Washer			
31	2	9747-0831-02	Lock Nut			
32	1	9747-0631-02	Lock Nut			
33	1	4231-0013-00	Spring			
40	1	1134-6029-01	Front Motor Unit (Ktm10M)	Kanzaki KTM 10M		
47	2	9960-0860-12	Screw			
49	2	9747-0831-02	Lock Nut			
50	1	1134-5703-01	Flange Bearing Unit			
50	1	9501-0500-00	Grease Dispenser			
51	2	9997-1040-16	Screw			
52	2	9731-1031-22	Nut			
53	1	1134-5670-01	Strut			
54	1	9997-0880-16	Screw			
55	1	9699-0090-02	Washer			
56	1	9747-0831-02	Lock Nut			
57	2	9945-0816-16	Screw			

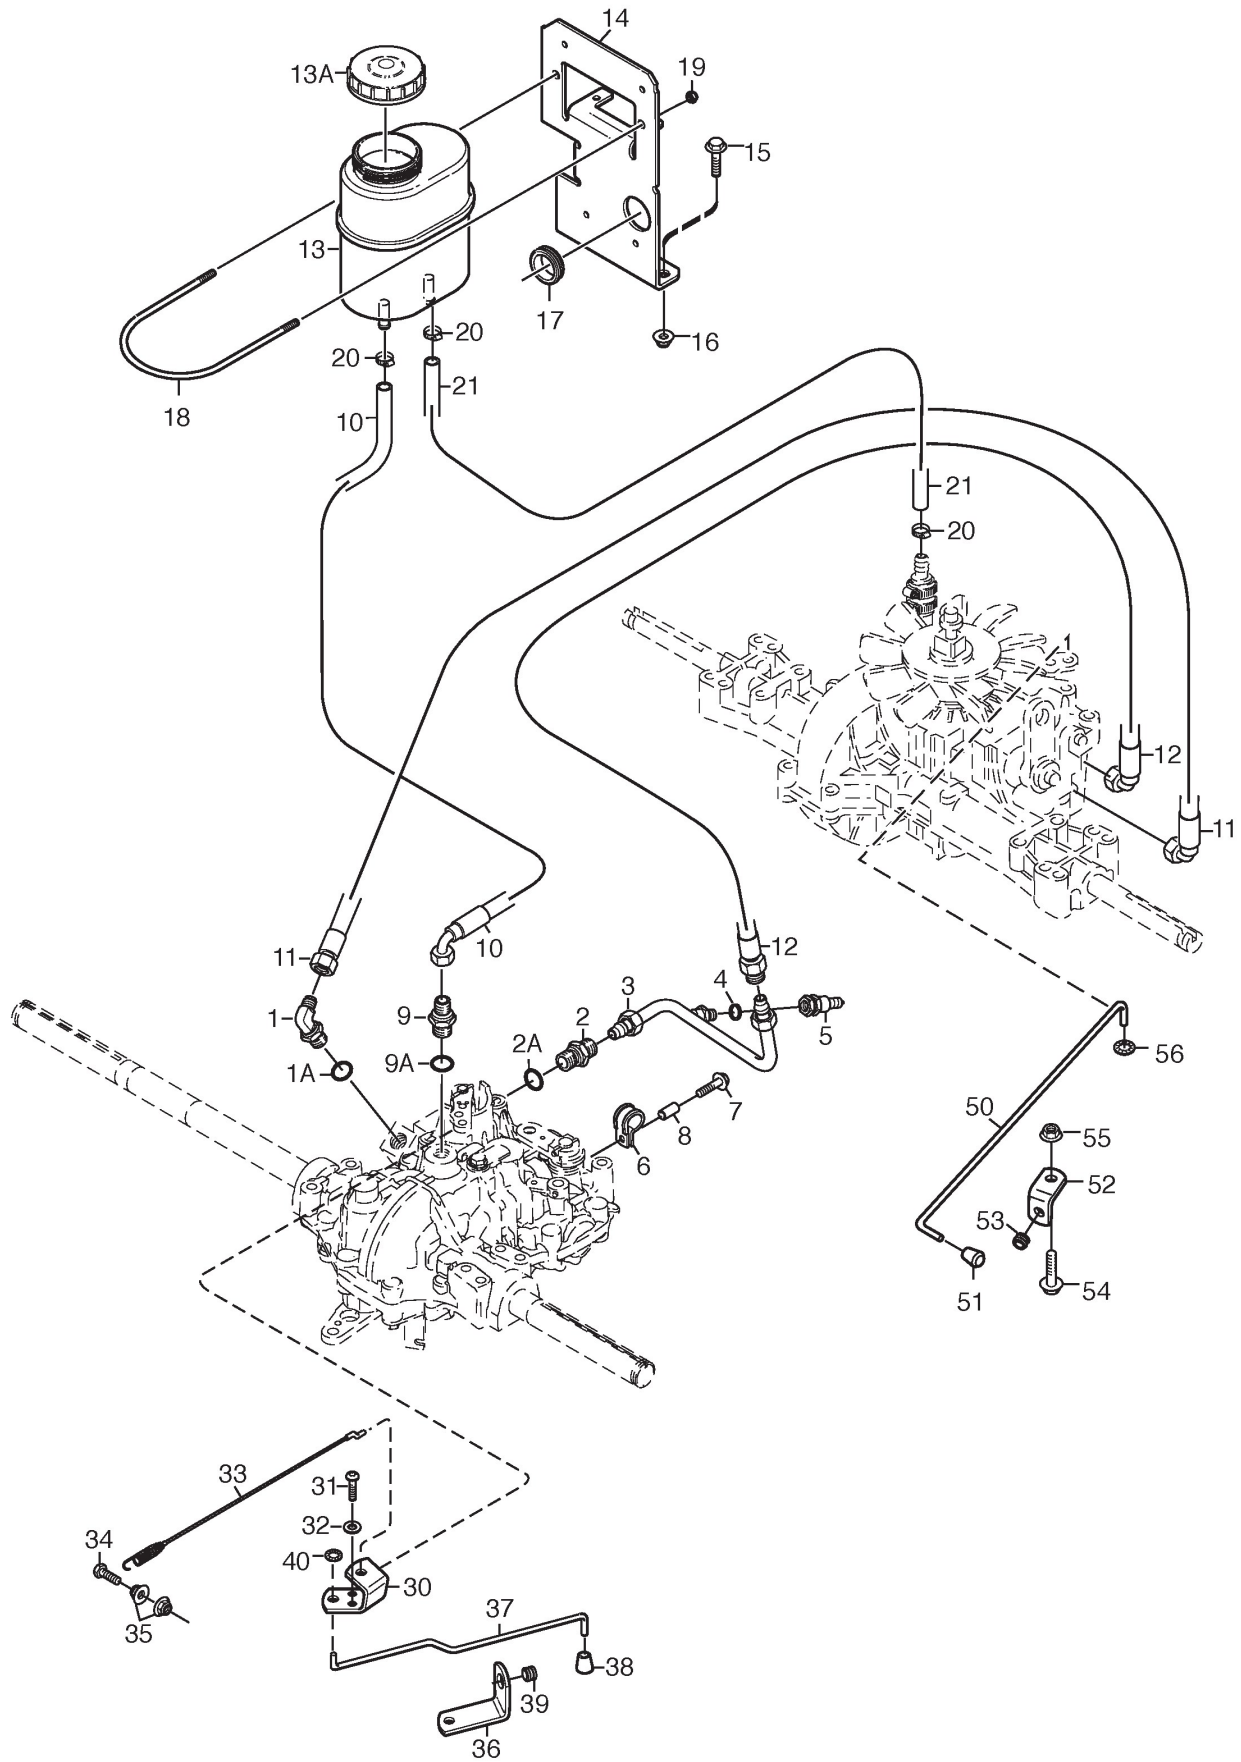 



Transmission

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-6044-01	Hydraulic Angle Coupling	3/4" x 9/16"		
1	1	9404-0029-01	O-ring			
2	1	1134-5875-01	Hydraulic Coupling	3/4"		
2	1	9404-0029-01	O-ring			
3	1	1134-6039-01	Hydraulic Pipe Assy			
4	1	1134-4948-01	Washer	1/4"		
5	1	1134-6042-01	Quick Coupling-Male			
6	1	9578-0028-01	Tube Clamp			
7	1	9959-0825-16	Screw			
8	1	1134-1565-09	Spacer			
9	1	1134-5809-01	Hydraulic Coupling	3/4" x 9/16"		
9	1	9404-0029-01	O-ring			
10	1	1134-5758-04	Hydraulic Tube			
11	1	1134-6048-01	Hydraulic Hose			
12	1	1134-6043-01	Hydraulic Hose			
13	1	1134-5965-01	Cap-Hydraulic Oil Tank			
13	1	1134-6011-01	Hydraulic Oil Tank Assy			
14	1	1134-5941-01	Tank Bracket			
15	2	9959-0820-16	Screw			
16	2	9739-0831-22	Nut			
17	1	1134-3203-01	Grommet			
18	1	1134-5943-01	Tank Loop			
19	2	9747-0631-02	Lock Nut			
20	3	9578-0023-04	Hose Clamp			
21	1	1134-2779-02	Tube	L = 260 mm		
30	1	1134-6162-01	Bracket			
31	2	9939-0612-16	Screw			
32	2	9699-0025-02	Washer			
33	1	1134-6163-01	Wire			
34	1	9997-0835-12	Screw			
35	2	9739-0831-22	Nut			
36	1	1134-6084-01	Control Bracket			
37	1	1134-6083-01	Control Rod			
38	1	1134-4014-01	Knob			
39	1	1134-2790-01	Cable Protection			
40	1	9675-0009-02	Starlock			
50	1	1134-4015-01	Pull Rod			
51	1	1134-4014-01	Knob			
52	1	1134-4713-01	Angle Bracket			
53	1	1134-2790-01	Cable Protection			
54	1	9959-0820-16	Screw			
55	1	9739-0831-22	Nut			
56	1	9675-0009-02	Starlock			

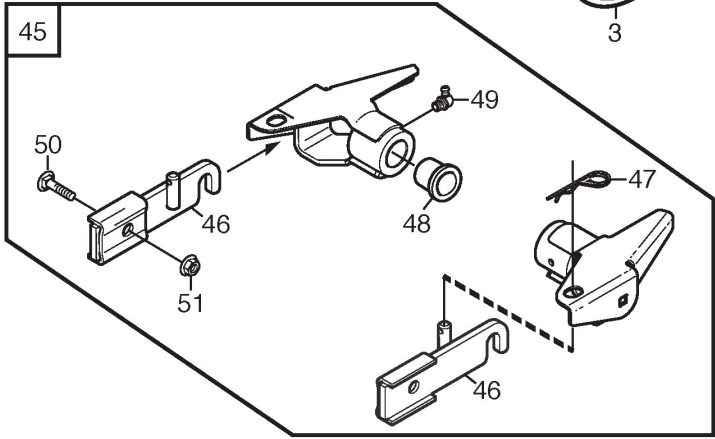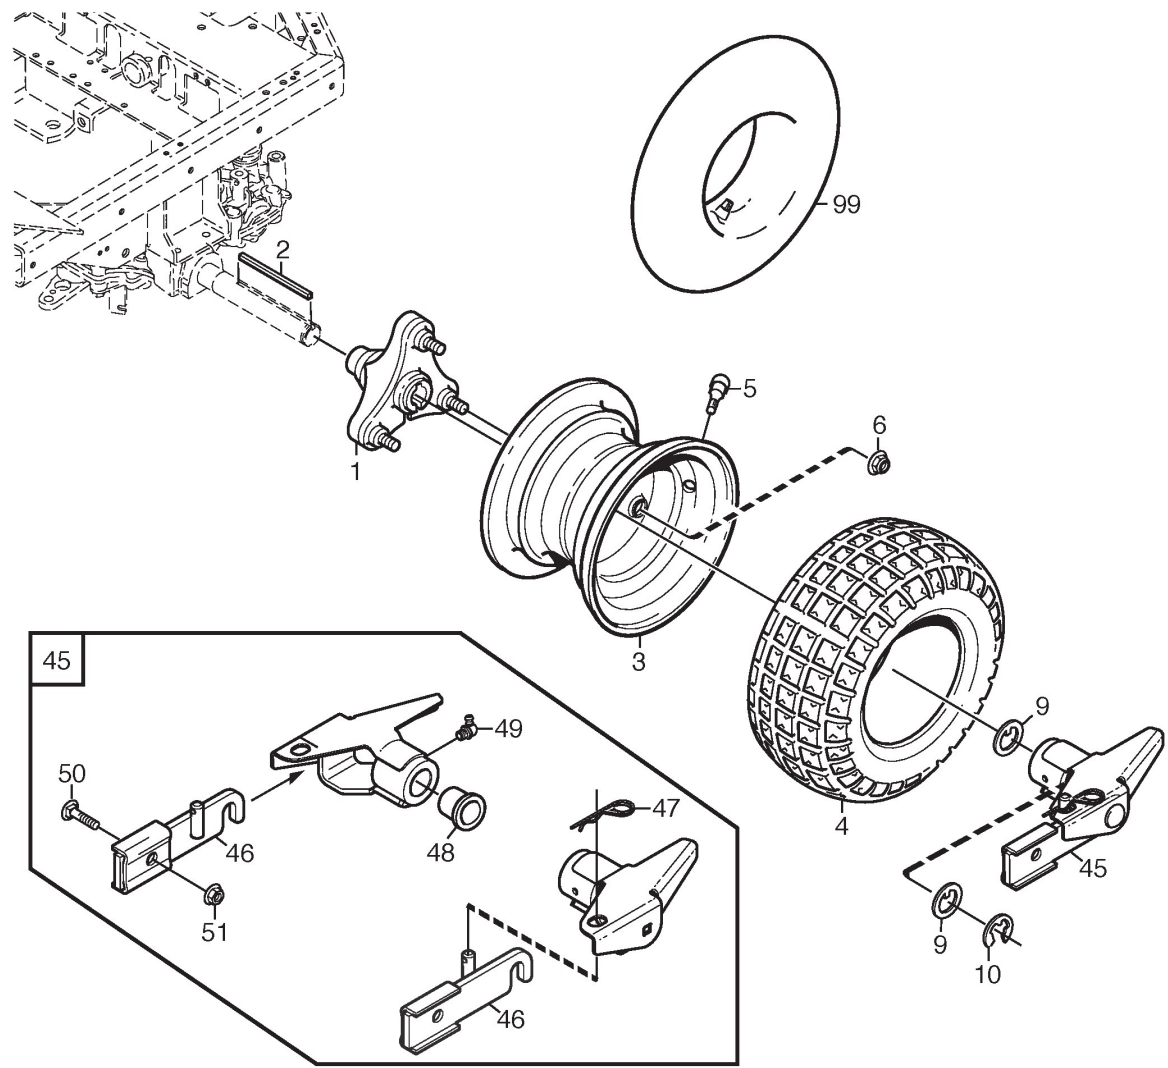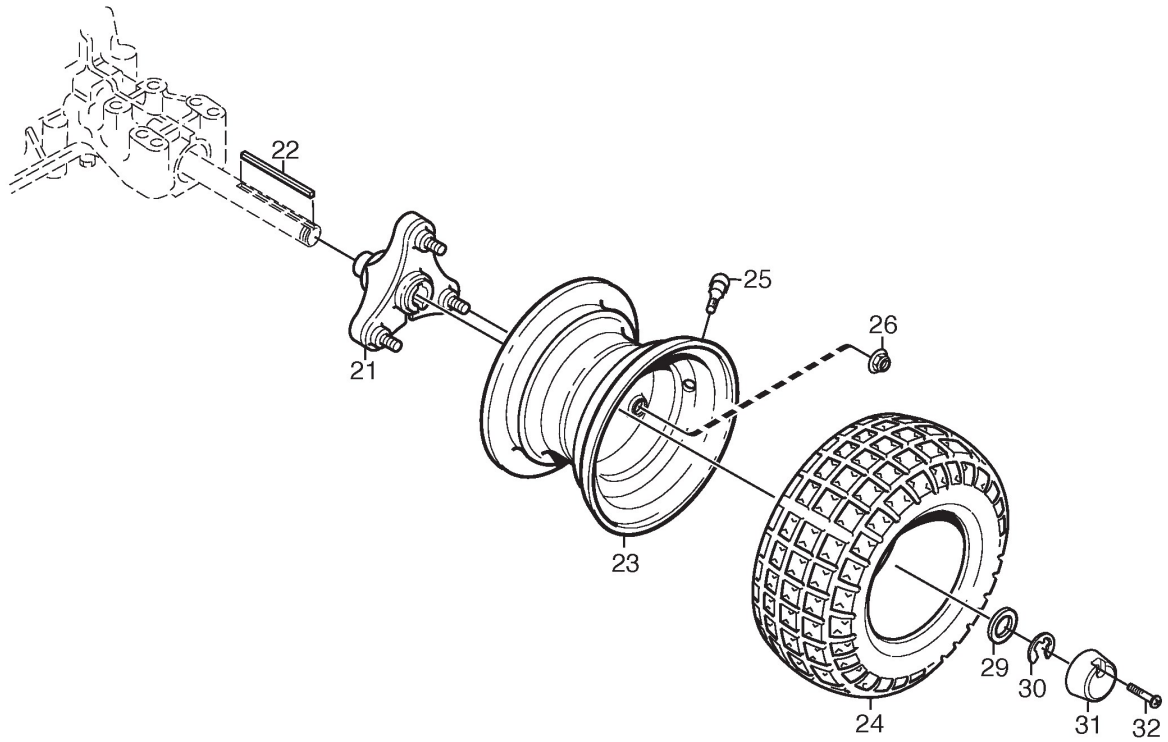   


Wheels

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	2	1134-4844-03	Wheel Hub Assy			
2	2	1134-3383-02	Key			
3	2	1134-4558-01	Rim			
4	2	9545-0116-00	Tyre	16 x 7.50 - 8		
5	2	9545-0500-00	Valve Assy.			
6	6	9731-1031-22	Nut			
9	4	1134-5797-01	Washer			
10	2	9653-0002-04	Lock Ring			
21	2	1134-4844-02	Wheel Hub Assy			
22	2	1134-2471-01	Key			
23	2	1134-4558-01	Rim			
24	2	9545-0116-00	Tyre	16 x 7.50 - 8		
25	2	9545-0500-00	Valve Assy.			
26	6	9731-1031-22	Nut			
29	2	9699-0042-02	Washer			
30	2	9653-0001-04	Lock Ring			
31	2	1134-4796-01	Hub Cap			
32	2	9947-0540-19	Screw			
45	1	13-0993-61	RAC-fæste til Park 4WD	Inkl. pos 9,10,46-51		
46	1	1134-7465-01	Attachment Kit	Inkl. pos 50-51		
47	2	9598-2001-02	Spring Pin			
48	4	1134-5686-01	Bearing			
49	2	9501-0502-00	Grease Joint			
50	2	9898-1035-16	Screw			
51	2	9739-1031-22	Nut			

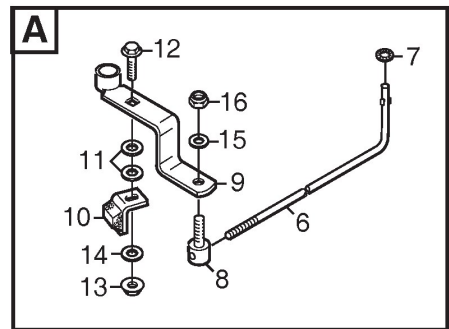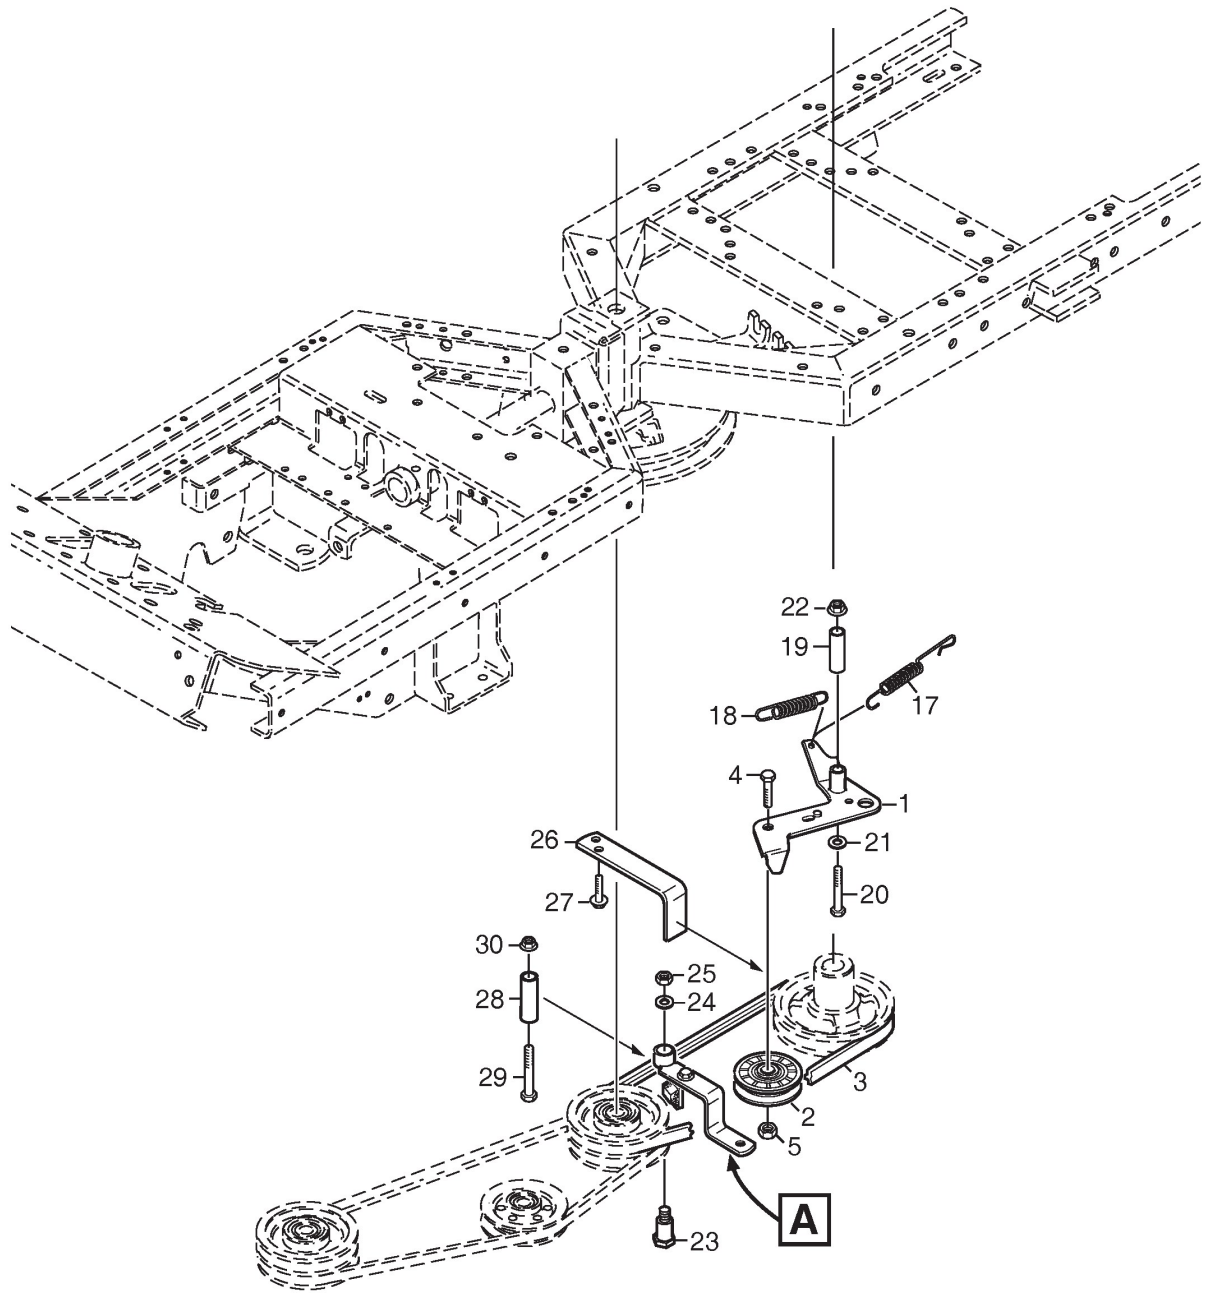  

Power take-off

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-2018-02	Tension Arm			
2	1	1134-9027-01	Tension Roller (Black)	Black		
2	1	1134-9027-02	Tension Roller (Grey)	Grey		
3	1	1134-9071-01	Belt	= 9585-0129-01		
4	1	9997-1030-16	Screw			
5	1	9799-1031-02	Nut			
6	1	1134-4162-01	Brake Rod			
7	1	9675-0008-02	Starlock			
8	1	1134-4170-01	Nippel			
9	1	1134-4111-01	Brake Arm			
10	1	1134-4164-03	Brake Pad			
11	2	9699-0035-02	Washer			
12	1	9897-0825-16	Screw			
13	1	9747-0831-02	Lock Nut			
14	1	9699-0090-02	Washer			
15	1	9699-0025-02	Washer			
16	1	9747-0631-02	Lock Nut			
17	1	4231-0013-00	Spring			
18	1	1134-4231-01	Brake Spring			
19	1	1134-1565-10	Spacer			
20	1	9997-0860-16	Screw	M6S M8x60		
20	1	9997-0865-12	Screw	M6S M8X65		
21	1	9699-0056-02	Washer			
22	1	9739-0831-22	Nut			
23	1	1134-4163-01	Shoulder Bolt			
24	1	9699-0035-02	Washer			
25	1	9739-1031-22	Nut			
26	1	1134-3958-01	Belt Guide			
27	2	9893-0616-16	Screw			
28	1	1134-0041-03	Bushing			
29	1	9997-1070-12	Screw			
30	1	9739-1031-22	Nut			

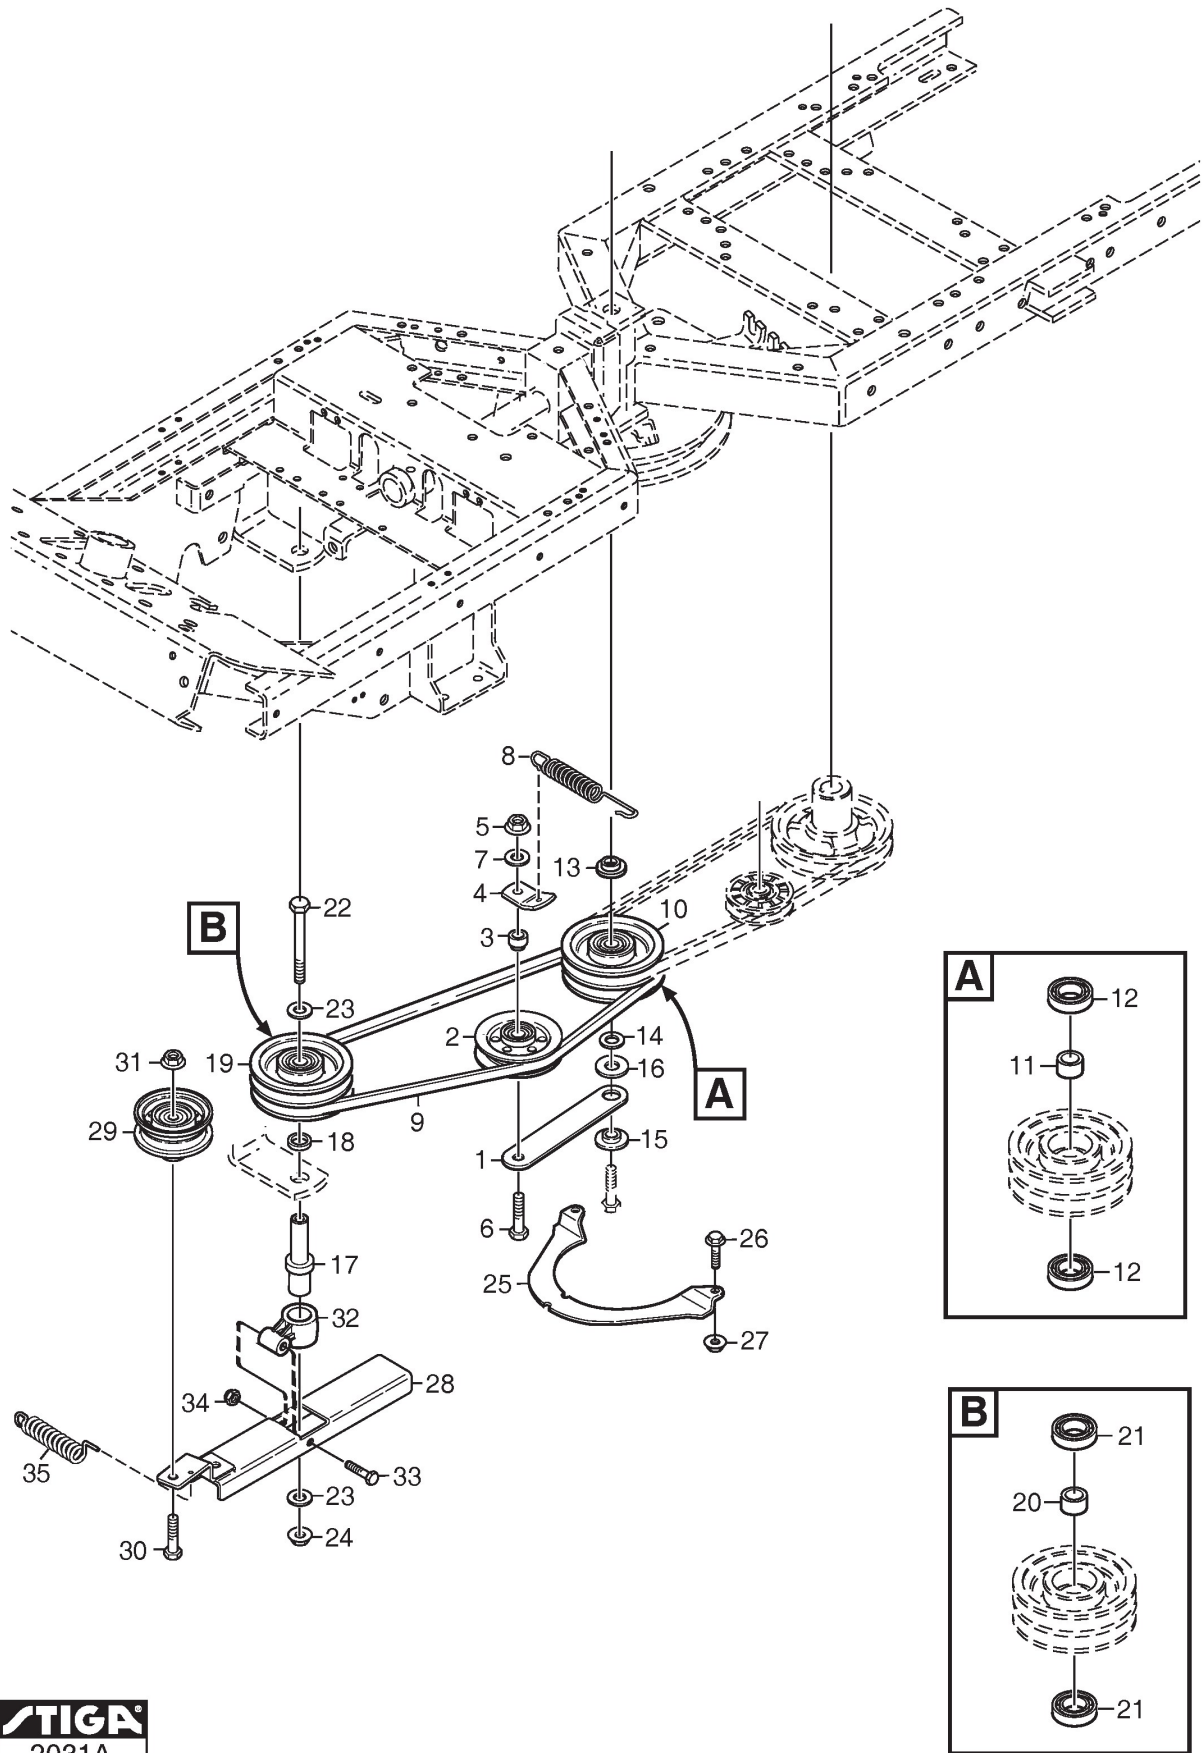 

Power take-off

Ref.nr.	Antal	Komponentkode	Beskrivelse	Noter	From	Op til
1	1	1134-1730-01	Tensioning Wheel Arm			
2	1	1134-3663-01	Tension Wheel			
3	1	1134-1888-05	Spacer			
4	1	1134-1893-01	Spring			
5	1	9739-1031-22	Nut			
6	1	9997-1060-12	Screw			
7	1	9699-0035-02	Washer			
8	1	1134-5713-01	Spring			
9	1	1134-9098-01	Drive Belt	Contains belt 9585-0148-01		
10	1	1134-1769-03	Centre Belt Pulley			
11	1	1134-0051-09	Spacer			
12	2	9549-0019-00	Ball Bearing			
13	1	1134-5548-01	Spacer			
14	1	9699-0035-02	Washer			
15	1	1134-0222-00	Washer			
16	1	9699-0109-02	Washer			
17	1	1134-5663-01	Shaft			
18	1	1134-0052-00	Spacer			
19	1	1134-1769-03	Centre Belt Pulley			
20	1	1134-0051-09	Spacer			
21	2	9549-0019-00	Ball Bearing			
22	1	9997-1011-06	Screw			
23	2	9699-0030-02	Washer			
24	1	9739-1031-22	Nut			
25	1	1134-3654-01	Guard			
26	2	9959-0612-16	Screw			
27	2	9739-0631-22	Nut			
28	1	1134-5660-01	Tension Arm Assy			
29	1	1134-5823-01	Tension Roller Assy			
30	1	9997-1050-16	Screw			
31	1	9739-1031-22	Nut			
32	1	1134-6314-01	Tension Arm Attachment			
33	1	9997-0645-12	Screw			
34	1	9747-0631-02	Lock Nut			
35	1	1134-5824-01	Spring			