


# Comfort T 1000 HD

Art. Nr. 119046

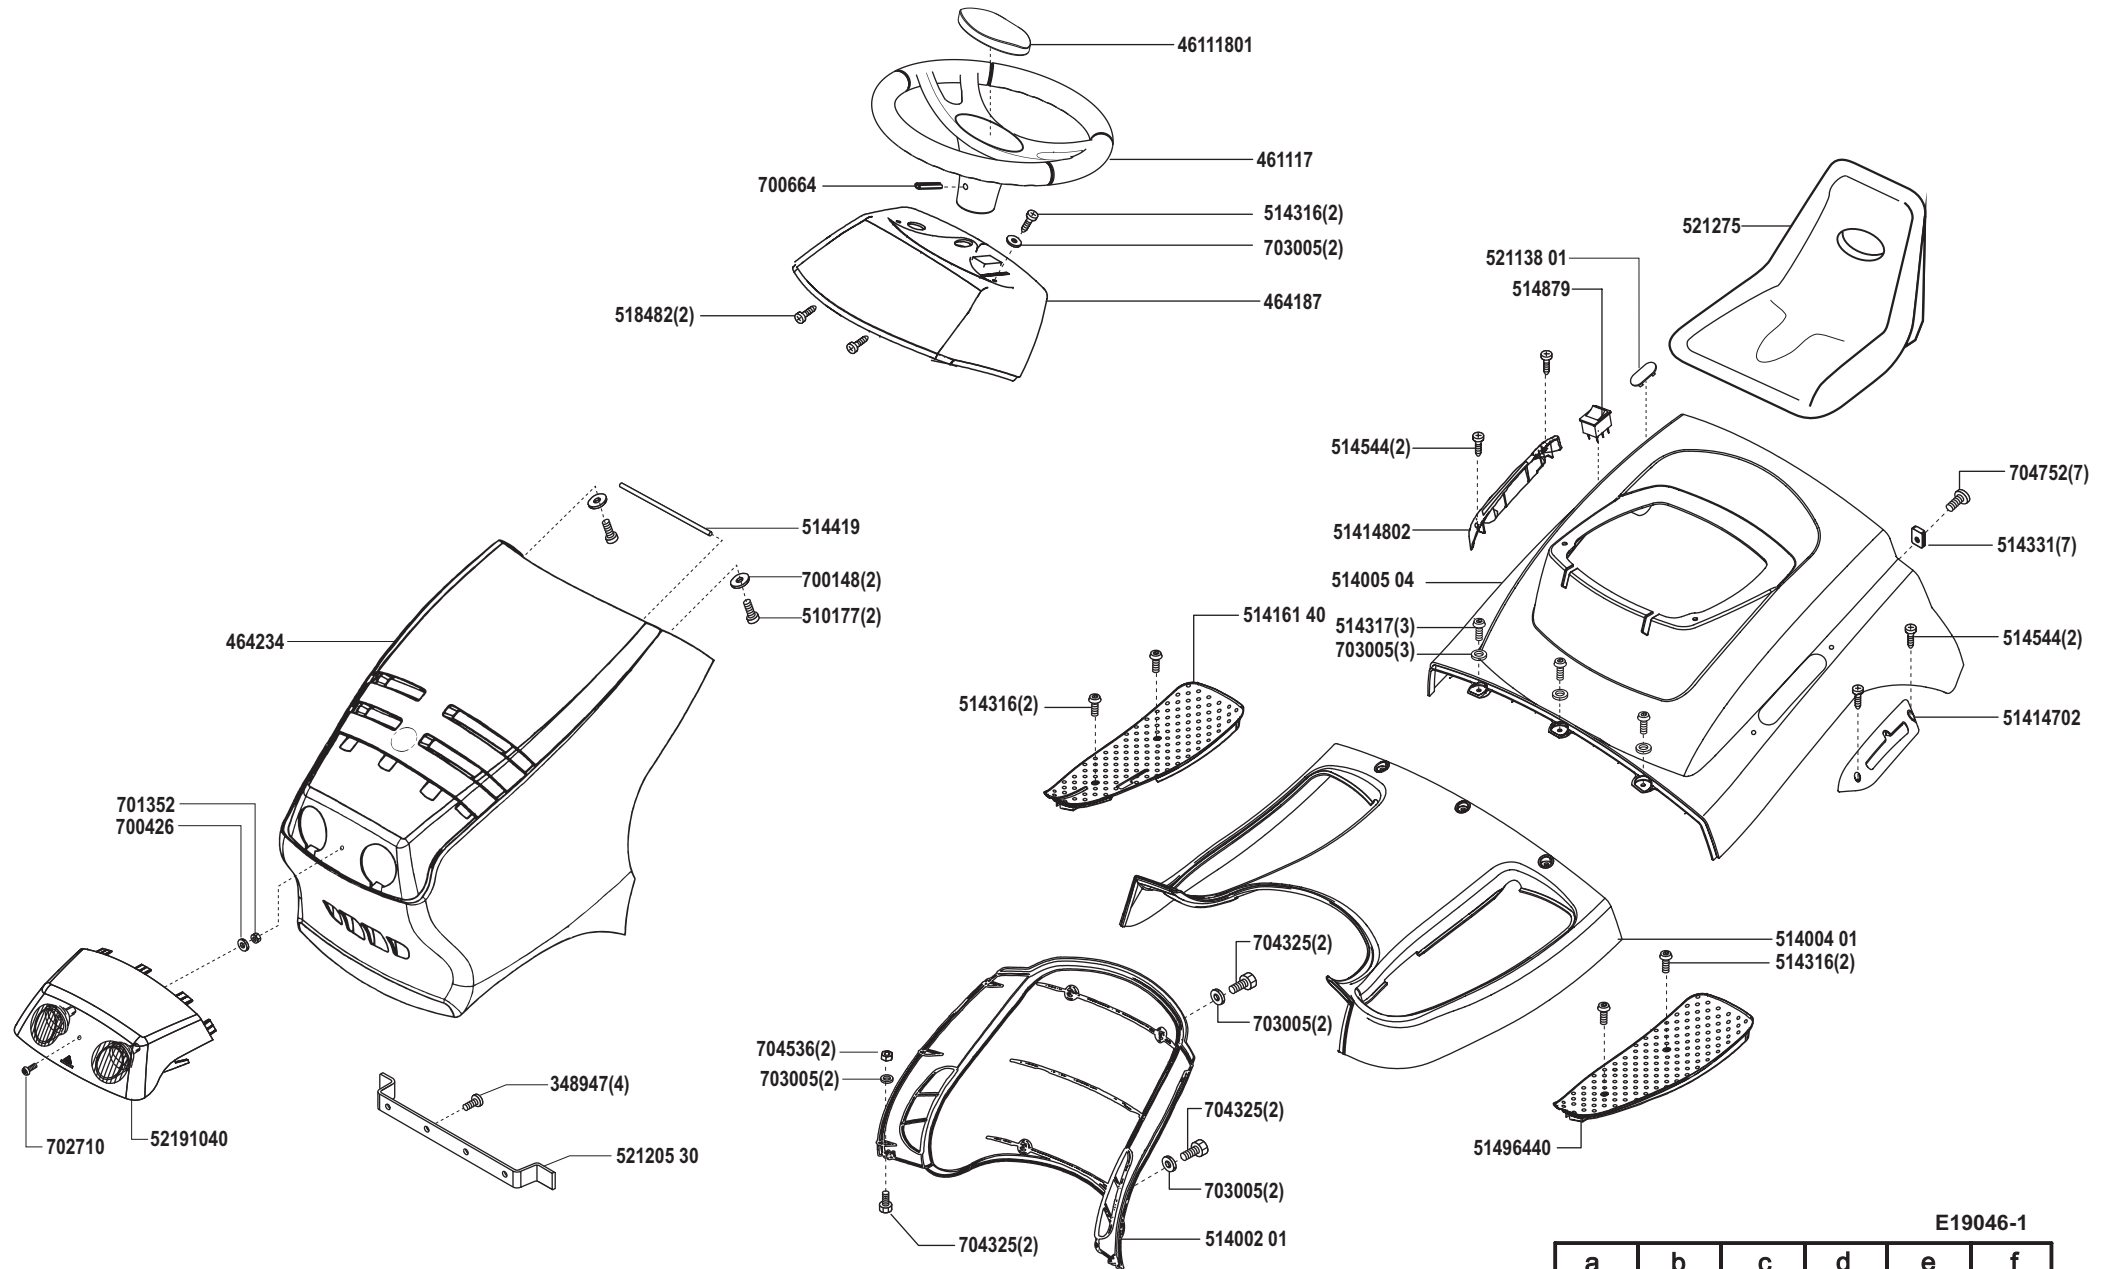


E19046-1

a	b	c	d	e	f
09/07					

# Comfort T 1000 HD

Art. Nr. 119046

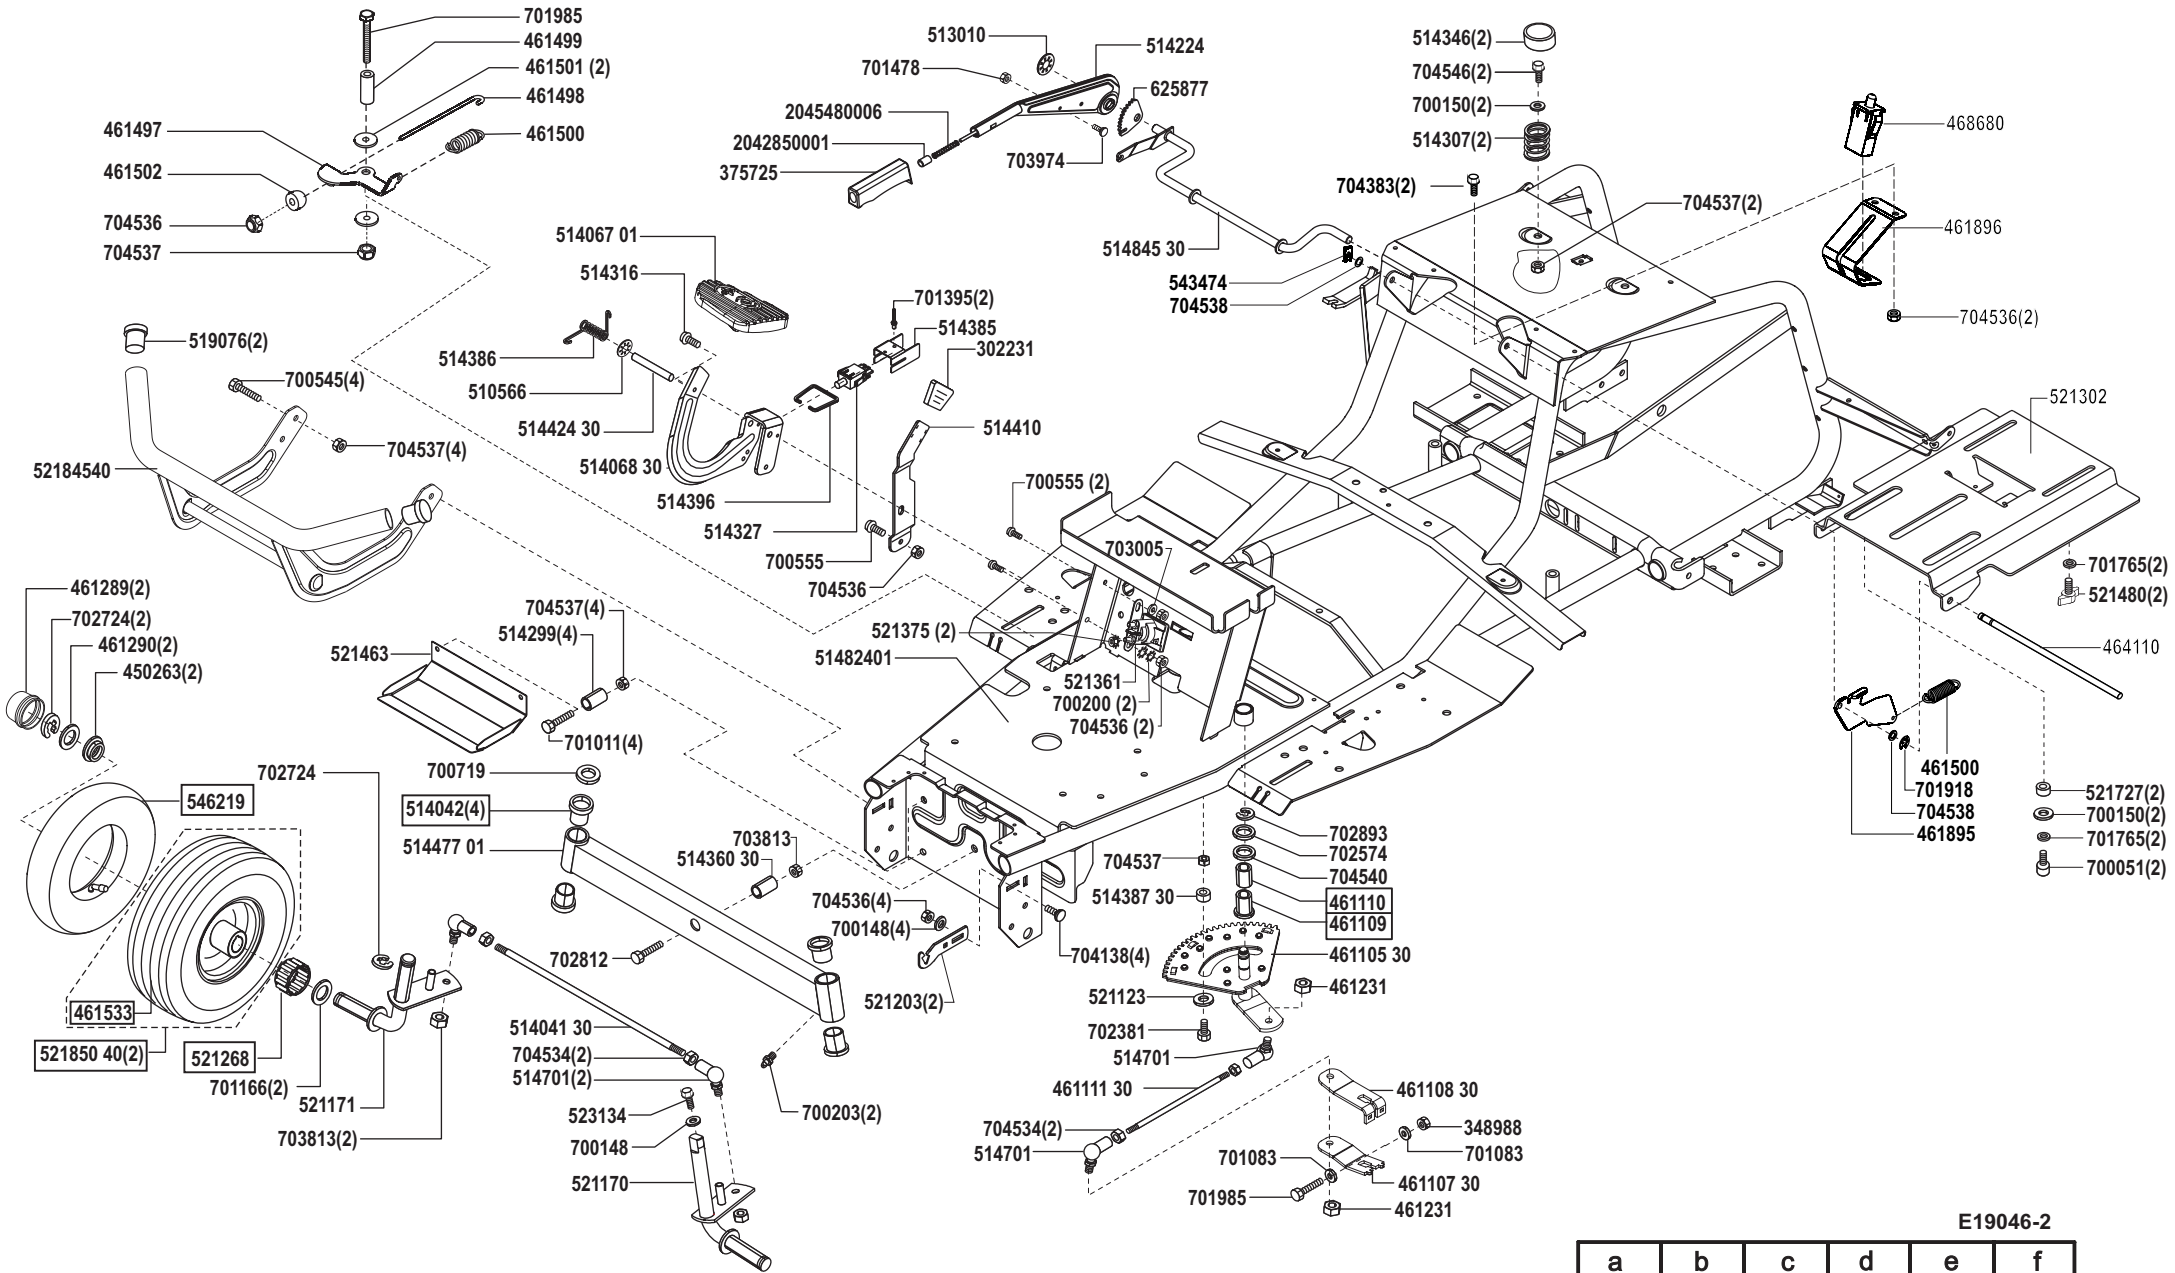


E19046-2

a	b	c	d	e	f
10/07					

# Comfort T 1000 HD

Art. Nr. 119046

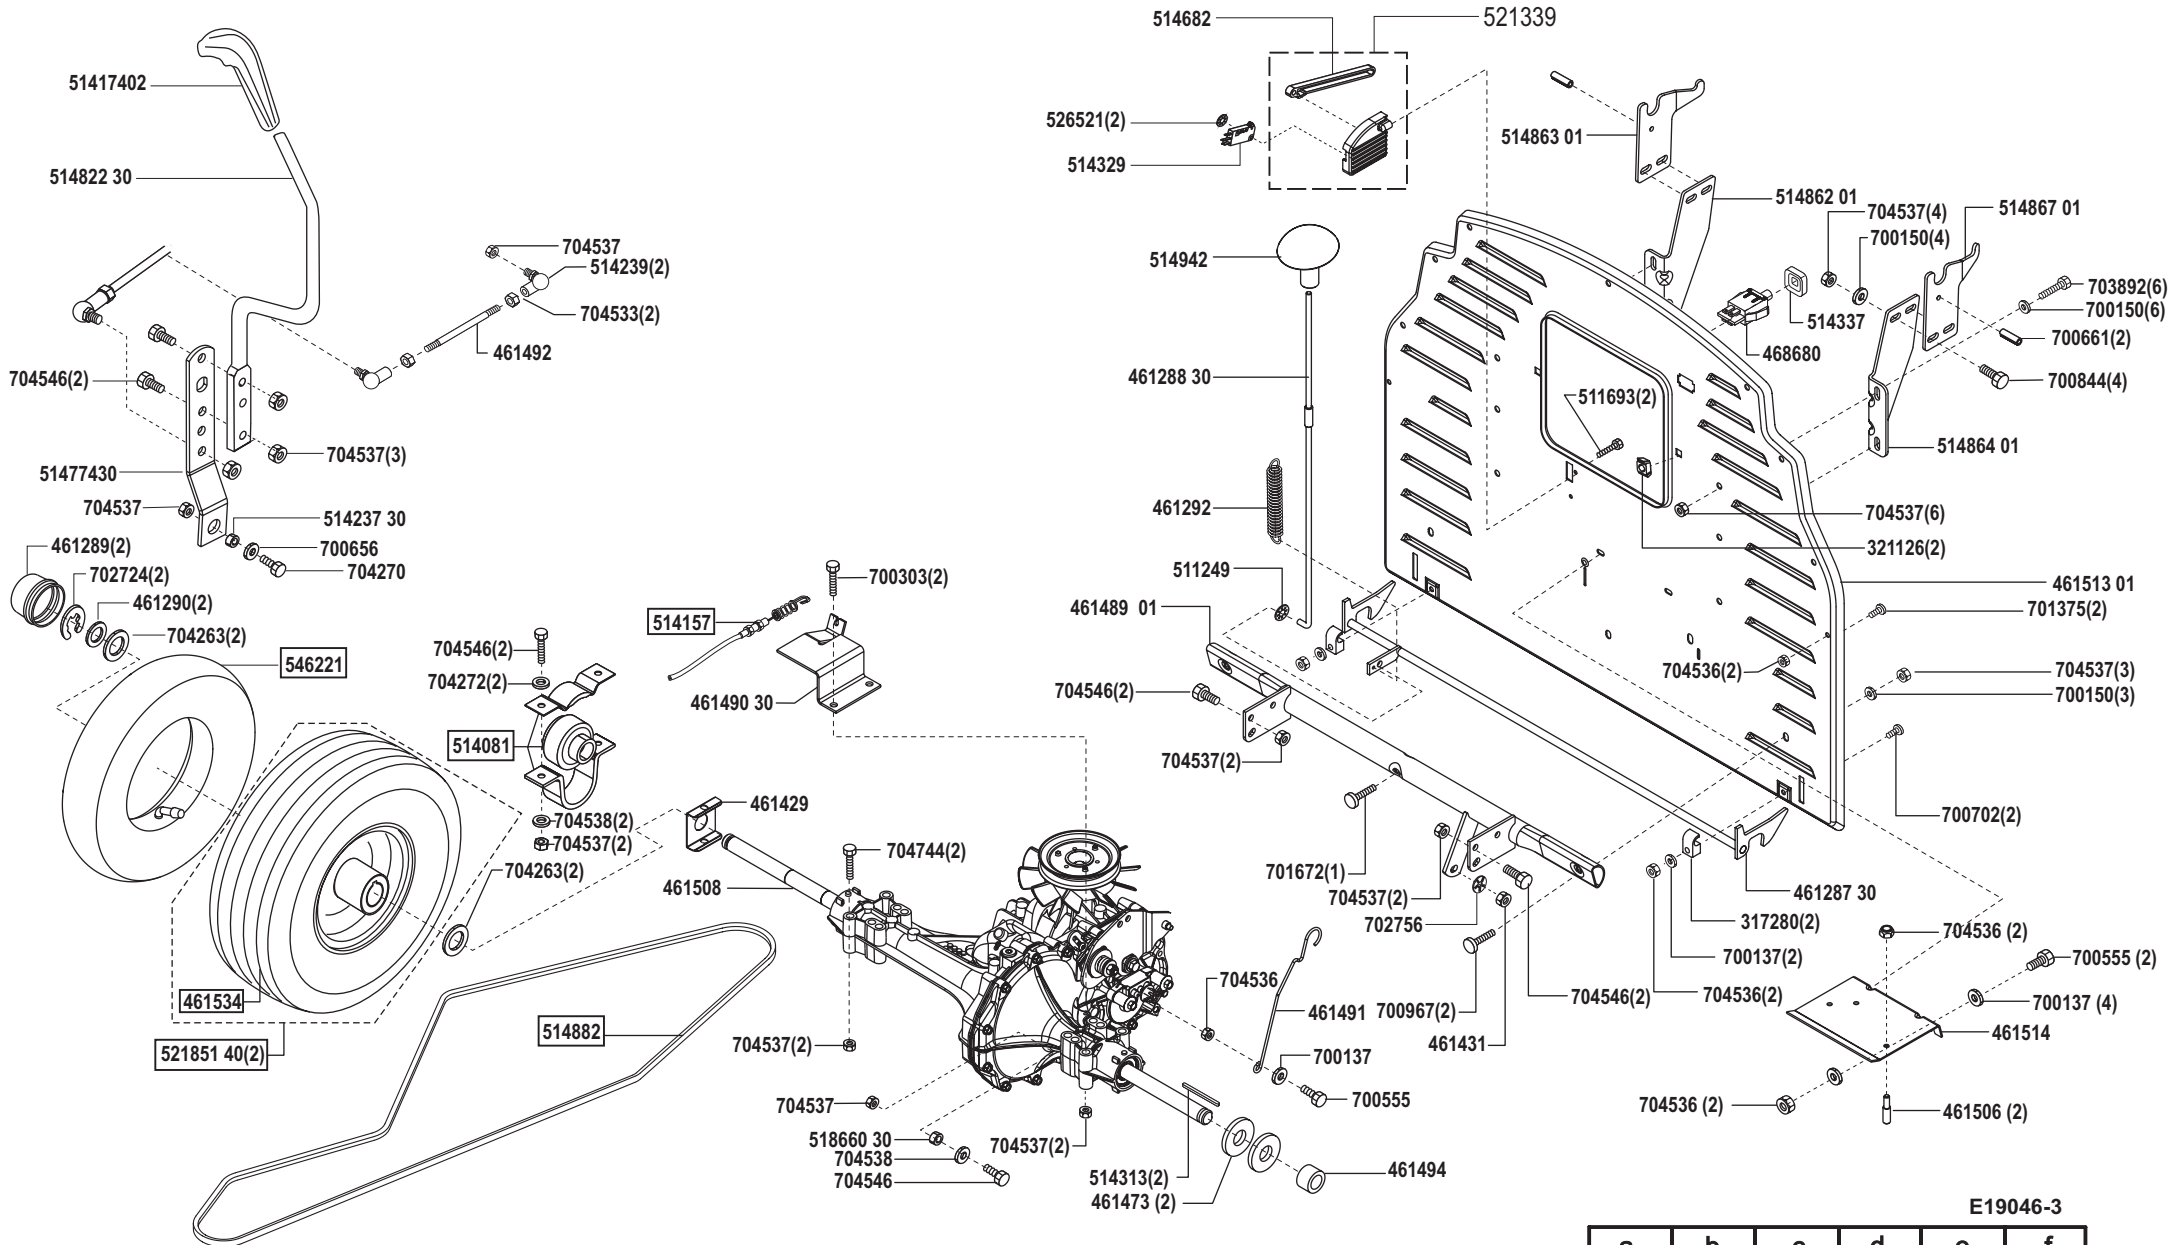


E19046-3

a	b	c	d	e	f
---	---	---	---	---	---

# Comfort T 1000 HD

Art. Nr. 119046

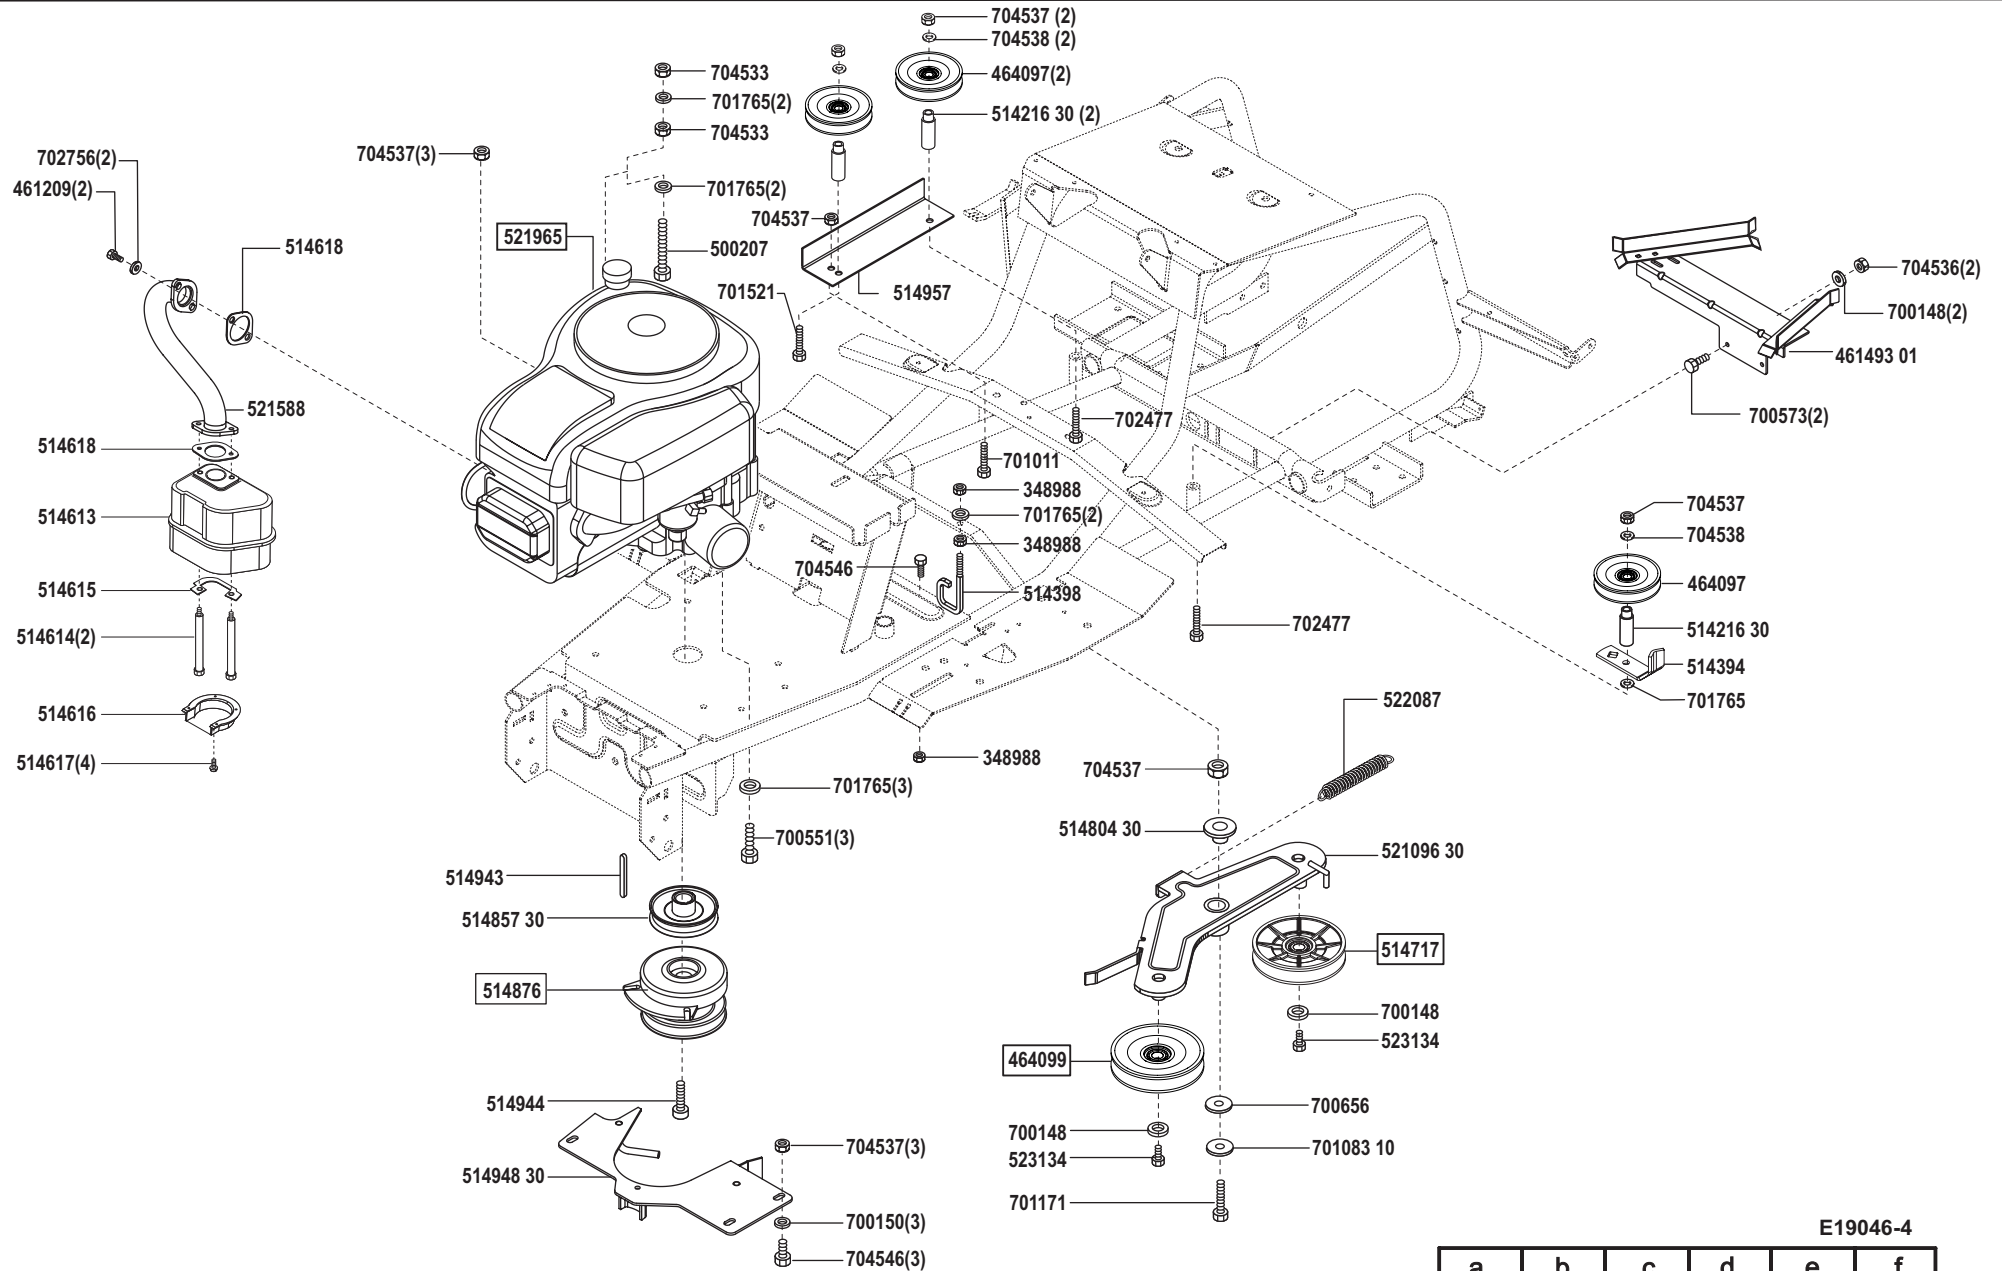


E19046-4

a	b	c	d	e	f
10/07					



# Comfort T 1000 HD

Art. Nr. 119046


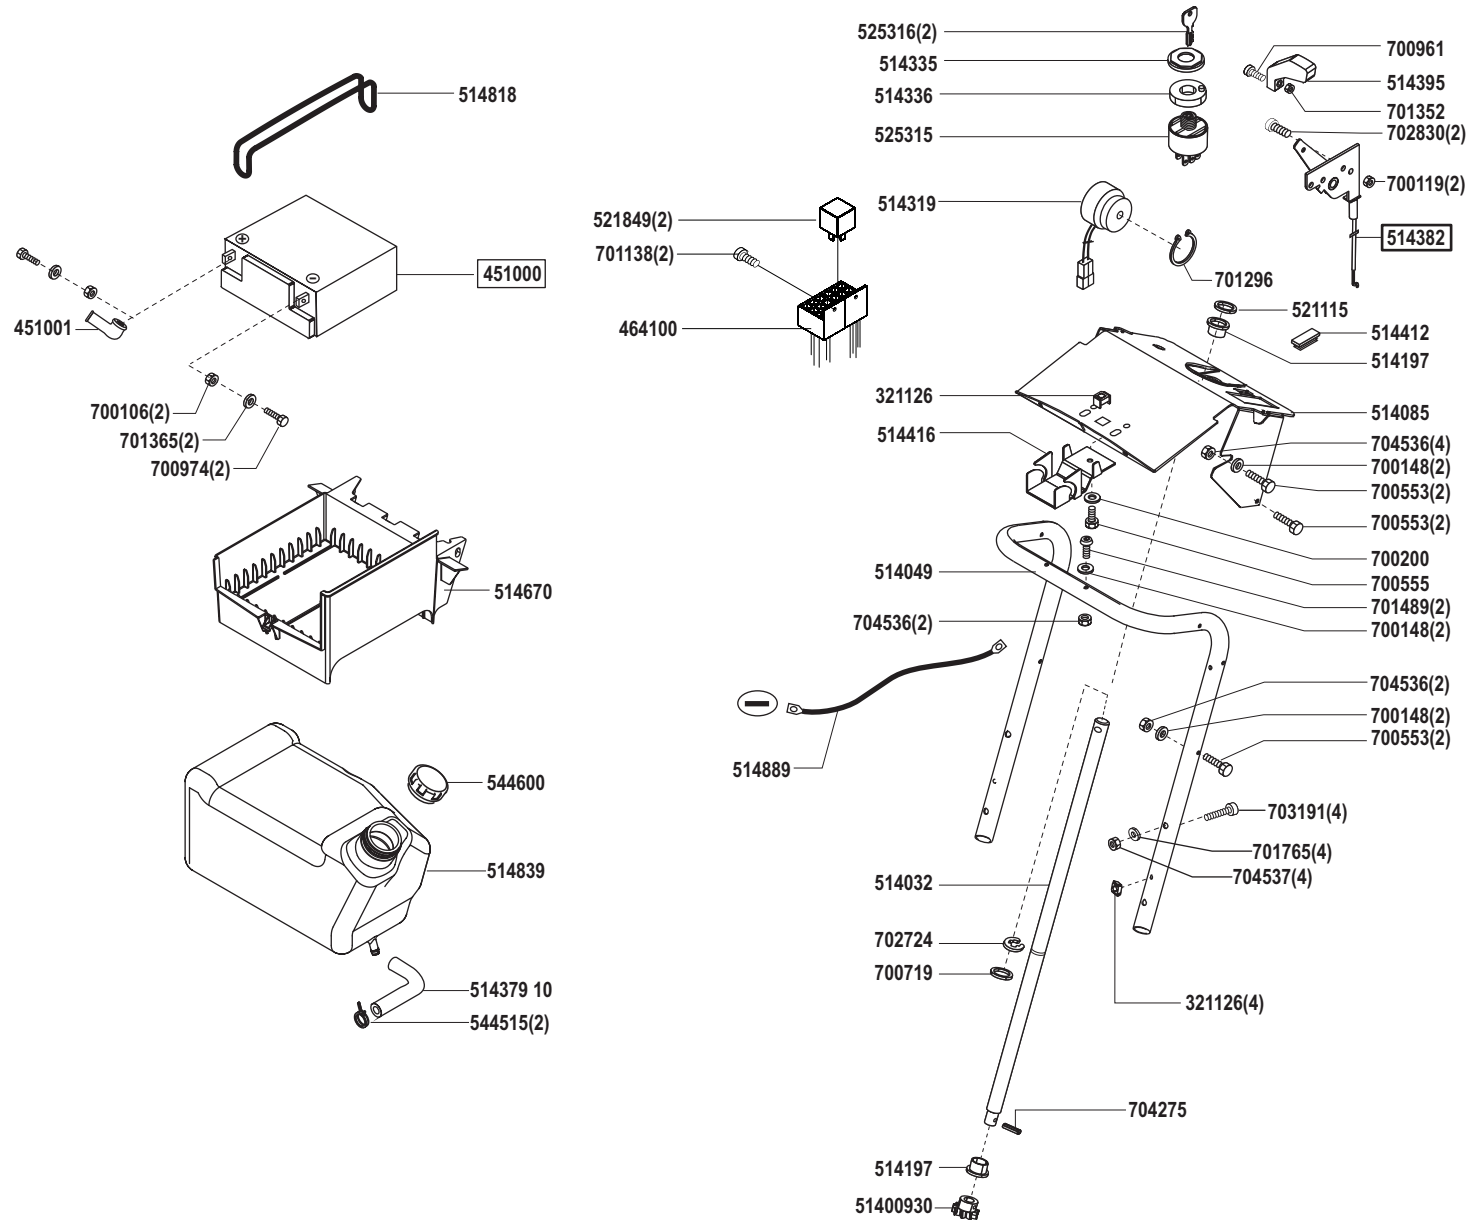


E19046-6

a	b	c	d	e	f
10/07					

# Comfort T 1000 HD

Art. Nr. 119046

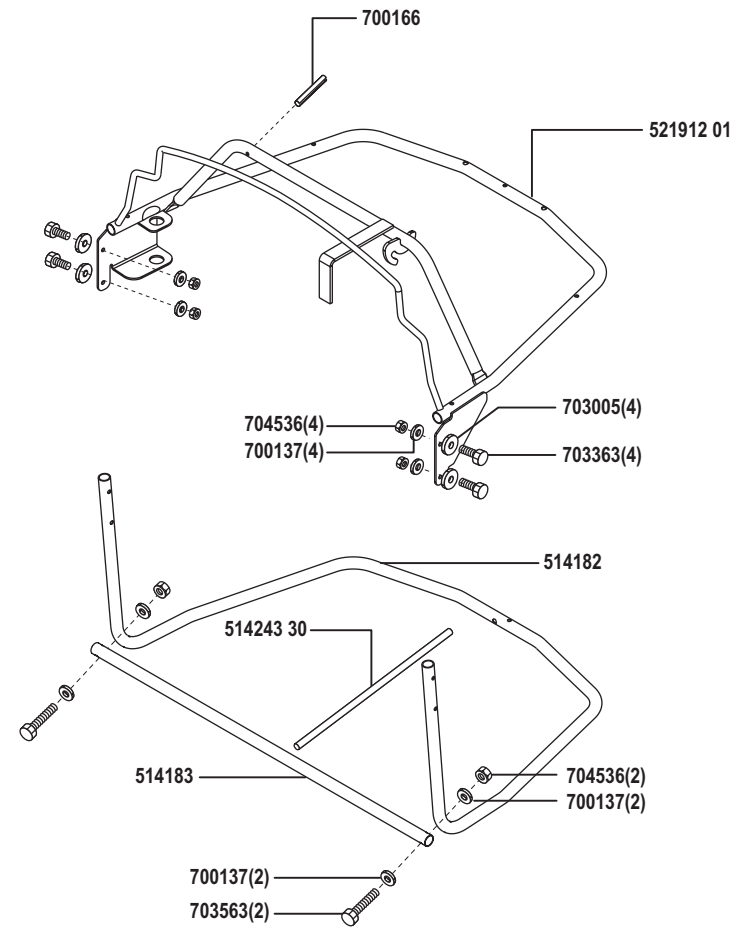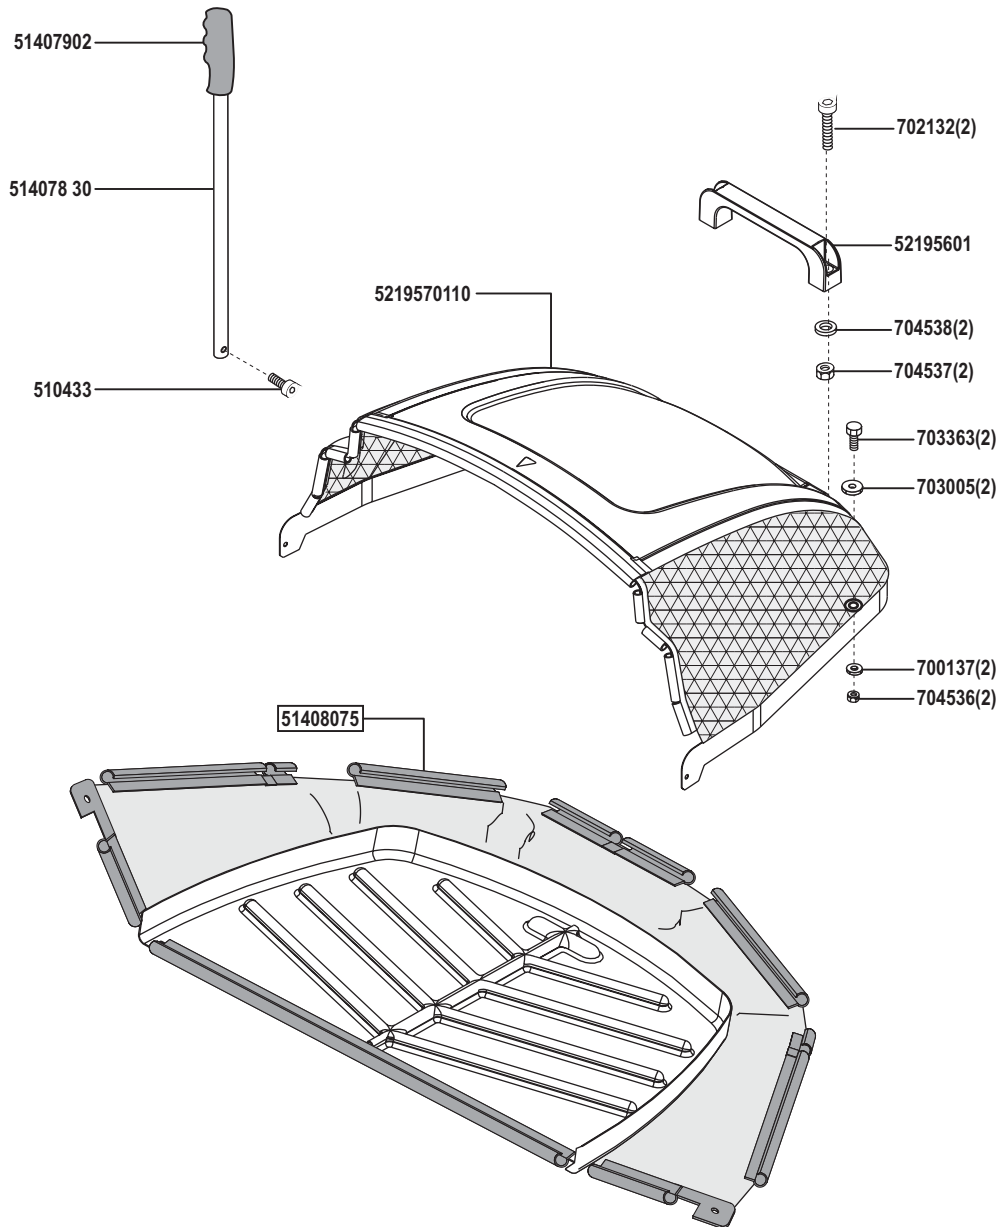


E19046-7


a	b	c	d	e	f
---	---	---	---	---	---

# Comfort T 1000 HD

Art. Nr. 119046

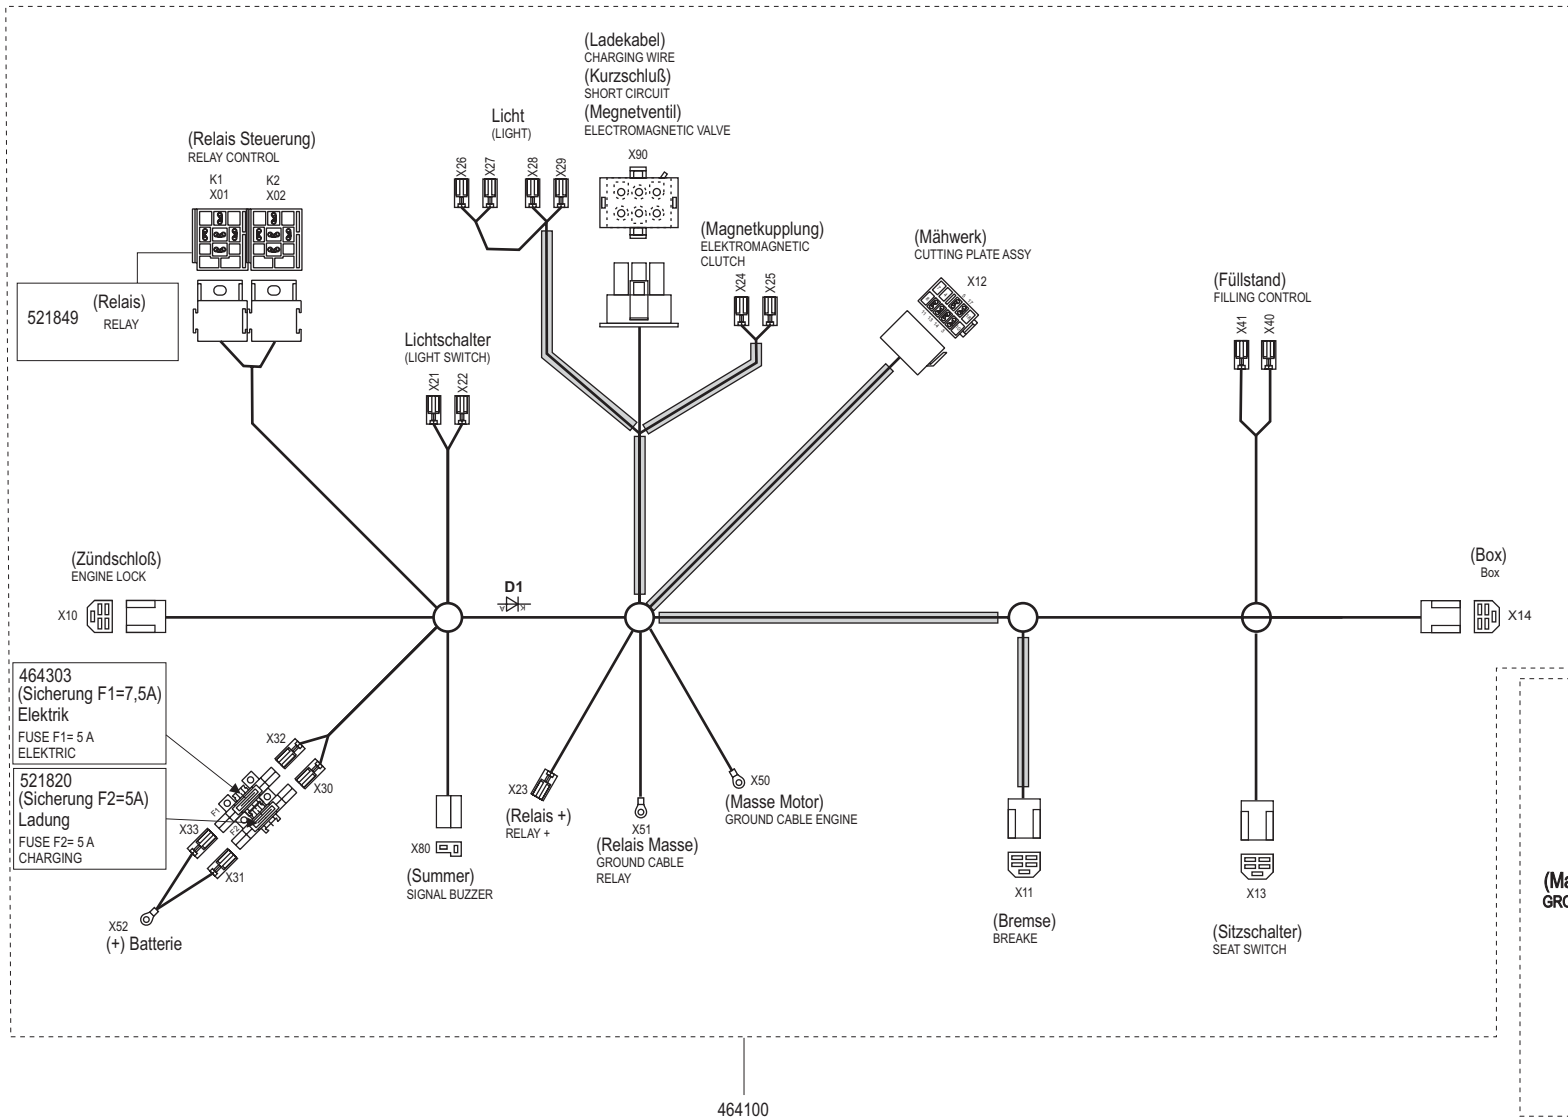

(Sicherung) FUSE		F1 F2
(Summer) SIGNAL BUZZER X80		Leitungsschlüssel
(Ladekabel) CHARGING WIRE (Kurzschluß) SHORT CIRCUIT (Magnetventil) ELECTROMAGNETIC VALVE X90		Leitungsschlüssel
(Bremsen) BREAKE X11		Leitungsschlüssel
(Sitzschalter) SEAT SWITCH X13		Leitungsschlüssel
(Box) Box X14		Leitungsschlüssel
(Zündschloß) ENGINE LOCK X10		Leitungsschlüssel
D1		
(Mähwerk) CUTTING PLATE ASSY X12		Leitungsschlüssel
(Relais Steuerung) RELAY CONTROL K1 X01 K2 X02		

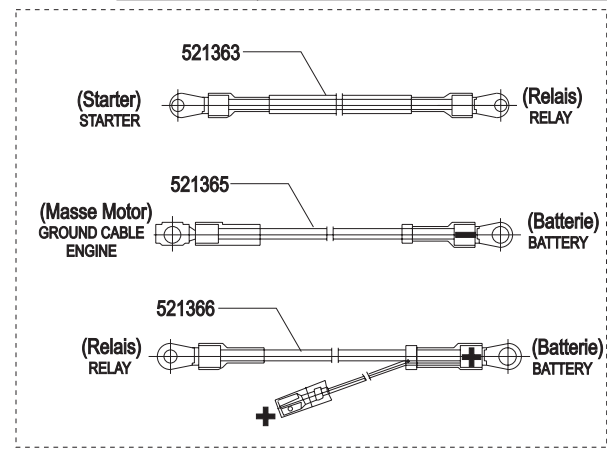


E19046-8

a	b	c	d	e	f
10/07					



# Comfort T 1000 HD

Art. Nr. 119046

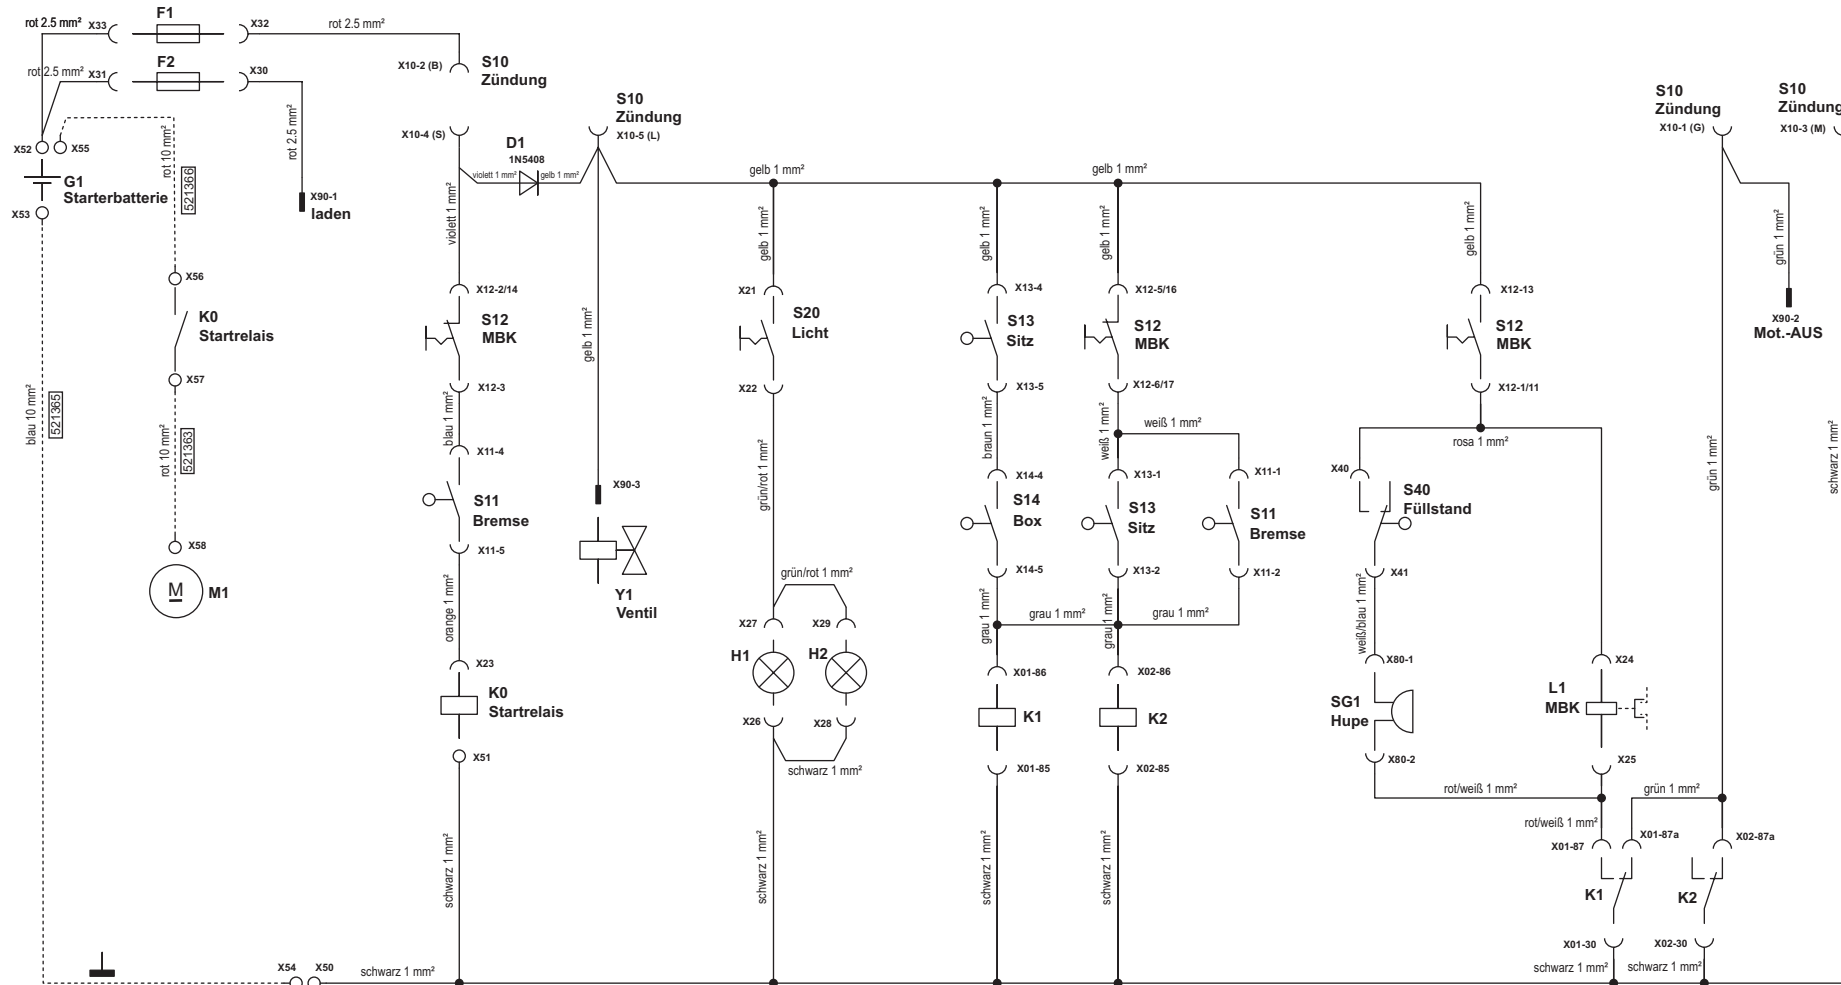

E19046-9

a	b	c	d	e	f
10/07					